



Chelsio Unified Wire for Windows

Installation and User's Guide



This document and related products are distributed under licenses restricting their use, copying, distribution, and reverse-engineering.

No part of this document may be reproduced in any form or by any means without prior written permission by Chelsio Communications.

All third-party trademarks are copyright of their respective owners.

THIS DOCUMENTATION IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

THE USE OF THE SOFTWARE AND ANY ASSOCIATED MATERIALS (COLLECTIVELY THE "SOFTWARE") IS SUBJECT TO THE SOFTWARE LICENSE TERMS OF CHELSIO COMMUNICATIONS, INC.



Chelsio Communications (Headquarters)

209 North Fair Oaks Avenue,
Sunnyvale, CA 94085
U.S.A

www.chelsio.com

Tel: 408.962.3600
Fax: 408.962.3661

Chelsio (India) Private Limited

Subramanya Arcade, Floor 3, Tower B
No. 12, Bannerghatta Road,
Bangalore-560029
Karnataka,
India

Tel: +1-91-80-4039-6800

Chelsio KK (Japan)

Yamato Building 8F,
5-27-3 Sendagaya,
Shibuya-ku,
Tokyo 151-0051,
Japan

Sales

For all sales inquiries please send email to sales@chelsio.com

Support

For all support related questions please send email to support@chelsio.com

Copyright © 2017. Chelsio Communications. All Rights Reserved.

Chelsio® is a registered trademark of Chelsio Communications.

All other marks and names mentioned herein may be trademarks of their respective companies.

Document History

Version	Revision Date
1.3.6	11/19/2015
1.3.7	12/11/2015
1.3.8	01/28/2016
1.3.9	03/04/2016
1.4.0	04/21/2016
1.4.1	05/13/2016
1.4.2	06/27/2016
1.4.3	07/25/2016
1.4.4	07/29/2016
1.4.5	08/16/2016
1.4.6	08/26/2016
1.4.7	10/14/2016
1.4.8	11/11/2016
1.4.9	11/22/2016
1.5.0	12/05/2016
1.5.1	12/30/2016
1.5.2	01/05/2017
1.5.3	02/07/2017
1.5.4	02/24/2017
1.5.5	03/10/2017
1.5.6	03/31/2017
1.5.7	04/11/2017
1.5.8	05/09/2017

TABLE OF CONTENTS

I.	CHELSIO UNIFIED WIRE	7
1.	Introduction	8
1.1.	Features	8
1.2.	Hardware Requirements	9
1.3.	Software Requirements	9
1.4.	Package Contents	9
2.	Hardware Installation	10
3.	Software/Driver Installation	11
3.1.	Prerequisites	11
3.2.	Unified Wire Installer	12
3.3.	Nano Server Installer	20
3.4.	Zip Package	21
4.	Firmware Update	26
5.	Software/Driver Update	27
5.1.	Windows Update	27
5.2.	Unified Wire Installer	33
5.3.	Zip Package	34
6.	Configuring Chelsio Network Interfaces	35
6.1.	Configuring 40G Adapters	35
6.2.	Assigning IP address	38
7.	Mass Deployment (Installer)	40
7.1.	Pre-deployment Configuration	40
7.2.	Flashing Option ROM	42
7.3.	Erasing Option ROM	50
7.4.	Configuring using UM CLI	51
8.	cxgbtool/cxgbnano help	57
9.	Software/Driver Uninstallation	123
9.1.	Installer	123
9.2.	Zip Package	125
II.	NDIS FUNCTION	127
1.	Introduction	128
1.1.	Hardware Requirements	128
1.2.	Software Requirements	128
2.	Software/Driver Configuration and Fine-tuning	129
2.1.	Advanced Configuration	129
2.2.	NVGRE Offload	136
2.3.	VXLAN Task Offload	136
2.4.	PacketDirect	137
2.5.	VMMQ/vRSS	140

III. IWARP (ND)	141
1. Introduction	142
1.1. Hardware Requirements	142
1.2. Software Requirements	142
2. Software/Driver Configuration and Fine-tuning	143
2.1. Registering iWARP(ND) driver	143
IV. SMB DIRECT	144
1. Introduction	145
1.1. Hardware Requirements	145
1.2. Software Requirements	145
2. Software/Driver Configuration and Fine-tuning	146
2.1. Enabling SMB Direct	146
2.2. Verifying RDMA	146
2.3. RDMA/NVGRE concurrent (Mode 2)	147
2.1. Storage Replica	148
2.2. Troubleshooting	148
V. NDIS SR-IOV	150
1. Introduction	151
1.1. Hardware Requirements	151
1.2. Software Requirements	151
2. Software/Driver Configuration and Fine-tuning	152
2.1. Enabling SR-IOV	152
2.2. vSwitch Configuration	155
2.3. Guest (VM) Configuration	155
VI. ISCSI STORPORT MINIPORT	156
1. Introduction	157
1.1. Hardware Requirements	157
1.2. Software Requirements	158
2. Software/Driver Configuration and Fine-tuning	159
2.1. Configuring iSCSI Initiator	159
2.2. iSCSI Target Discovery and Login	164
VII. DATA CENTER BRIDGING (DCB)	172
1. Introduction	173
1.1. Hardware Requirements	173
1.2. Software Requirements	173
2. Software/Driver Configuration and Fine-tuning	174
2.1. Network QoS (optional)	174

VIII. UNIFIED WIRE MANAGER (UM)	177
1. Introduction	178
1.1. Features	178
1.2. Reference Architecture	179
1.3. Unified Wire Manager Components	179
1.4. Authentication and encryption	180
2. Hardware and Software	181
2.1. Supported Adapters	181
2.2. Platform/Component Matrix	181
2.3. Platform/Driver Matrix	181
3. Installation (Zip Package)	182
4. Configuration	187
4.1. Configuring Management Station	187
5. Verifying UM components status	189
5.1. Verifying Management Agent	189
5.2. Verifying Management Client	190
5.3. Verifying Management Station	190
6. Management Agent	191
6.1. Communication	191
6.2. Service configuration	191
6.3. Firewall	191
7. CLI client	192
7.1. CLI Help system	192
7.2. Client conflict resolution	192
8. Web GUI client	193
8.1. Management Station	193
8.2. Accessing Web Management Interface	194
8.3. Layout and Navigation	196
8.4. Home page	197
8.5. System page	207
8.6. Network page	211
8.7. Storage	226
8.8. Hardware Features	250
9. Uninstallation	263
IX. UM FOR WIN PE	266
1. Introduction	267
1.1. Hardware Requirements	267
1.2. Software Requirements	268
1.3. Examples	268
X. APPENDIX	272

I. Chelsio Unified Wire

1. Introduction

Thank you for choosing Chelsio Unified Wire adapters. These high speed, single chip, single firmware cards provide enterprises and data centers with high performance solutions for various Network and Storage related requirements.

The **Terminator** series is Chelsio's next generation of highly integrated, hyper-virtualized 10/25/40/50/100GbE controllers. The adapters are built around a programmable protocol-processing engine, with full offload of a complete Unified Wire solution comprising NIC, TOE, iWARP RDMA, iSCSI, FCoE and NAT support. It scales to true 100Gb line rate operation from a single TCP connection to thousands of connections, and allows simultaneous low latency and high bandwidth operation thanks to multiple physical channels through the ASIC.

Ideal for all data, storage and high performance clustering applications, the Unified wire adapters enable a unified fabric over a single wire by simultaneously running all unmodified IP sockets, Fibre Channel and InfiniBand applications over Ethernet at line rate.

Designed for deployment in virtualized data centers, cloud service installations and high performance computing environments, Chelsio Terminator adapters bring a new level of performance metrics and functional capabilities to the computer networking industry.

1.1. Features

Chelsio Unified Wire for Windows is an easy to use utility developed to provide installation of 64-bit Windows based drivers and tools for Chelsio's Unified Wire adapters.

It consists of the following components:

- NDIS Function driver (NIC)
- NVGRE Offload
- VXLAN Task Offload
- PacketDirect (Kernel Mode and ARM Moderation)
- SMB Direct
- RDMA/NVGRE concurrent (Mode 2)
- iWARP (ND)
- NDIS SR-IOV
- VMMQ/vRSS
- iSCSI Storport Miniport
- Data Center Bridging (DCB)
- Storage Replica (SR)
- Unified Wire Manager (UM)
- UM for Win PE

1.2. Hardware Requirements

The Chelsio Unified Wire supports all x64 architectures supporting PCIE (x4, x8, x16) slots.

- AMD CPUs, 64-bit (x86_64/amd64)
- Intel CPUs, 64-bit (x86_64)

Note *The Chelsio Unified Wire supports 3.3v PCI bus only. Running an adapter on a PCI x4 slot is not recommended as performance will be significantly reduced by the limitations of PCI.*

Note *T4 family of adapters are not supported on Windows 2016 Server & 10 AU Client versions.*

1.3. Software Requirements

The Chelsio Unified Wire software has been developed to run on Windows based platforms. To know more about the complete list of versions supported by each driver/software, please refer their respective sections.

Note *Drivers are WHQL certified.*

1.4. Package Contents

• Unified Wire Installer

Chelsio Unified Wire comes with an interactive installer and support documentation. The documentation, consisting of README, Release Notes and User's Guide (this document), can be found in the `<system_drive>\ChelsioUwire\docs\` directory after installing Chelsio Unified Wire.

• Zip Package

The zip package contains driver files, UM installer, UM for Win PE application, firmware binaries, adapter configuration binaries and support documentation (`docs` folder).

• Nano Server Installer


The Nano Server Installer package contains driver files, firmware binaries, adapter configuration binaries and support documentation (`docs` folder)

2. Hardware Installation

- i. Shutdown/power off your system.
- ii. Power off all remaining peripherals attached to your system.
- iii. Unpack the Chelsio adapter and place it on an anti-static surface.
- iv. Remove the system case cover according to the system manufacturer's instructions.
- v. Remove the PCI filler plate from the slot where you will install the Ethernet adapter.
- vi. For maximum performance, it is highly recommended to install the adapter into a PCIE x8/x16 slot.
- vii. Holding the Chelsio adapter by the edges, align the edge connector with the PCI connector on the motherboard. Apply even pressure on both edges until the card is firmly seated. It may be necessary to remove the SFP (transceiver) modules prior to inserting the adapter.
- viii. Secure the Chelsio adapter with a screw, or other securing mechanism, as described by the system manufacturer's instructions. Replace the case cover.
- ix. After securing the card, ensure that the card is still fully seated in the PCIE x8/x16 slot as sometimes the process of securing the card causes the card to become unseated.
- x. Connect a fiber/twinax cable, multi-mode for short range (SR) optics or single-mode for long range (LR) optics, to the Ethernet adapter or regular Ethernet cable for the 1Gb Ethernet adapter.
- xi. Power on your system.
- xii. Verify if the adapter was installed successfully. To do so, open **Device Manager** in **Control Panel**.
- xiii. Under **Other devices** section, Chelsio adapter should be listed as **Ethernet Controller**. If the adapter is not listed, right-click on the system name or click on the **Actions** menu and select **Scan for hardware changes**

For Chelsio adapters, the physical functions are currently assigned as:

- Physical functions 0 - 3: for the SR-IOV functions
 - Physical function 4: for all NIC functions of the card
 - Physical function 5: for iSCSI
 - Physical function 6: for FCoE
 - Physical function 7: Currently not assigned
- xiv. Once the Unified Wire package is installed, open **Device Manager** again. Expand **Network adapters** section and now Chelsio adapter should be listed.

 **Note** *Network device names for Chelsio's physical ports are assigned using the following convention: the port farthest from the motherboard will appear as the first Ethernet interface. However, for T5 40G adapters, the association of physical Ethernet ports and their corresponding network device names is opposite. For these adapters, the port nearest to the motherboard will appear as the first network interface.*

3. Software/Driver Installation

Chelsio Unified Wire can be installed using the Installer or the zip package. Refer the relevant section below depending on the method of installation selected.

3.1. Prerequisites

Please ensure that the following requirements are met, before proceeding with the installation:

3.1.1. Unified Wire Installer

Download and install the latest Microsoft Visual C++ Redistributable Packages for Visual Studio (x86 and x64).

3.1.2. NDIS SR-IOV

Enable SR-IOV in the machine.

3.1.3. Unified Wire Manager (Installer & Zip Package)

The Unified Wire installer has been designed to install Unified Wire Manager (UM) along with driver components by default, hence no separate installation is required. In case of zip package, you will have to manually run the UM installer located in *ChelsioUwire-x.x.x.xx/UM* folder (See [Unified Wire Manager](#) chapter for more information). Based on the Windows version running on the system, the three UM components, i.e. *Management Agent*, *Client* and *Station* will be installed. If an older version of UM exists, the installer will upgrade it to the version provided in the package.

- **Management Agent**

If you wish to install Management Agent, please make sure that **Microsoft .Net Framework 3.5** is installed before proceeding with the installation.

- **Management Station**

If you wish to install Management Station, please make sure that the following requirements are met before proceeding with the installation:

- Install **Python 2.6.6 (32-bit)**. (Download from [here](#))
- Ensure that the path to python binary (typically *C:\Python26*), is added to PATH system variable.
- Install **Apache HTTP Server 2.2** with SSL. (Download from [here](#))
- If the Apache Server is running, it should be stopped before starting the installation process.

3.2. Unified Wire Installer

Chelsio Unified Wire Installer provides two methods of installation: **GUI** or **CLI** mode. GUI mode provides an interactive GUI installer with customizable options. Whereas, CLI mode enables unattended installation of Chelsio drivers and software thereby relieving the user from monitoring the installation process and providing input via dialog boxes.

3.2.1. Enabling Test Signing

In case the drivers in the package are not WHQL certified, follow the steps mentioned below to enable test signing on your system:

- i. Goto Start->Run command option, enter "cmd" and press OK. This will open the command prompt utility.
- ii. Run the following command:

```
C:\Users\Administrator> bcdedit /set testsigning on
```

- iii. Reboot the machine for the changes to take effect.

3.2.2. GUI mode (Installer)

- i. Run the **ChelsioUwire-x.x.x.xx.exe** installer application.
- ii. Click **Next** for the Chelsio End User License Agreement Window.

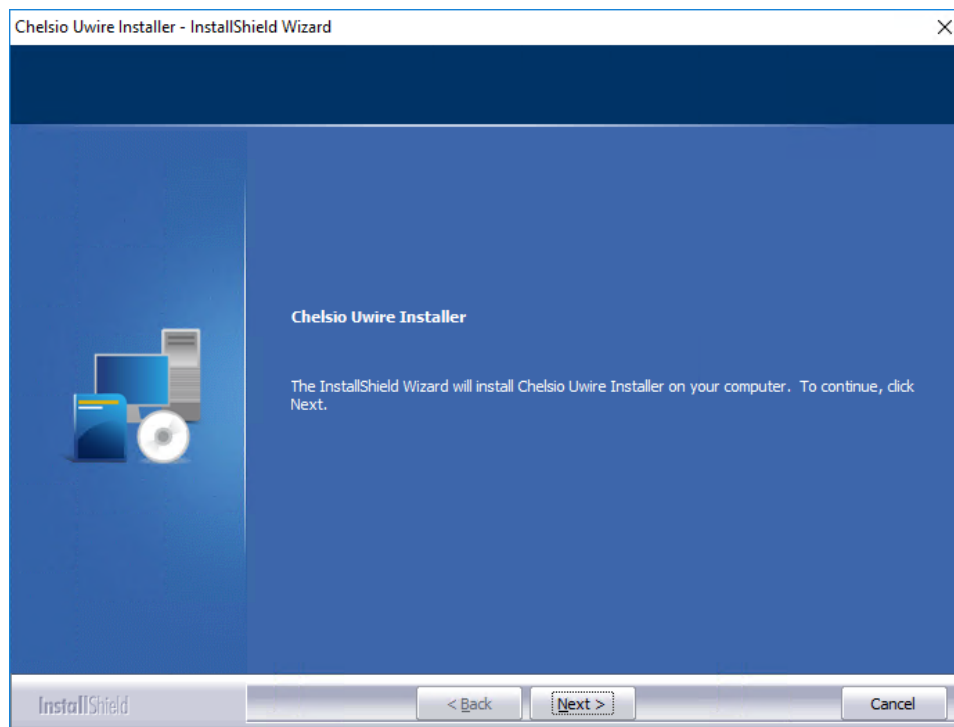


Figure 1 - Unified Wire installer welcome window

- iii. Select the radio button **I accept the terms of the license agreement** and click **Next**.

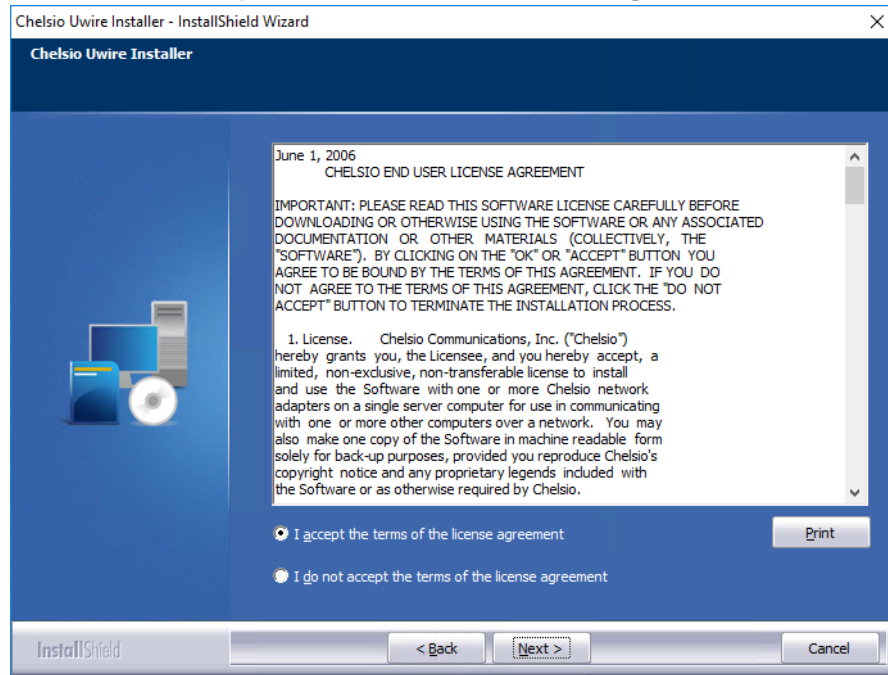


Figure 2 - Chelsio EULA window

- iv. Now, either select **Complete** for complete package installation or else select **Custom** radio button to customize the installation.

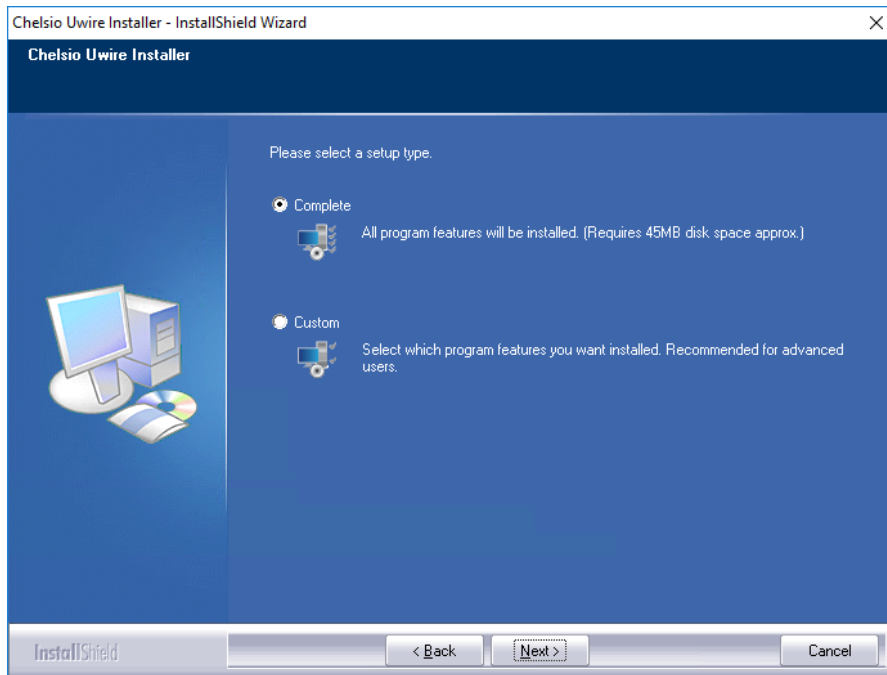


Figure 3 - Select setup (installation) type

If you select **Custom**, you can choose whether to install iSCSI Storport Miniport driver or not. Please note that Chelsio Ethernet Driver (NIC and VBD) is required for iSCSI Storport Miniport to work.

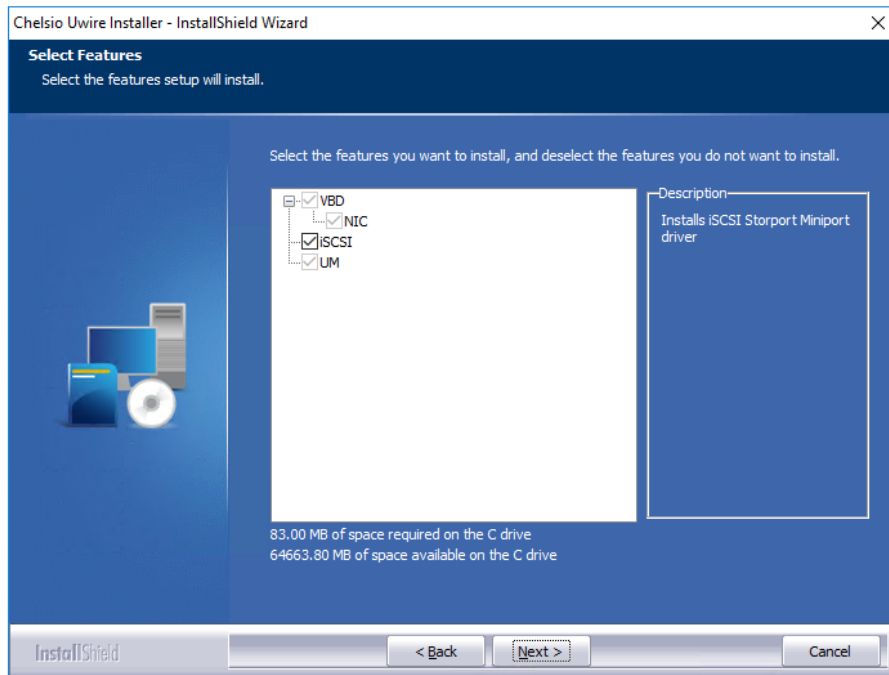


Figure 4 - Customizing the installation

v. Click **Install** to start the installation.

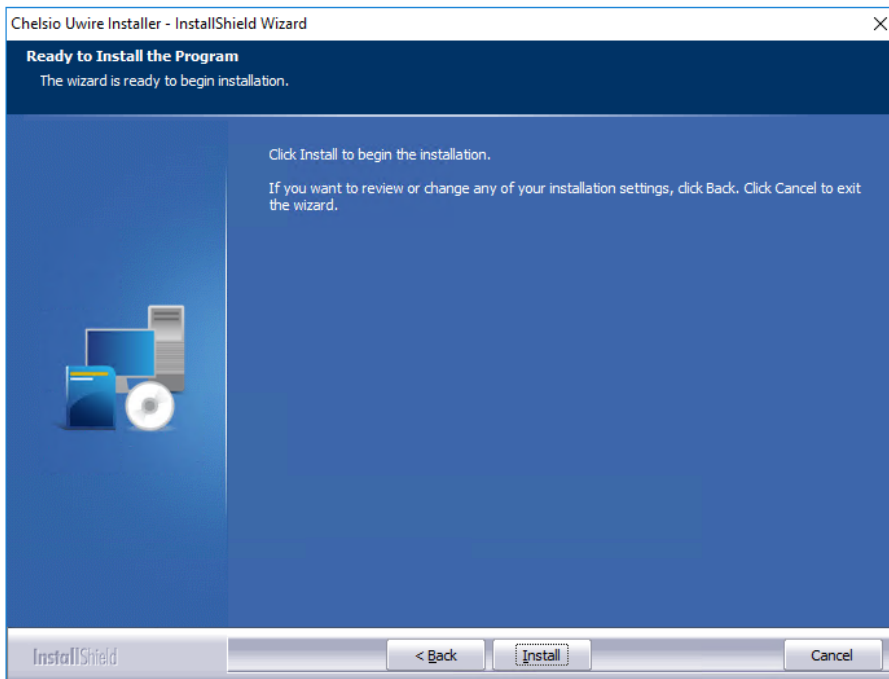


Figure 5 - Start installation

vi. Selected driver components will now be installed.

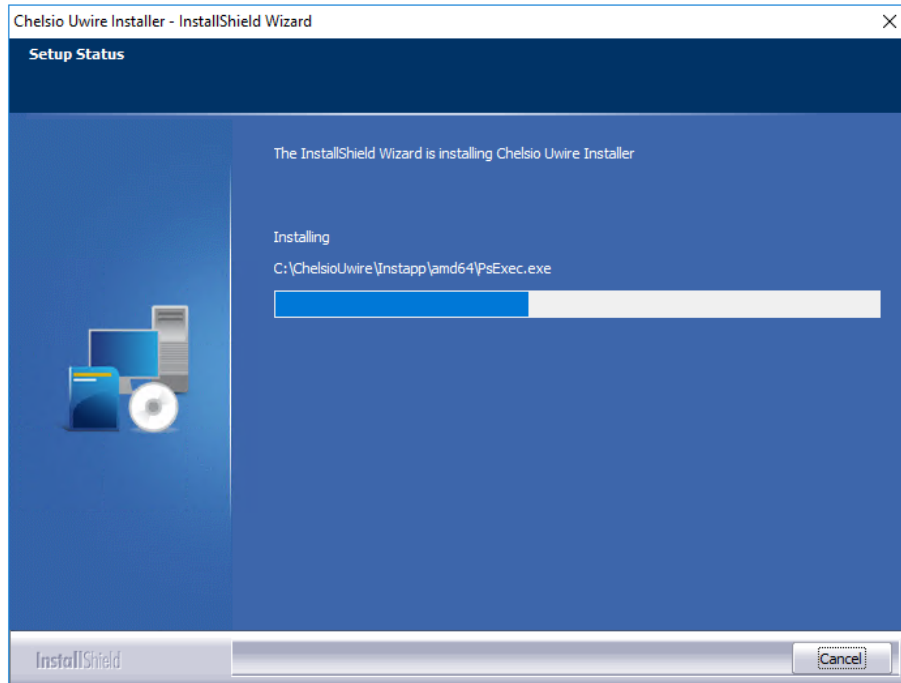


Figure 6 - Installation in progress

vii. After successful installation of driver(s), the Unified Wire Manager installer will be invoked. Click **Next** for the Chelsio End User License Agreement Window.

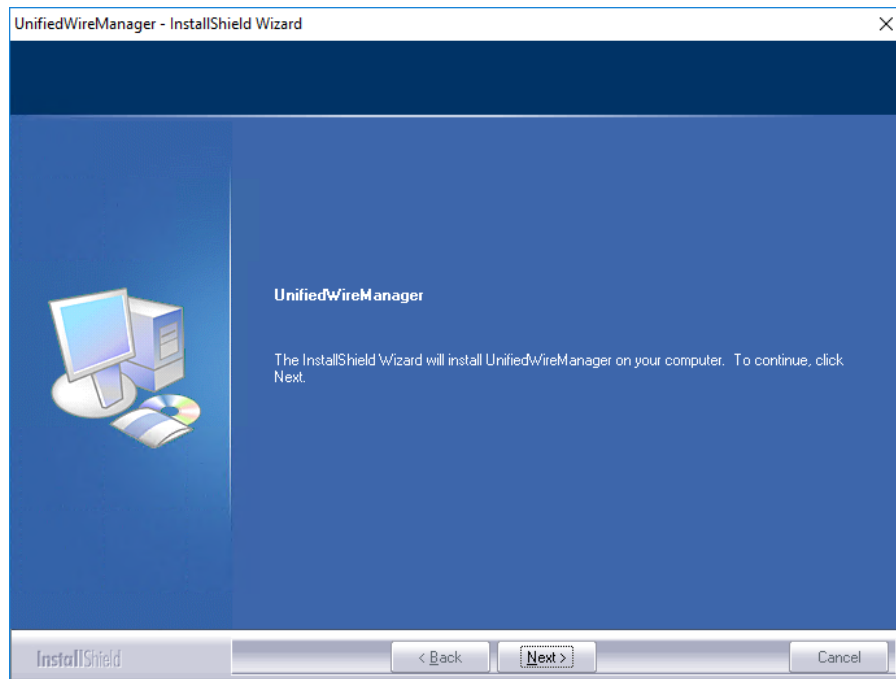


Figure 7 - UM installer welcome window

viii. Select the radio button **I accept the terms of the license agreement** and click **Next**.

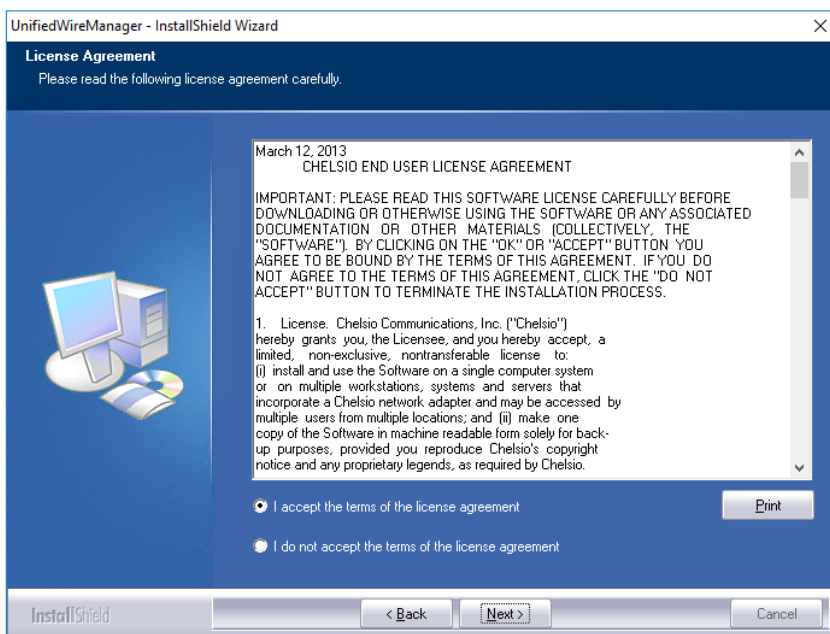


Figure 8 - Chelsio EULA window

ix. The next window will display the prerequisites for various UM components. Ensure that they are met before proceeding. Click **Next**.

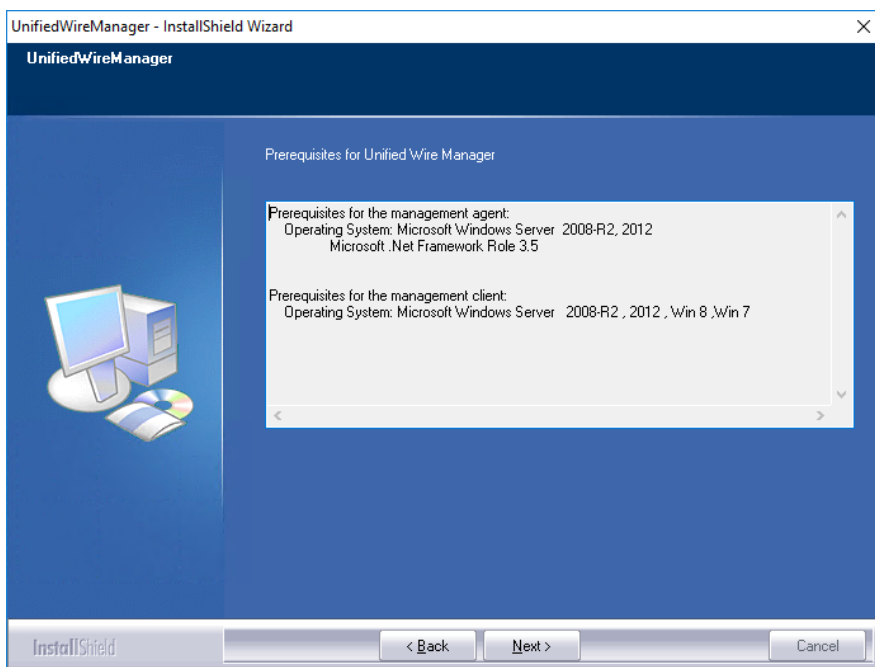


Figure 9 - UM prerequisites window

Note *If prerequisites mentioned are not met, installation of UM will fail. Driver installation will however continue.*

- x. Now, either select **Complete** for complete package installation or else select **Custom** radio button to customize the installation. The **Custom** option provides the option to change the installation path and which UM components to install. Click **Next**.



Note

If Management Station is selected, please make sure that all related prerequisites are met before proceeding (See [Prerequisites](#)) or else the component will be skipped during installation.

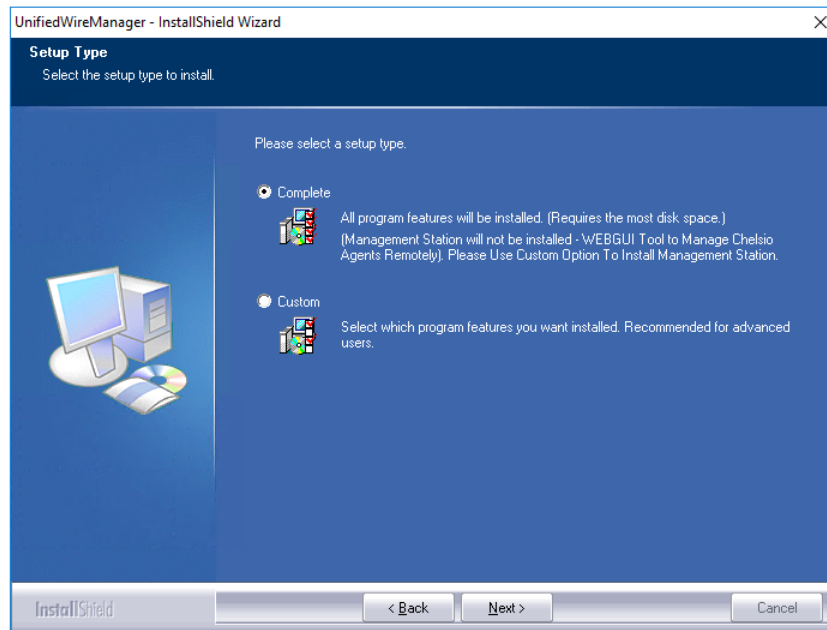


Figure 10 - Select setup (installation) type

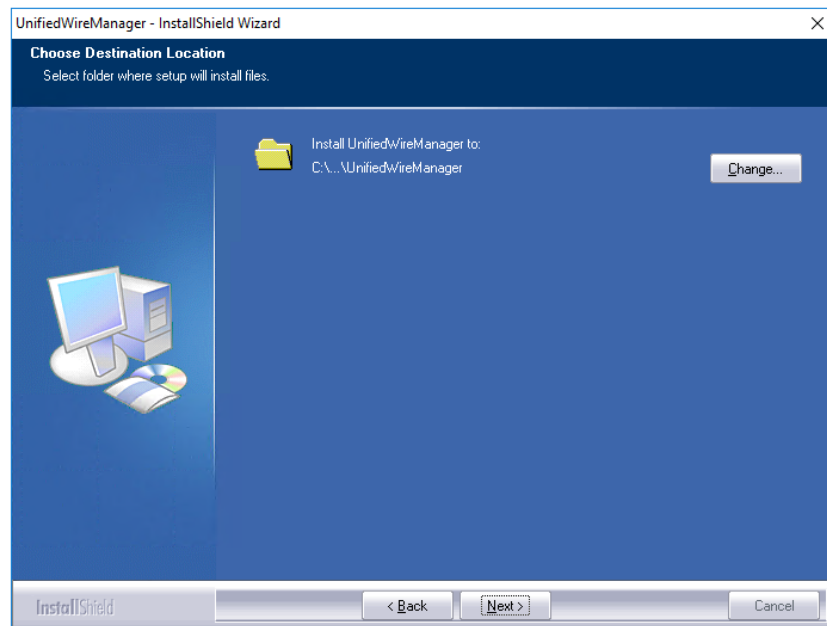


Figure 11 - Changing UM installation path

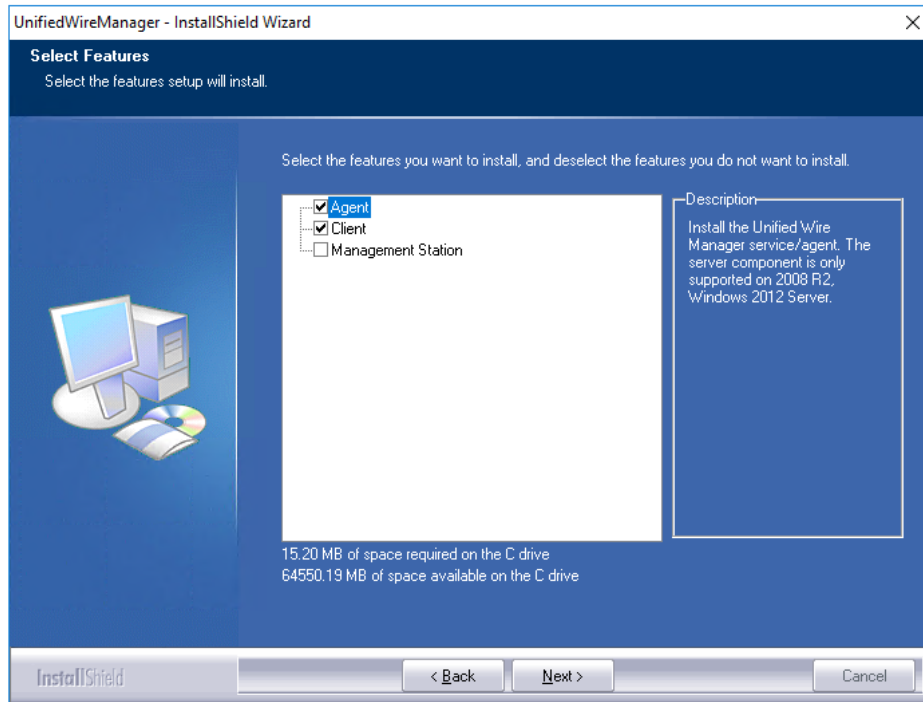


Figure 12 - Selecting UM components to install

- xi. Click **Install** to start the installation. Unified Wire Manager will now be installed with the selected options.

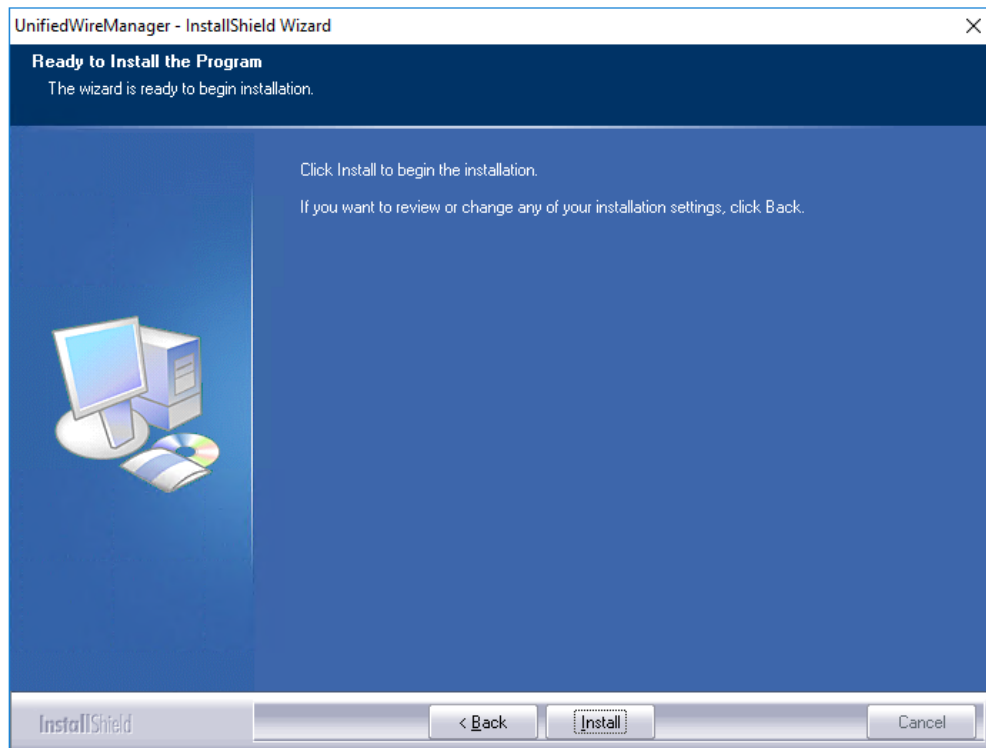


Figure 13 - Starting UM installation

xii. Click **Finish** to exit from the UM Installer.

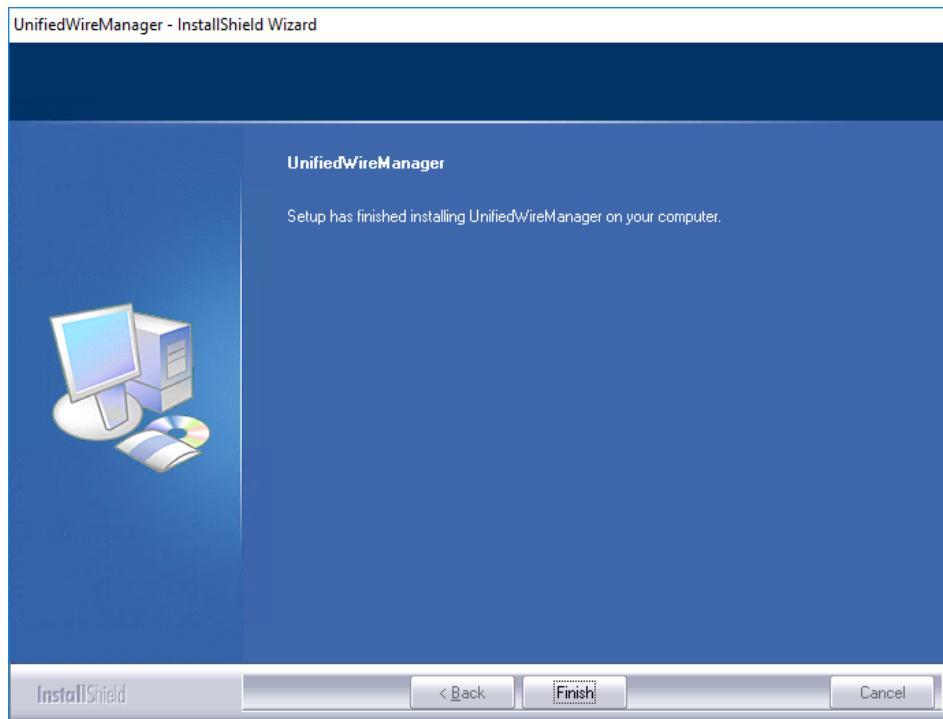


Figure 14 - Finishing UM installation

xiii. Click **Finish** to exit from the Unified Wire Installer.

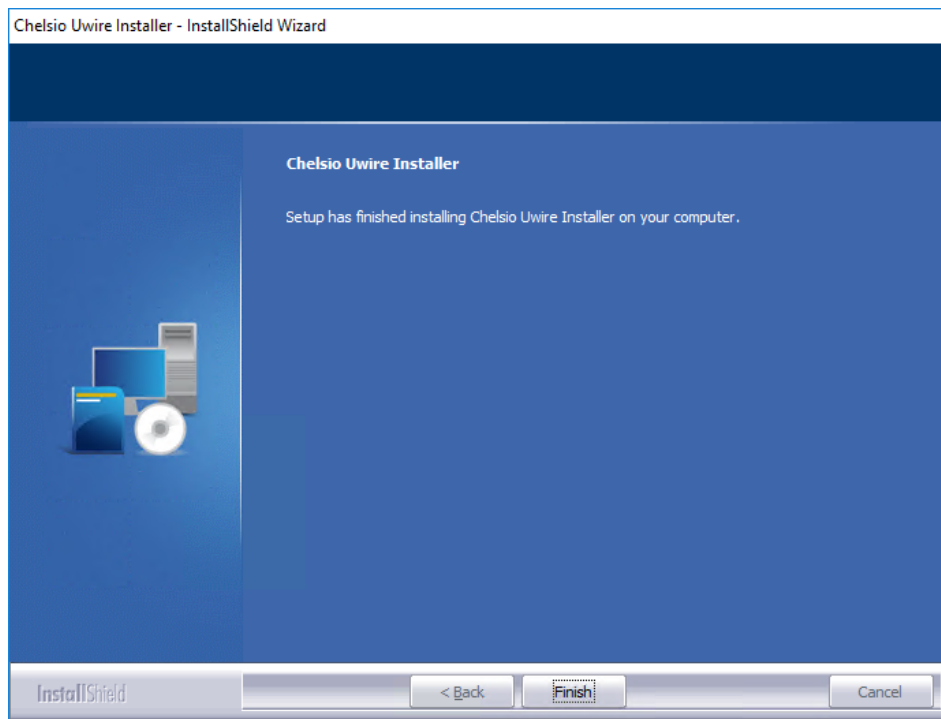


Figure 15 - Finishing Unified Wire installation

3.2.3. CLI mode (Silent Installation)

To install drivers/software using this feature, open **command prompt** and execute the following command:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.xx.exe -in <driver(s)>
```

E.g.:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.xx.exe -in all
```

The above command will install all the drivers and UM Agent.

To add a driver to an existing list of already installed drivers, use the following command:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.x.exe -add <driver(s)>
```

E.g.:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.x.exe -add iSCSI
```

The above command will add iSCSI Storport Miniport driver.

To know more about other parameters and options, execute the following command:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.xx.exe -help
```

The above command will create a help file, *ChelsioUwire-x.x.x.xx_help.txt*, in the present working directory which contains the complete list of command line syntax required for performing all the necessary CLI operations.



A log file, ChelsioUwire-x.x.x.xx.log, is created in the same directory which keeps a record of all the commands executed and their results.

3.3. Nano Server Installer


Follow the steps mentioned below to install Unified Wire on a Nano Server machine:

- i. Download and unzip the driver package *Chelsio-NANO-installer-x.x.x.xx.zip*

- ii. Connect to Nano Server machine and copy the package contents.
- iii. Open PowerShell with administrative privileges and change your working directory to *Chelsio-NANO-installer-x.x.x.xx*
- iv. Run the installer

```
[nanomachine-ip]: PS D:\Chelsio-NANO-installer-x.x.x.xx> .\install.ps1 -in  
all
```

A log file, *Chelsio-installer.log*, containing installation summary will be created in the same folder.

 **Note** *In case of non-WHQLed drivers, if Nano Server is freshly installed, the installer will enable Test Signing. Reboot the machine and run the installer again.*

To know more about Installer parameters and options, view the help:

```
[nanomachine-ip]: PS D:\Chelsio-NANO-installer-x.x.x.xx> .\install.ps1 -h
```

3.4. Zip Package

Chelsio Unified Wire zip package provides two methods of installation: **Manual** and using **Offline Windows Image**. In Manual method, the driver components must be individually installed using the Device Manager. Using the second method, you can add Chelsio driver components to an offline OS image. The image can then be used to install Windows on your system.

3.4.1. Enabling Test Signing

In case the drivers in the package are not WHQL certified, please follow the steps mentioned below to enable test signing before installing Unified Wire:

- i. Open command prompt and run the following command to enable test signing:


```
C:\Users\Administrator>bcdedit /set testsigning on
```

- ii. Change your working directory to *ChelsioUwire-x.x.x.xx/Selfsign/* and run the following commands:

```
C:\ChelsioUwire-x.x.x.xx\Selfsign> .\certmgr.exe -add chelsiocert.cer -s -r
localmachine root
C:\ChelsioUwire-x.x.x.xx\Selfsign> .\certmgr.exe -add chelsiocert.cer -s -r
localmachine trustedpublisher
```

- iii. Reboot the machine for the changes to take effect.

3.4.2. Manual

-  **Important**
 - *The driver components need to be installed strictly in the order described here. Using any other order is not supported.*
 - *Before proceeding, open Device Manager and disable NDIS Miniport driver (Network adapters->Chelsio Network Adapter) followed by Virtual Bus Driver (System devices->Chelsio Bus Enumerator).*

- **Virtual Bus Driver**

- i. Open **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on **System Devices**, right click on **Chelsio Bus Enumerator** and select **Update Driver Software**.
- ii. Select **Browse my computer for driver software**.
- iii. Select **Let me pick from a list of device drivers on my computer** and click **Next**.
- iv. Click on **Have Disk** Button and on the next screen browse for **chvbdx64.inf** file and click **Open** and then **OK**.
- v. Click **Next** and driver installation will progress. Click **Close** once the installation is complete.

- **NDIS Miniport driver**

- i. Open **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on **System Devices**, right click on the Chelsio network adapter and select **Update Driver Software**.
- ii. Select **Browse my computer for driver software**.
- iii. Select **Let me pick from a list of device drivers on my computer**.
- iv. Click on **Have Disk** Button and on the next screen browse for **chnetx64.inf** file and click **Open** and then **OK**. Click **Next** and driver installation will progress. Click **Close** once the installation is complete.

Repeat the above steps for the other adapters.

- **iSCSI Storport Miniport driver**

- Open **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on **System Devices**, right click on the **Chelsio Bus Enumerator** and select **Properties**.
- Under **Advanced** tab, select **iSCSI Instances** and set the Value to **default**. Click **OK**.
- Under **Other Devices**, select **Chelsio iScsi Function on Port#00**, right-click and select **Update Driver Software**.
- Select **Browse my computer for driver software**.
- Select **Let me pick from a list of device drivers on my computer** and click **Next**.
- Click on **Have Disk** Button and on the next screen, browse for **cht4iscsi.inf** file and click **Open** and then **OK**.
- Click **Next** and driver installation will progress. Click **Close** once the installation is complete.

Repeat the same procedure for other ports.

- **Generic Function**

- Open **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on **System Devices**, right click on **Chelsio Generic Function** and select **Update Driver Software**.
- Select **Browse my computer for driver software**.
- Select **Let me pick from a list of device drivers on my computer**.
- Click on **Have Disk** Button and on the next screen browse for **chnulx64.inf** file and click **Open** and then **OK**.
- Click **Next** and driver installation will progress. Click **Close** once the installation is complete.

3.4.3. Offline Windows Image

You can use Windows Deployment Image Servicing and Management (DISM) tool to add Chelsio driver components (.inf files) to an offline Windows image. For more information, visit the following links:

- <http://technet.microsoft.com/en-us/library/hh825070.aspx>
- <http://blogs.technet.com/b/heyscriptingguy/archive/2012/09/27/use-the-powershell-dism-commandlets-to-manage-windows-8.aspx>

3.4.4. Nano Server: Driver Installation

Before installing Nano Server, the Chelsio driver components need to be added to the boot image file. The following steps explain step-by-step procedure to add Chelsio VBD, NDIS and Null drivers to the image file:

- Copy *NanoServer.wim* image file from Windows Server 2016 (build>=10586) ISO to a desired folder on your hard drive.
- Open a command prompt with administrative privileges (elevated command prompt).

iii. Determine the index number of image file.

```
C:\Windows\system32>dism /get-wiminfo /wimfile:<path>\NanoServer.wim
```

iv. Mount the image file:

```
C:\Windows\system32>dism /mount-wim /wimfile:<path>\NanoServer.wim  
/index:<index_number> /mountdir:<mount_directory>
```

v. Copy the Microsoft OEM driver set package from *NanoServer\Packages* folder in the ISO to your hard drive and add it to the image file:

```
C:\Windows\system32>dism /image:<path>\<mount_directory> /add-package  
/packagepath:<path>\Microsoft-NanoServer-OEM-Drivers-Package.cab
```

vi. Add Chelsio drivers to the image file:

```
C:\Windows\system32> dism /image:<path>\<mount_directory> /add-driver  
/driver:<path>\ChelsioUwire-x.x.x.xx\chvbdx64.inf
```

```
C:\Windows\system32> dism /image:<path>\<mount_directory> /add-driver  
/driver:<path>\ChelsioUwire-x.x.x.xx\chnetx64.inf
```

```
C:\Windows\system32> dism /image:<path>\<mount_directory> /add-driver  
/driver:<path>\ChelsioUwire-x.x.x.xx\chnulx64.inf
```




In case of non-WHQLed drivers, run the above commands with the /forceunsigned option. Here's an example for the first command:

```
C:\Windows\system32> dism /image:<path>\<mount_directory> /add-driver  
/driver:<path>\ChelsioUwire-x.x.x.xx\chvbdx64.inf /forceunsigned
```

vii. Commit and save the image file:

```
C:\Windows\system32>dism /unmount-wim /mountdir:<mount_directory> /commit
```


- viii. Finally, add the image file to WDS server and install Nano Server (with Chelsio drivers) using PXE boot.
- ix. The Nano Server machine will reboot.

 **Note** *In case of non-WHQLed drivers, run the following command to enable test signing and reboot the machine again:*

```
[nanomachine-ip]: PS D:\> bcdedit /set testsigning on
```

4. Firmware Update

The driver will auto-load the firmware if an update is required. The firmware version can be verified using *cxgbtool*:

```
C:\Users\Administrator>cxgbtool nic0 debug version
```

In case of installer, the firmware binaries will be copied to `<system_drive>\ChelsioUwire\Firmware\` folder during installation.

For zip package, the binaries will be present in `ChelsioUwire-x.x.x.xx\firmware\` folder.

For Nano Server Installer, the binaries will be present in `Chelsio-NANO-installer-x.x.x.xx\firmware\` folder.

5. Software/Driver Update

Chelsio Unified Wire can be updated using Windows update, installer or zip package. The update method for each is described below:

5.1. Windows Update

- i. Make sure that you have an active internet connection.
- ii. Open **Device Manager**, click on **System Devices**, right-click on the **Chelsio Bus Enumerator**, and then select **Update Driver Software..**

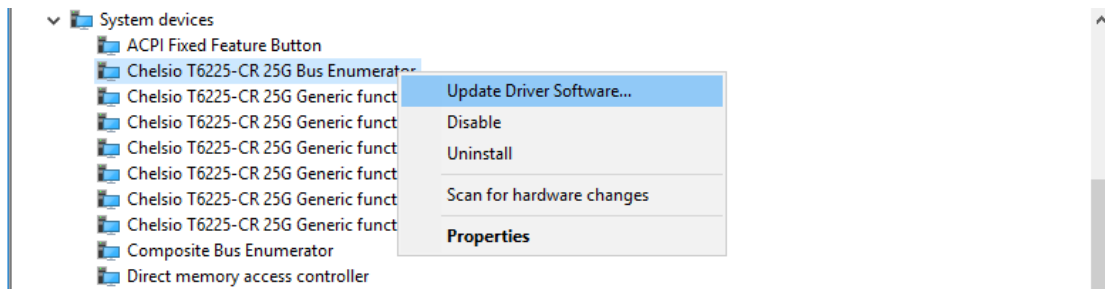


Figure 16 – Updating VBD driver

- iii. Select **Search automatically for updated driver software.**

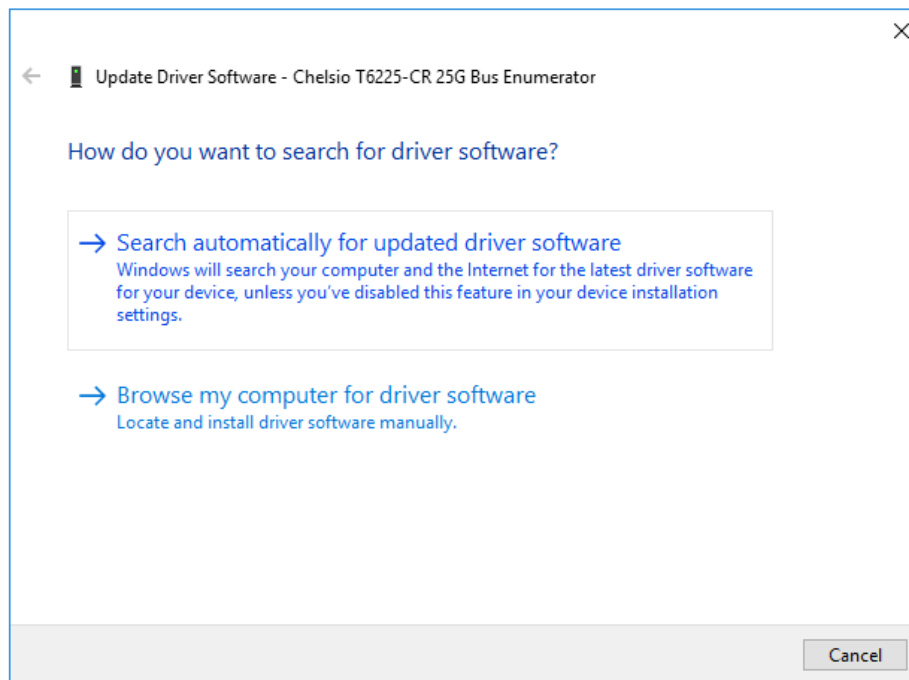


Figure 17 – Searching for driver using Windows update

- iv. Windows will search and install the latest driver. Click **Close**.

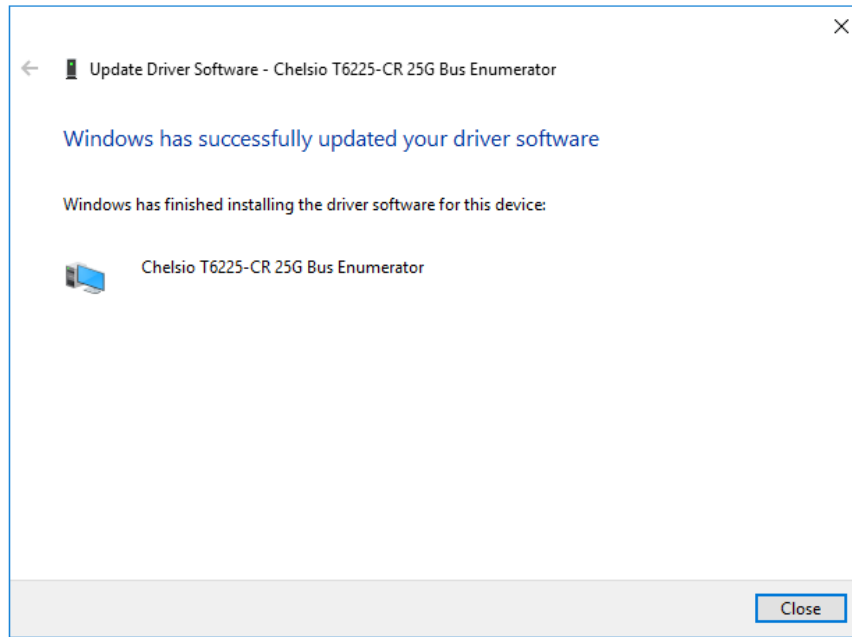


Figure 18 - Driver update successful

- v. Click on **Network Adapters**, right-click on **Chelsio Network Adapter** and select **Update Driver Software..**

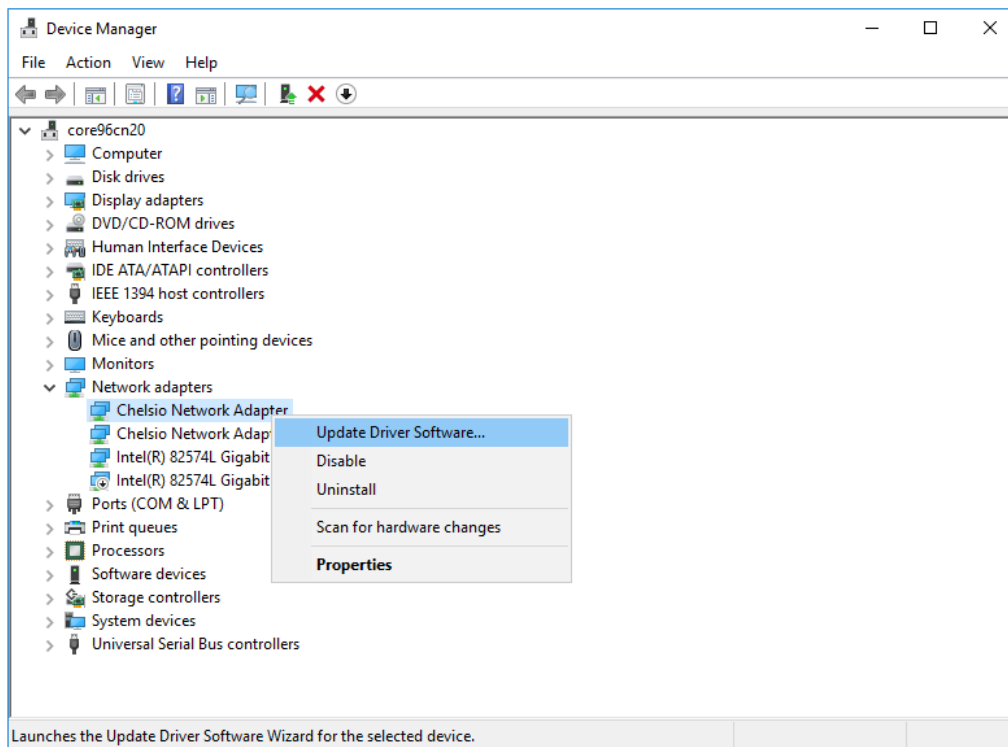


Figure 19 - Updating NDIS driver

vi. Select **Search automatically for updated driver software**

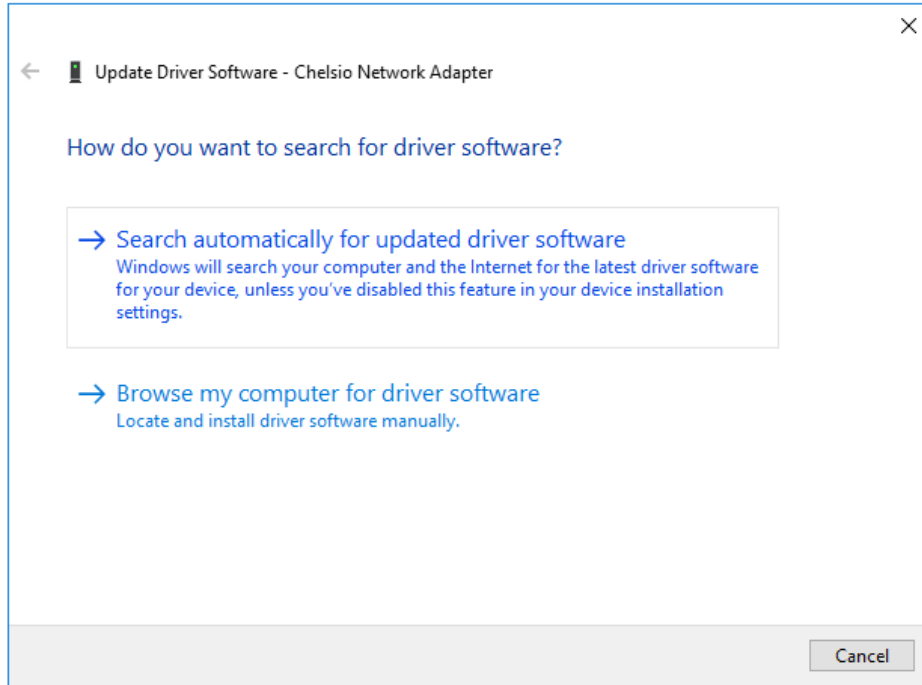


Figure 20- Searching for driver using Windows update

vii. Windows will search and install the latest driver. Click **Close**.

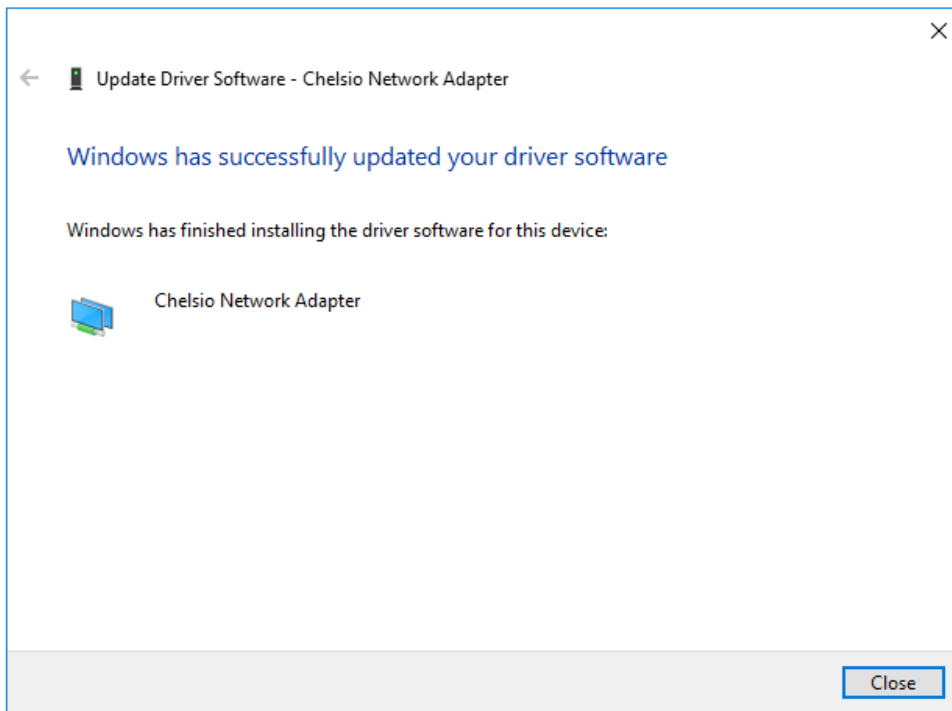


Figure 21 - Driver update successful

viii. Click on **Storage controllers**, right-click on **Chelsio T6 iSCSI Initiator** and select **Update Driver Software..**

Note *If Chelsio iSCSI interface is not listed, verify if you have specified the number of iSCSI instances in [VBD parameters](#).*

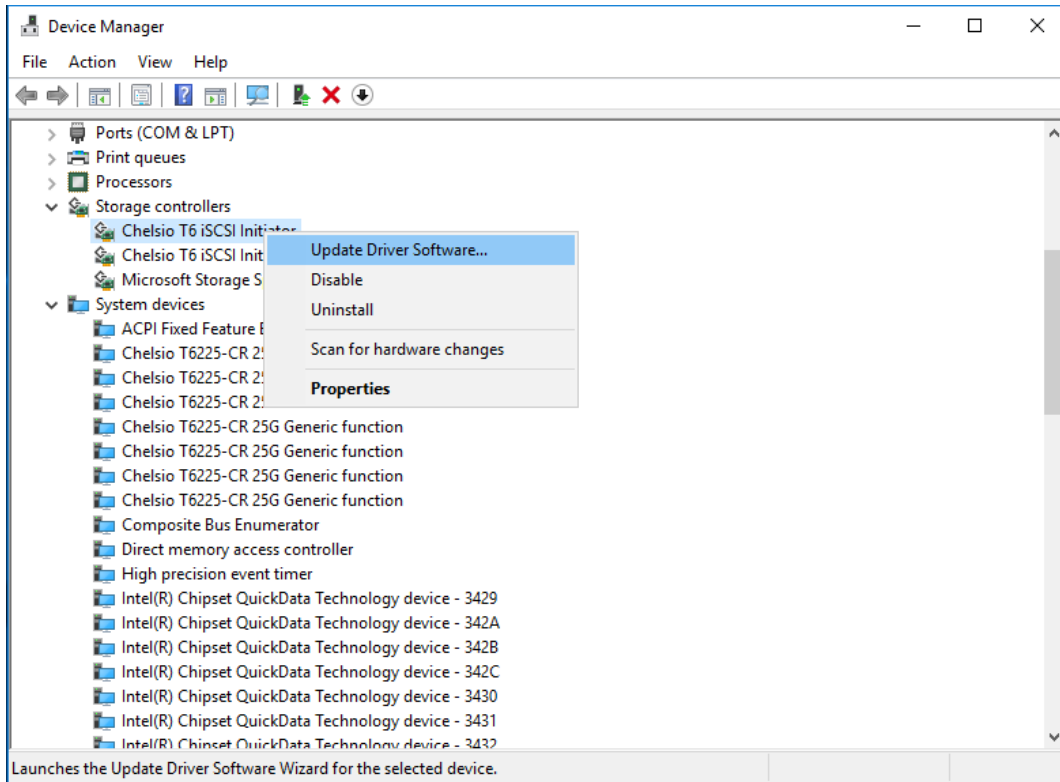


Figure 22 - Updating iSCSI Storport Miniport driver

- ix. Windows will search and install the latest driver. Click **Close**.

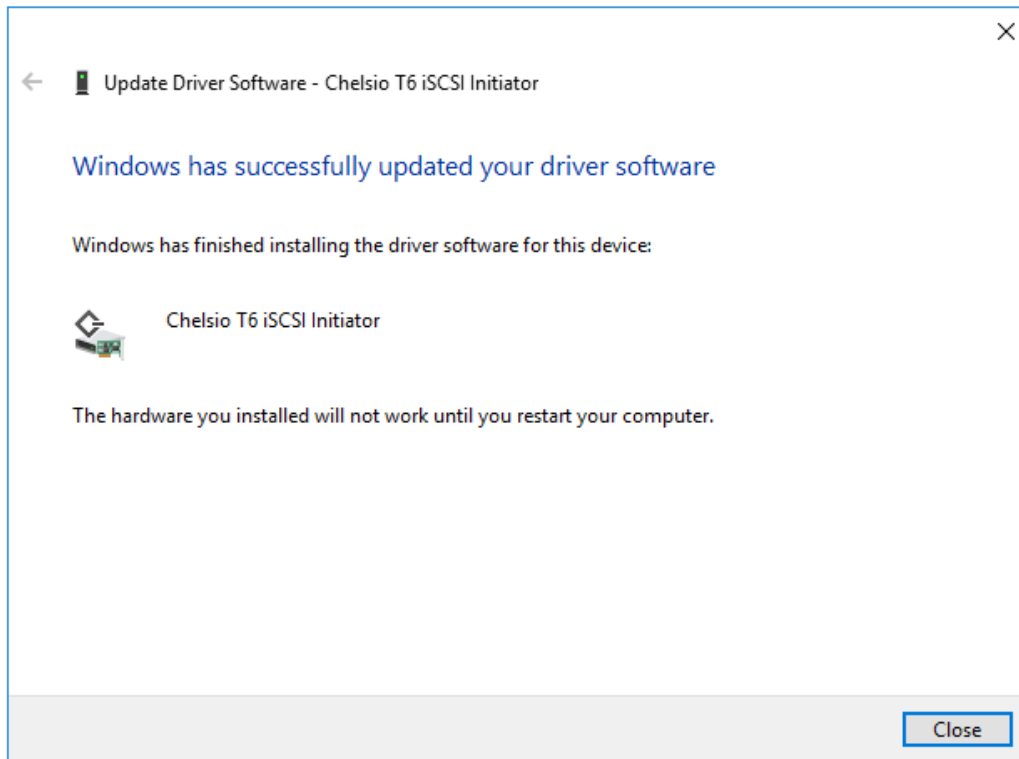


Figure 23 - Driver update successful

- x. Open the **Device Manager**, click on **Network Adapters**, right-click on **Chelsio Generic Function** and select **Update Driver Software..**

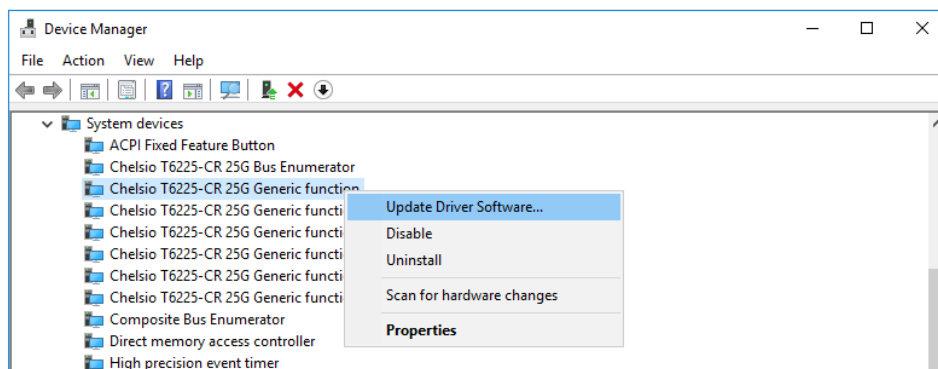


Figure 24 - Updating Generic function driver

xi. Select **Search automatically for updated driver software**

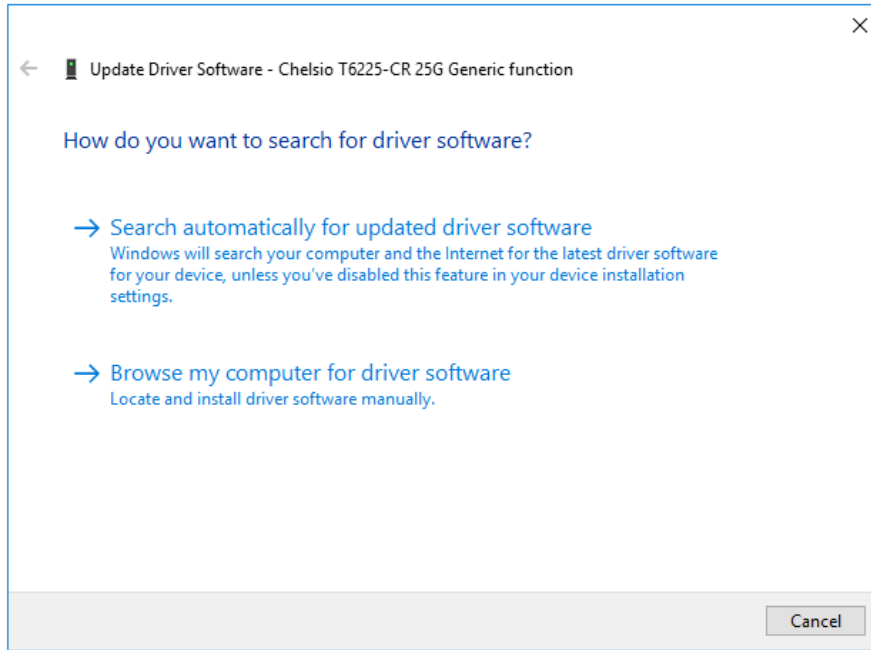


Figure 25 - Searching for driver using Windows update

xii. Windows will search and install the latest driver. Click **Close**.

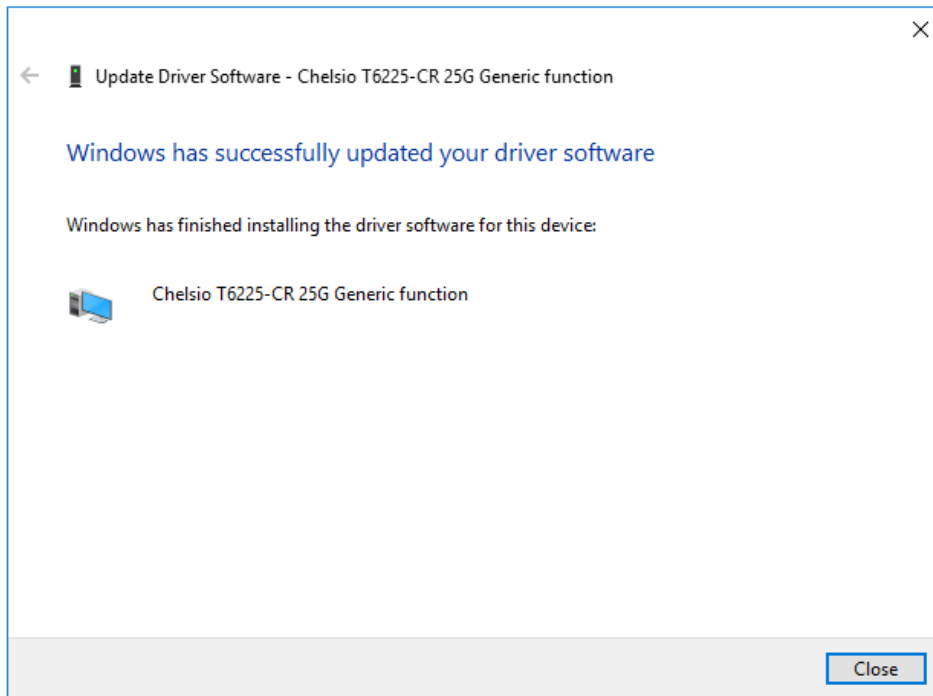


Figure 26 - Driver update successful

5.2. Unified Wire Installer

- i. Run the **ChelsioUwire-x.x.x.xx.exe** installer application.
- ii. Click **Next** to start the update.

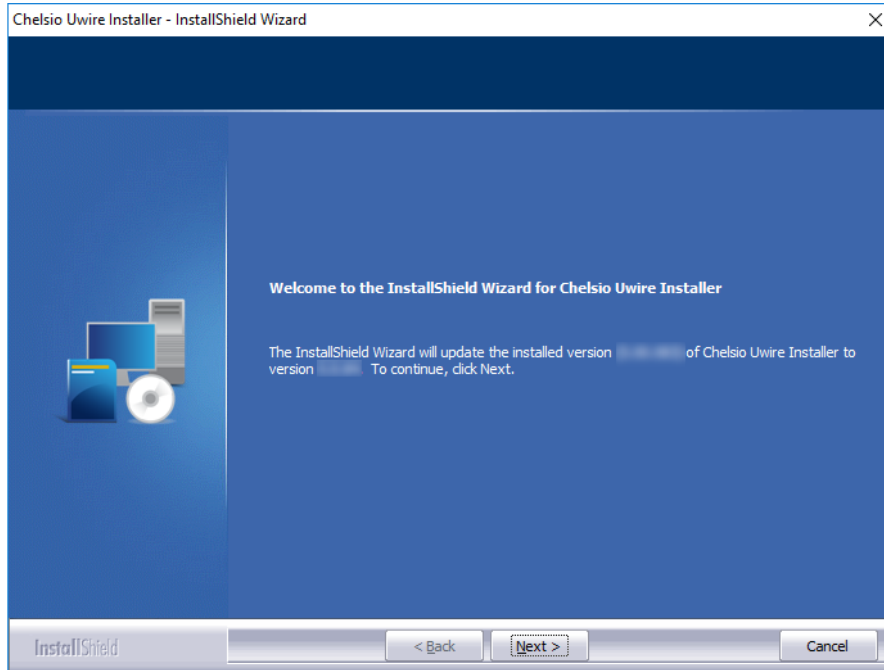


Figure 27 - Unified Wire installer welcome window

- iii. Click **Finish** to exit from the Unified Wire Installer.

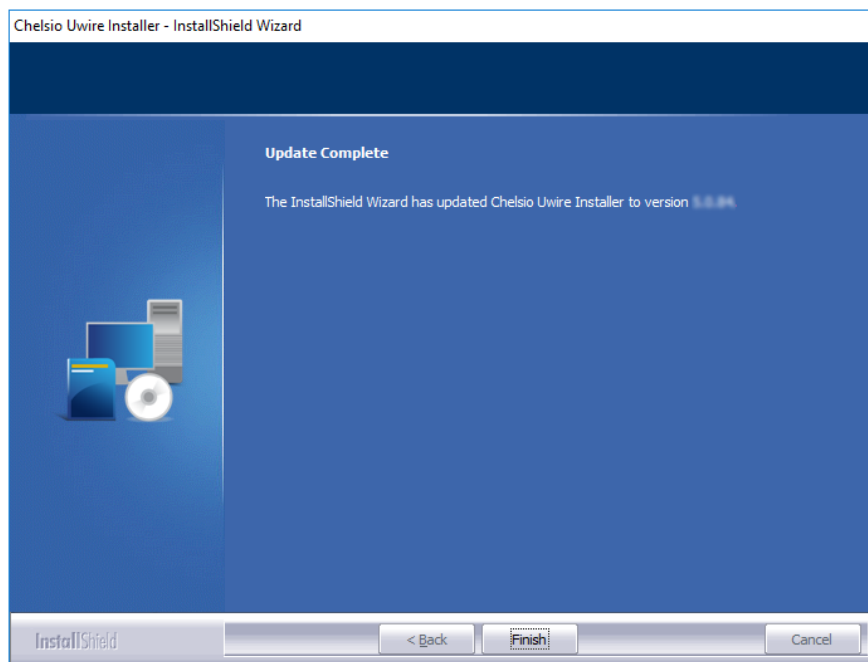


Figure 28 - Finishing Unified Wire update

5.3. Zip Package

The method to update Unified Wire using zip package is same as installation. Refer the [installation section](#) for more information.

6. Configuring Chelsio Network Interfaces

In order to test Chelsio adapters' features, it is required to use at least two machines, each with Chelsio's network adapters. These machines can be connected directly (back-to-back) or with a switch.

6.1. Configuring 40G Adapters

You can use the **chelsio_adapter_config.ps1** script to configure Chelsio 40G adapters in any of the following three operational modes:

- **DEFAULT (2X40G)**: This is the default mode of operation where each port functions as 40Gbps link. The port nearest to the motherboard will appear as the first network interface (Port 0).
- **SPIDER (4X10G)**: In this mode, port 0 functions as 4 10Gbps links and port 1 is disabled.
- **QSA (2X10G)**: This mode adds support for QSA (QSFP to SFP+) modules, enabling smooth, cost-effective, connections between 40 Gigabit Ethernet adapters and 1 or 10 Gigabit Ethernet networks using existing SFP+ based cabling. The port farthest from the motherboard will appear as the first network interface (Port 0).

6.1.1. Windows GUI Machine (Installer & Zip Package)

- In case of Installer, the configuration script and `cxgbtool.exe` will be copied to `<system_drive>\Windows\System32` folder during installation.

If you are using the zip package, copy `cxgbtool.exe` from `ChelsioUwire-x.x.x.xx` folder to `<system_drive>\Windows\System32` and change your working directory to `ChelsioUwire-x.x.x.xx\Adapter Configuration`.

- Open PowerShell with administrative privileges.
- Run the adapter configuration script and select *Windows GUI* (option 1) as the Windows version. Hit [Enter].

Installer:

```
PS C:\Users\Administrator> chelsio_adapter_config.ps1
```

```
PS C:\Users\Administrator> chelsio_adapter_config.ps1
  1. Windows GUI
  2. Windows Nano Server
Input: 1

chelsio_adapter_config Version 2.0

Please stop all the traffic on Chelsio adapters before updating !!
```

Figure 29 - Adapter configuration utility (Installer)

Zip Package:

```
PS D:\ChelsioUwire-x.x.x.xx\Adapter Configuration>
.\chelsio_adapter_config.ps1
```

```
PS D:\ChelsioUwire-x.x.x.xx\Adapter Configuration> .\chelsio_adapter_config.ps1
1. Windows GUI
2. Windows Nano Server
Input: 1

chelsio_adapter_config Version 2.0

Please stop all the traffic on Chelsio adapters before updating !!
```

Figure 30 - Adapter configuration utility (zip package)

- iv. Enter the index of the 40G adapter for which the configuration needs to be updated. Hit [Enter].

```
Select the Adapter
1.T580-S0-CR      S/N:PT39131112
Input : 1
```

Figure 31 - Selecting adapter

- v. Select *Port settings* (option 3) as the configuration type. Hit [Enter].

```
Choose the configuration type:
1. NON-SRIOV (Default)
2. SRIOV
3. Port settings
Input : 3
```

Figure 32 - Port settings

- vi. Select the operation mode and then enter y to confirm.

```
Choose the type:
1. DEFAULT (2 x 40G)
2. SPIDER (4 x 10G)
3. QSA (2 x 10G)
Input : 2
Do you want to continue (y/n): y
Successfully updated the selected configuration type.
Verification: Passed
```

Figure 33 - Operation mode


- vii. Open **Device Manager**, click on **System Devices** and right-click on the 40G Chelsio adapter selected in step (iv).
- viii. Select **Disable** and then **Enable** for changes to take effect.

6.1.1. Nano Server Machine (Nano Server Installer & Zip Package)

- i. Connect to Nano Server Machine.
- ii. In case of Nano Server Installer, the configuration script and `cxgbnano.exe` utility will be copied to `<system_drive>\Windows\System32` during installation.
If you are using the zip package, copy `cxgbnano.exe` from `ChelsioUwire-x.x.x.xx` folder to `<system_drive>\Windows\System32` and change your working directory to `ChelsioUwire-x.x.x.xx\Adapter Configuration`.
- iii. Run the adapter configuration script and select *Windows Nano Server* (option 2) as the Windows version. Hit [Enter].

Nano Server Installer:

```
[nanomachine-ip]: PS D:\> chelsio_adapter_config.ps1
```

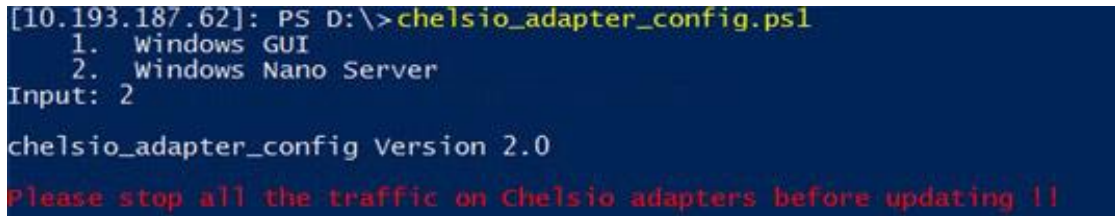


```
[10.193.187.62]: PS D:\>chelsio_adapter_config.ps1
  1. Windows GUI
  2. Windows Nano Server
Input: 2

chelsio_adapter_config Version 2.0
Please stop all the traffic on Chelsio adapters before updating !!
```

Figure 34 - Adapter configuration utility (Nano Server Installer)

Zip Package:

```
[nanomachine-ip]: PS D:\ChelsioUwire-x.x.x.xx\Adapter Configuration>
.\chelsio_adapter_config.ps1
```

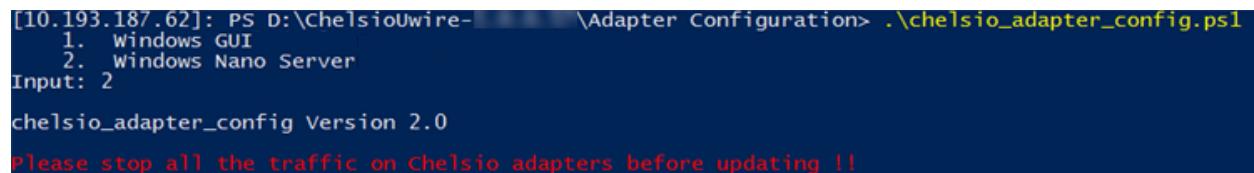


```
[10.193.187.62]: PS D:\ChelsioUwire-... \Adapter Configuration> .\chelsio_adapter_config.ps1
  1. Windows GUI
  2. Windows Nano Server
Input: 2

chelsio_adapter_config Version 2.0
Please stop all the traffic on Chelsio adapters before updating !!
```

Figure 35 - Adapter configuration utility (zip package)

- iv. Enter the index of the 40G adapter for which the configuration needs to be updated

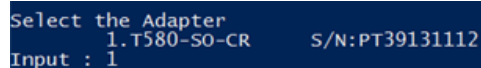

```
Select the Adapter
  1.T580-S0-CR      S/N:PT39131112
Input : 1
```

Figure 36 - Selecting adapter1

- v. Select *Port settings* (option 3) as the configuration type. Hit [Enter].

```
Choose the configuration type:
 1. NON-SRIOV (Default)
 2. SRIOV
 3. Port settings
Input : 3
```

Figure 37 - Port settings

- vi. Select the operation mode and then enter y to confirm.

```
Choose the type:
 1. DEFAULT (2 x 40G)
 2. SPIDER (4 x 10G)
 3. QSA (2 x 10G)
Input : 2
Do you want to continue (y/n): y
Successfully updated the selected configuration type.
Verification: Passed
```

Figure 38 - Operation mode

- vii. Determine the Instance ID of the adapter using the *Get-PnpDevice* command:

```
[10.193.187.132]: PS D:\ChelsioWire-5.0.0.51\Adapter Configurations> Get-PnpDevice |where-Object {$_.FriendlyName -like "Chelsio*"}|select name, InstanceId, status
```

name	InstanceId	status
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5500&SUBSYS_00001425&REV_00\4&110E1C6D&0A0508	OK
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5000&SUBSYS_00001425&REV_00\4&110E1C6D&0A0008	OK
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5000&SUBSYS_00001425&REV_00\4&110E1C6D&0A0108	OK
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5000&SUBSYS_00001425&REV_00\4&110E1C6D&0A0208	OK
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5000&SUBSYS_00001425&REV_00\4&110E1C6D&0A0308	OK
Chelsio T580-CR 40G Generic function	PCI\VEN_1425&DEV_5600&SUBSYS_00001425&REV_00\4&110E1C6D&0A0608	OK
Chelsio T580-CR 40G Bus Enumerator	PCI\VEN_1425&DEV_5400&SUBSYS_00001425&REV_00\4&110E1C6D&0A0408	OK
Chelsio Network Adapter #5	CHT5BUS\CHNET\5&1501F&91&0A0000	OK
Chelsio Network Adapter #6	CHT5BUS\CHNET\5&1501F&91&0A0001	OK

Figure 39 - Adapter instance IDs

- viii. Use the Instance ID obtained from the previous step to disable and enable the adapter for changes to take effect.

```
[10.193.187.132]: PS D:\ChelsioWire-5.0.0.51\Adapter Configuration> disable-PnpDevice "PCI\VEN_1425&DEV_5400&SUBSYS_00001425&REV_00\4&110E1C6D&0A0408"
Confirm
Are you sure you want to perform this action?
Performing the operation "Disable" on target "win32_PnpEntity: Chelsio T580-CR 40G Bus Enumerator (DeviceID = "PCI\VEN_1425&DEV_5400&SUBSYS_00001425&R...)".
[Y] Yes [A] Yes to All [N] No [L] No to All [?] Help (default is "Y"): Y
[10.193.187.132]: PS D:\ChelsioWire-5.0.0.51\Adapter Configuration> enable-PnpDevice "PCI\VEN_1425&DEV_5400&SUBSYS_00001425&REV_00\4&110E1C6D&0A0408"
Confirm
Are you sure you want to perform this action?
Performing the operation "Enable" on target "win32_PnpEntity: Chelsio T580-CR 40G Bus Enumerator (DeviceID = "PCI\VEN_1425&DEV_5400&SUBSYS_00001425&R...)".
[Y] Yes [A] Yes to All [N] No [L] No to All [?] Help (default is "Y"): Y
[10.193.187.132]: PS D:\ChelsioWire-5.0.0.51\Adapter Configuration>
```

Figure 40 - Committing changes

6.2. Assigning IP address

- Double click on the Network Connections icon and choose the Chelsio card entry and double click it.
- Click on the Properties button from the Local Area Connection X Status.
- Select "Internet Protocol (TCP/IP)" from the list and click on Properties button below it.

- iv. From the Internet Protocol (TCP/IP) Properties window, assign an IP Address (e.g. 192.169.1.10) and subnet mask (e.g. 255.255.255.0).
- v. Click on Ok and close on the other window.
- vi. Check to see if you can ping to some other address on this subnet.

7. Mass Deployment (Installer)

Using Unified Wire Installer's **Mass Deployment** feature, you can flash or erase Option ROM on multiple systems (nodes) simultaneously. The Installer utilizes **Unified Wire Manager's** Agent and Client components to implement this feature. The Client component must be installed on the host machine and the Agent component on the remote nodes.

7.1. Pre-deployment Configuration

A configuration file containing directives is required by the Installer during installation, flashing and erasing option ROM. Follow the steps mentioned below to generate and configure the file:

- i. Copy the Unified Wire Installer (ChelsioUwire-x.x.x.xx.exe) to a shared location accessible to all the nodes.
- ii. Open Windows PowerShell with administrative privileges (*right-click and select Run as Administrator*) and run the following command:

```
PS C:\Users\Administrator> .\ChelsioUwire-x.x.x.xx.exe -sampleconfig
```

The above command will generate a sample configuration file, *RemoteMachineconfig.txt*. It contains the following directives:

```
StartShareMachineInfo
ExecutablePath:\\<Machine-IP>\<Shared directory>\ChelsioUwire-x.x.x.xx.exe
User:<user>
Password:<password>
EndShareMachineInfo

StartOfCluster
<user>:<Password>
<IPAddress1>
<IPAddress2>
<IPAddress3>
<IPAddressN>
EndOfCluster
```



```
StartOfNonCluster
<IPAddress1>:<user1>:<Password1>
<IPAddress2>:<user2>:<Password2>
<IPAddress3>:<user3>:<Password3>
<IPAddressN>:<userN>:<PasswordN>
EndOfNonCluster
```

- iii. Open the configuration file and provide the following values:
 - a. Enter absolute path of the shared location where installer is copied to, for the *ExecutablePath* parameter.
 - b. Provide user credentials for the *User* and *Password* parameters of the machine where Installer was copied to.
 - c. Provide IP addresses of remote nodes between the *StartOfCluster* and *EndOfCluster* tags. Enter each node's IP address per line. If same user credentials are set for all the nodes, enter them after the *StartOfCluster* tag, separated by a colon.

E.g.:


```
StartOfCluster
admin:pass123
10.193.184.63
10.193.184.62
.
.
EndOfCluster
```

For machines with different user credentials, enter each node's IP address and corresponding user credentials per line between the *StartOfNonCluster* and *EndOfNonCluster* tags in the following format.

E.g.:

```
10.193.184.76:admin:pass789
10.193.184.78:admin:pass_456
```

- iv. Save the file to a desired location.



For successful deployment of UM components and flashing/erasing option ROM, please ensure that the host machine and remote nodes are in the same domain.

7.2. Flashing Option ROM

! Important

Unified Wire Installer will flash Option ROM onto the first Chelsio adapter present in remote node (adapter with index 0. See [Configuring using UM CLI](#) to determine adapter index). Hence, ensure that you either use a non-Chelsio adapter for corporate/private network or ensure that the Chelsio adapter used is not installed as first on remote nodes.

Option ROM can be flashed using two methods. Both methods involve deployment of UM components.

- **Deploying components and Flashing Option ROM together.**
- **Deploying components and Flashing Option ROM separately.**

i Note

- *Both methods mentioned above will flash option ROM only onto the first Chelsio adapter present in the remote node. If you plan to flash more adapters in the same node or add new nodes to the cluster, they will have to be added as members to a group and flashed using UM's CLI component. See [Configuring using UM CLI](#) for instructions.*
- *Flashing option ROM on remote nodes with inbox NDIS drivers will fail. Hence, please ensure that all nodes are updated to the latest version using the Unified Wire Installer.*

7.2.1. Deploying UM components and Flashing Option ROM together

- i. Run the following command to invoke the UM installer.

```
PS C:\Users\Administrator> .\ChelsioUwire-x.x.x.xx.exe -action  
flashoptionrom -config <config_file.txt>
```

- ii. Click the **Next** button for the Chelsio End User License Agreement Window.

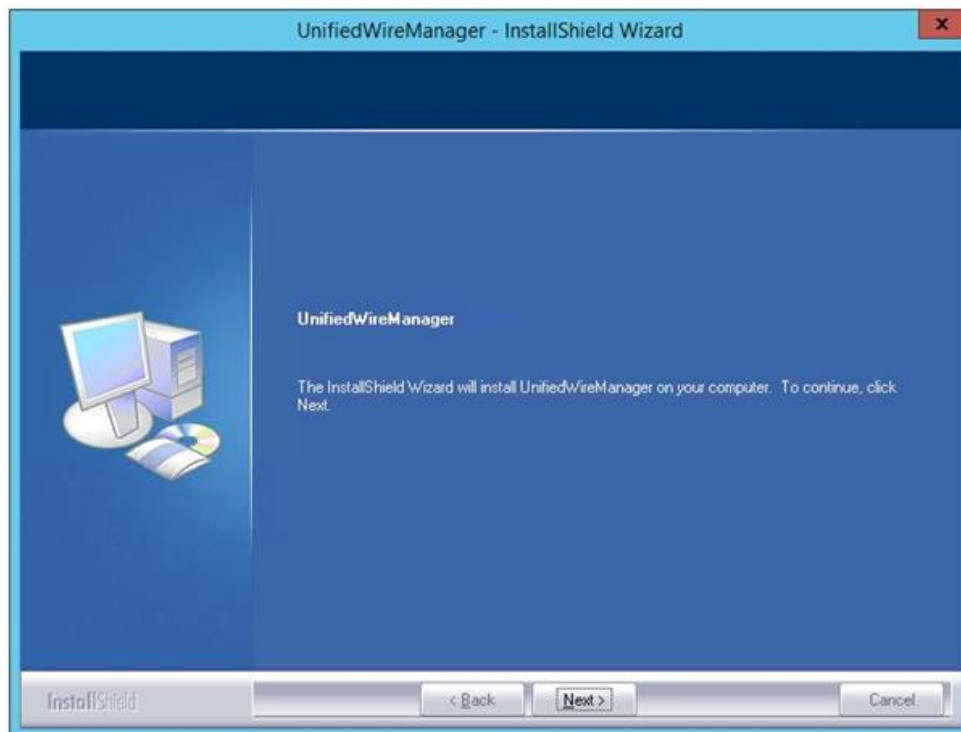


Figure 41 - UM Installer welcome window

- iii. Select the radio button **I accept the terms of the license agreement** and click **Next**.

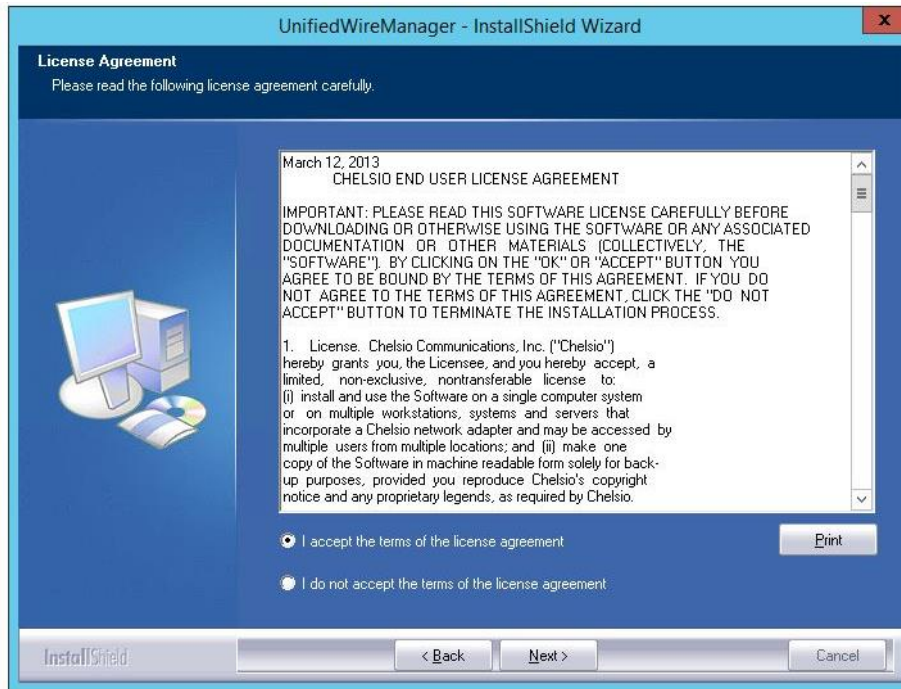


Figure 42 - Chelsio EULA window

- iv. The next window will display the pre-requisites for various UM components. Ensure that they are met before proceeding. Click **Next**.

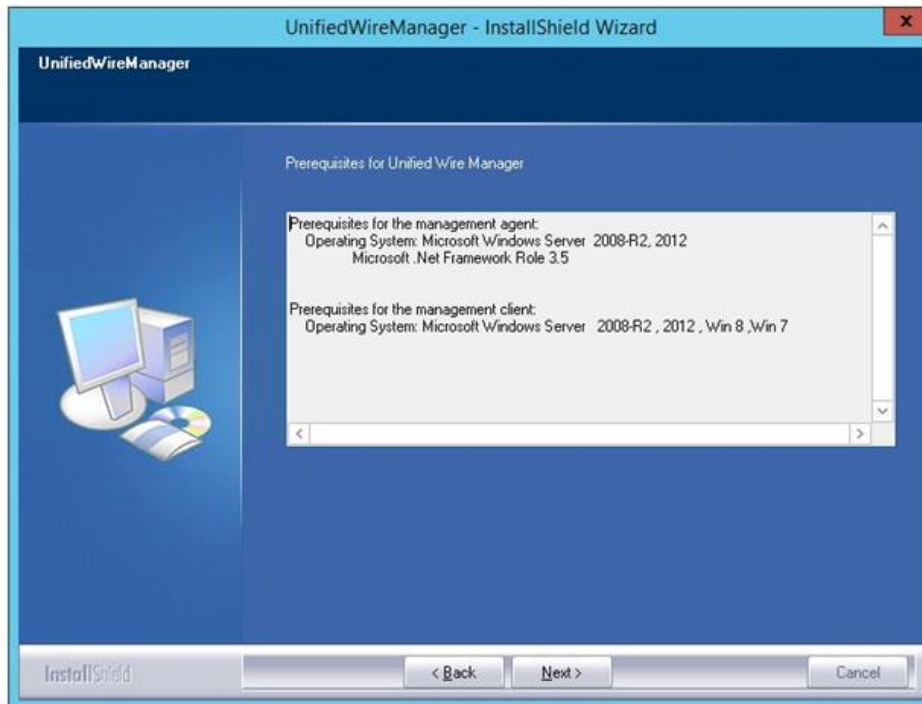


Figure 43 - UM prerequisites window

- v. Now, select **Custom** radio button to customize the installation. Click **Next**.

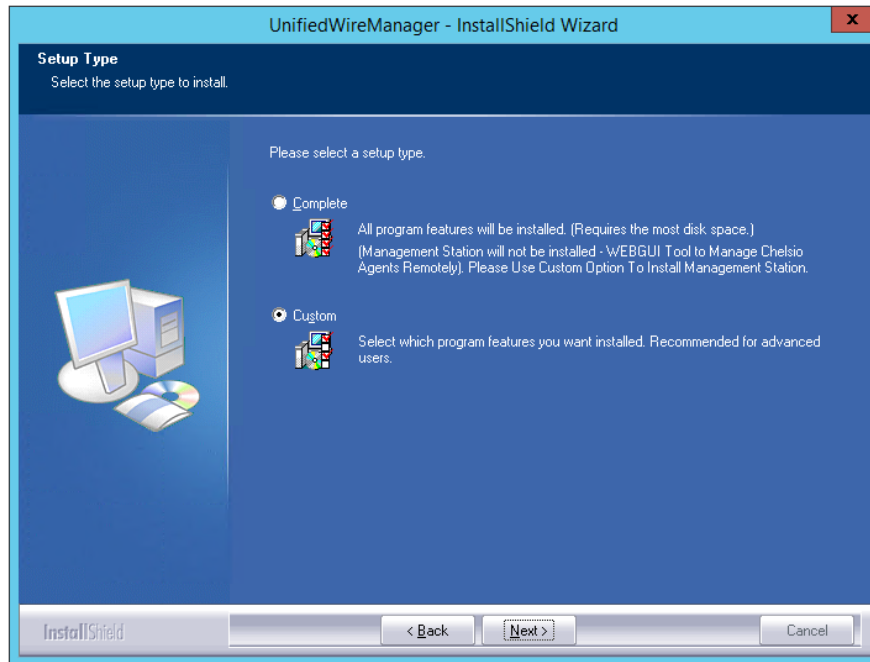


Figure 44 - UM prerequisites window

- vi. The next window will display the location where UM will be installed by default. You can change the location by using the **Change** button or click **Next** to continue with the default path.

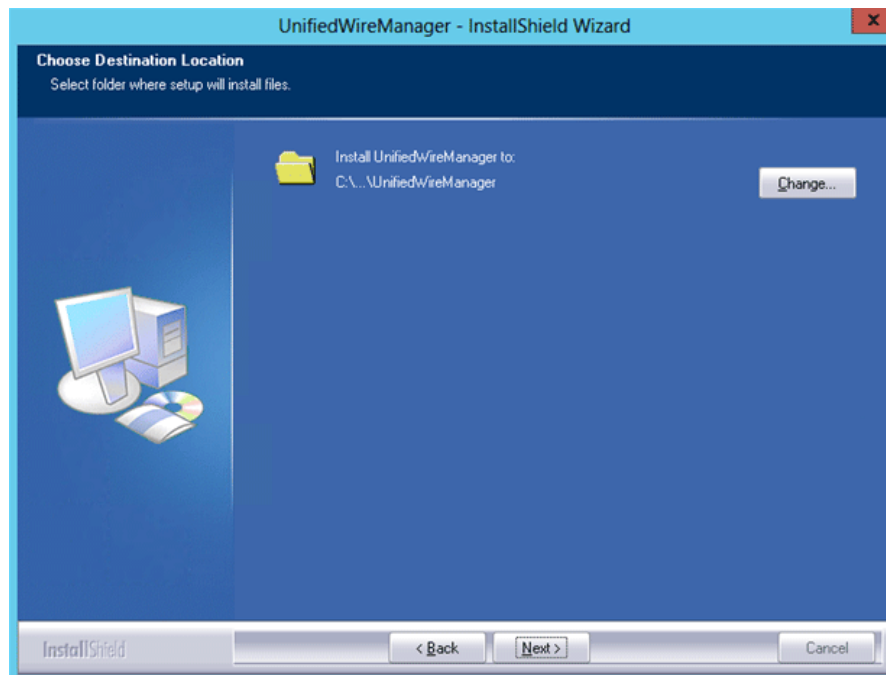


Figure 45 - Changing UM installation path

vii. Next, ensure that only **Client** is selected under features to be installed. Click **Next**.

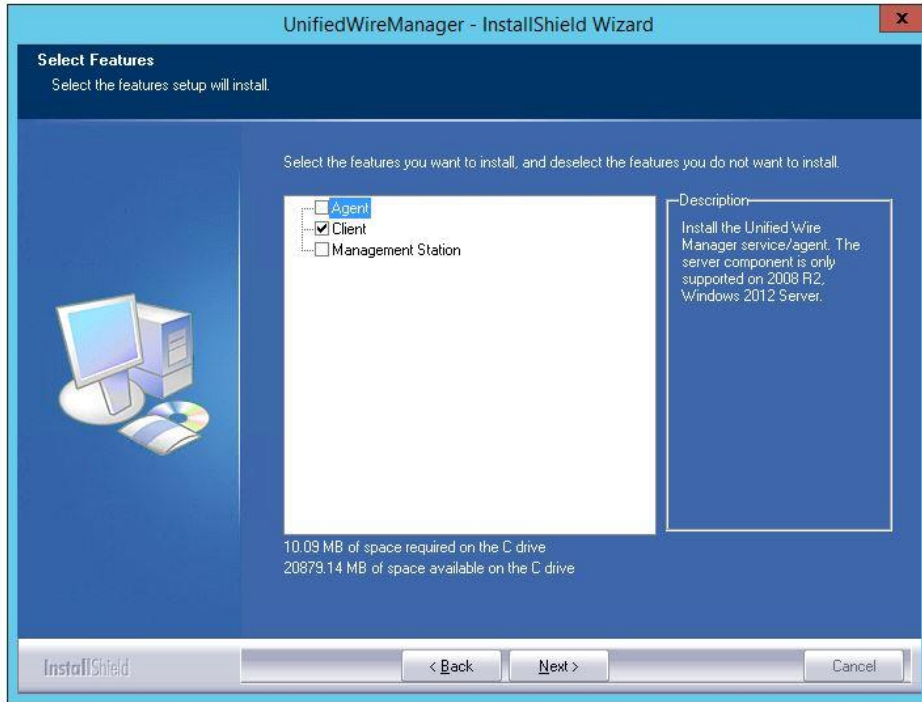


Figure 46 - Selecting UM components

viii. Click **Finish** to complete Client installation.

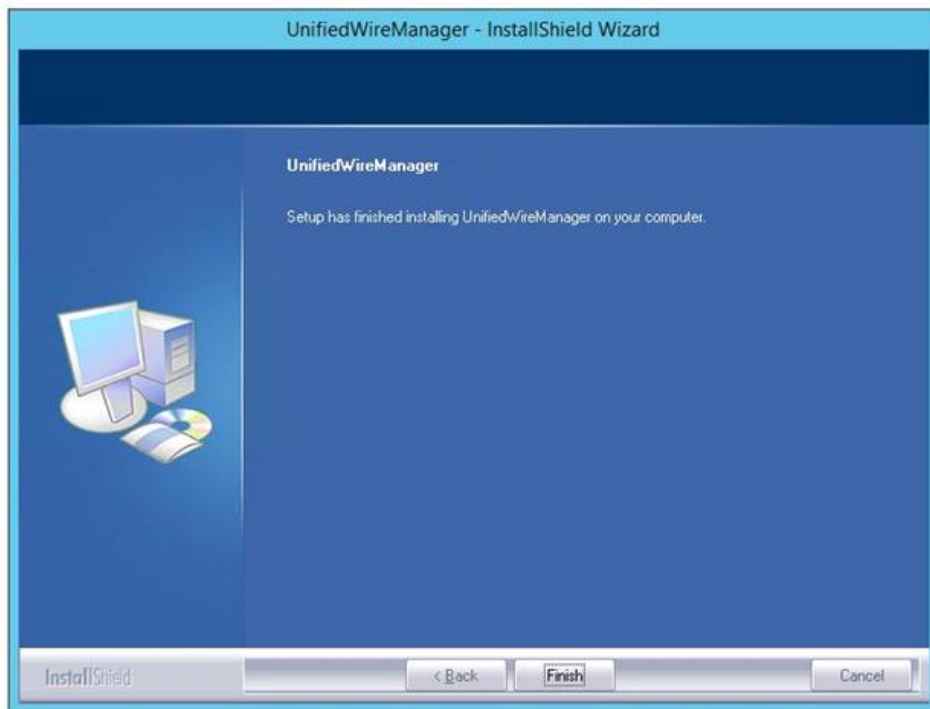


Figure 47 - Finishing UM installation

- ix. Now, installation of UM Agent component on remote nodes will commence.

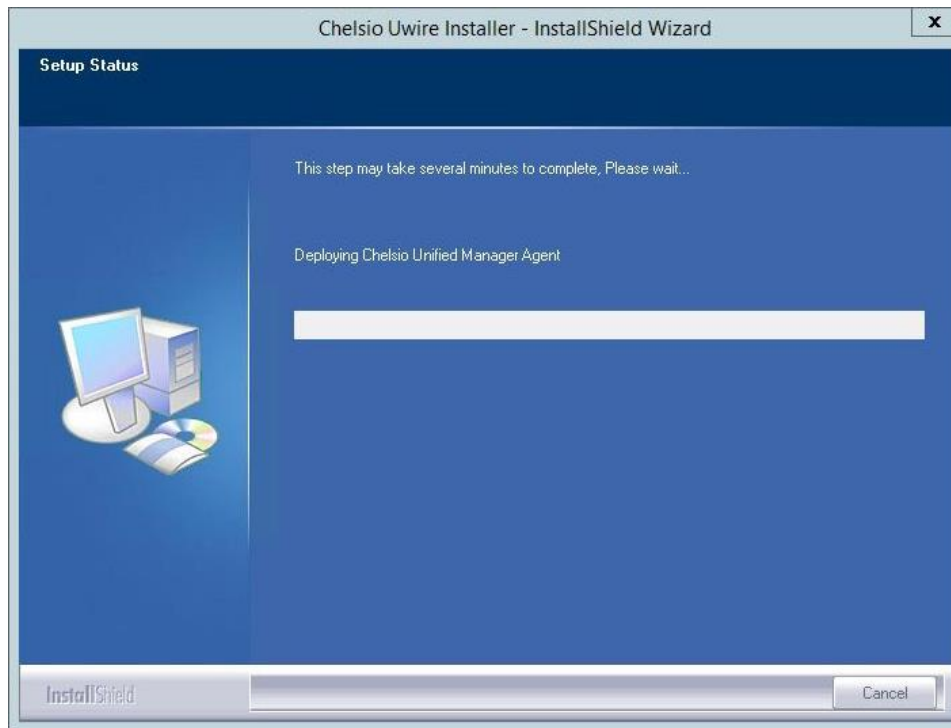


Figure 48 - Starting Agent installation

- x. Click **Agree** on the **PsExec License Agreement** window that appears. This window will appear only during first installation.

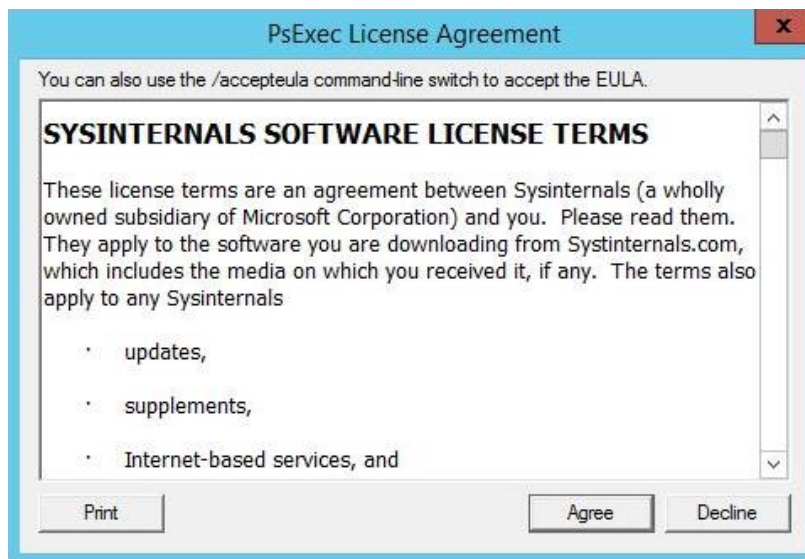


Figure 49 - PsExec license agreement

- xi. UM Agents will now be installed on remote nodes. A default group **OptionROM** will be created and all the nodes on which UM Agent was successfully installed, will be added to it as *members*.

```

-----
MassDeployment.ps1 Version 1.24
-----
10.193.150.53
Pinging...
Mapping...
Copying...
Launching Installer...
10.193.150.54
Pinging...
10.193.150.75
Pinging...
Mapping...
Copying...
Launching Installer...
10.193.185.117
Pinging...
Mapping...
Copying...
Launching Installer...
10.193.184.62
Pinging...
Mapping...
Copying...
Launching Installer...
Waiting For Agent Installation To Complete On All Nodes...
Creating Group 'OptionROM' And Adding Members to it...
    
```

Figure 50 - Agent installation on remote nodes

Important Please ensure that the **OptionROM** group created here is not deleted. Also, UM Client component should not be un-installed. Doing so will cause flashing/erasing Option ROM to fail on remote nodes. UM components will have to be deployed again to fix this issue.

- xii. Option ROM will now be flashed onto adapters on remote nodes present in the OptionROM group.

```

-----
MassDeployment.ps1 Version 1.24
-----
Flashing OptionROM On All The Nodes Present In Group "OptionROM" . Please Wait...
    
```

Figure 51 - Flashing option ROM

- xiii. After completion, a log file *MassDeploy.log* containing the summary of the process will be created. Click **OK** on the dialog box that appears to exit the installer and view the log.

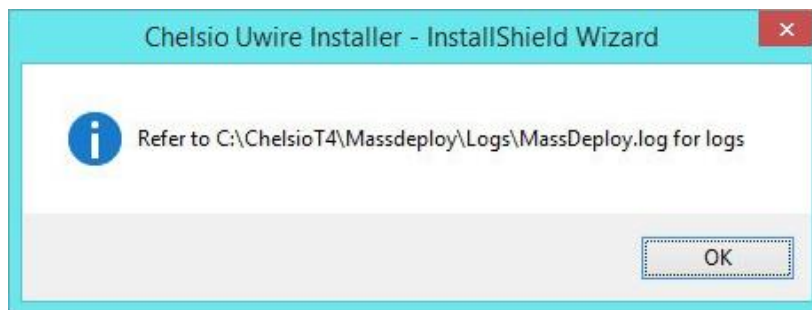


Figure 52 - Finishing option ROM flashing

7.2.2. Deploying UM components and Flashing Option ROM separately

- **Deploying UM Components**

- i. Run the following command to invoke the Unified Wire Installer.

```
PS C:\Users\Administrator> .\ChelsioUwire-x.x.x.xx.exe -action deployagent  
-config <config_file.txt>
```

- ii. Follow steps **(ii)-(xi)** in the [Deploying UM components and Flashing Option ROM together](#) section.
- iii. After completion, a log file *MassDeploy.log* containing the summary of the process will be created. Click **OK** on the dialog box that appears to exit the installer and view the log.

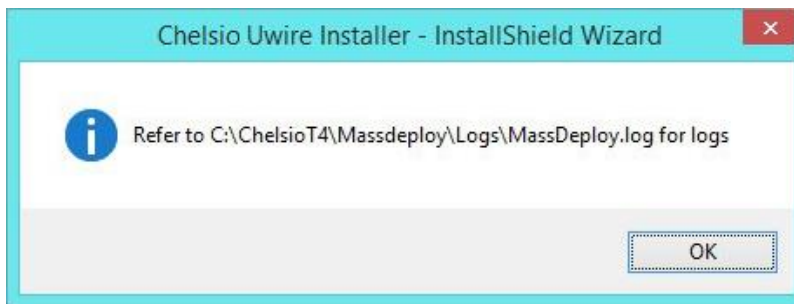


Figure 53 - Finishing UM components deployment

- **Flashing Option ROM**

- i. Run the following command to flash Option ROM:

```
PS C:\Users\Administrator> .\ChelsioUwire-x.x.x.xx.exe -action  
flashoptionrom
```

- ii. Flashing Option ROM is possible only if UM Agents were installed on nodes using this installer. Click **Yes** to continue.



Figure 54 - Starting option ROM flashing

- iii. Follow steps **xii** and **xiii** in the [Deploying UM components and Flashing Option ROM together](#) section.

Note *Flashing option ROM on remote nodes with inbox NDIS drivers will fail. Hence, please ensure that all nodes are updated to the latest version using the Unified Wire Installer.*

7.3. Erasing Option ROM

Note *Unified Wire Installer will erase option ROM only from the first Chelsio adapter present in the remote node. If you plan to erase from more adapters in the same node or add new nodes to the cluster, they will have to be added as members to a group and erased using UM's CLI component. See [Configuring using UM CLI](#) for instructions.*

- i. To erase OptionROM from adapters on all the nodes, run the following command:

```
PS C:\Users\Administrator> .\ChelsioUwire-x.x.x.xx.exe -action  
eraseoptionrom
```

- ii. Erasing OptionROM is possible only if the adapters were flashed using this installer. Click **Yes** to continue.

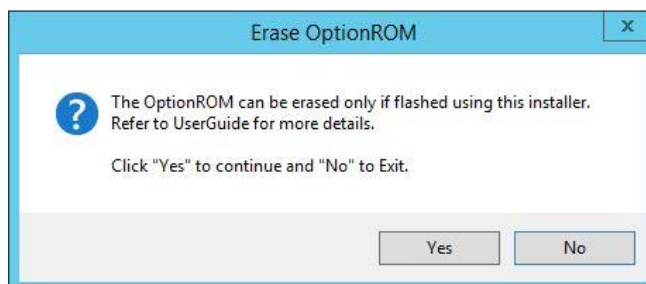


Figure 55 - Starting option ROM erasing

- iii. Option ROM will now be erased from adapters on nodes present in the **OptionROM** group.

```
-----  
MassDeployment.ps1 Version 1.24  
-----  
Erasing Option ROM From All Nodes Present In Group "OptionROM" .Please Wait...  
-
```

Figure 56 - Erasing option ROM on remote nodes

- iv. After completion, a log file *MassDeploy.log* containing the summary of the process will be created. Click **OK** on the dialog box that appears to exit the installer and view the log.

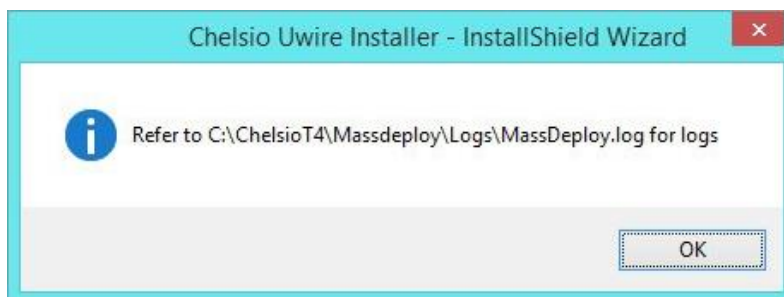


Figure 57 - Finishing option ROM erasing

7.4. Configuring using UM CLI

7.4.1. Configuring groups and members

You can manage multiple groups and members using Unified Wire Manager's CLI component, **chelsio_uwcli**.

Note To use the CLI component, you will have to change your working directory to the location where UM Client is installed. Typically, this will be **C:\Program Files (x86)\Chelsio Communications\UnifiedWireManager\client**. To avoid this and run the command from any path, you will need to reboot the host. The following examples assume that the host machine was rebooted before running commands.

- **Create Group**

To create a new group, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m creategroup
grpname=<new_group_name> OSType=windows GroupType=t4adapter
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m creategroup grpname=flash
OSType=windows GroupType=t4adapter
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m creategroup grpname=flash OSType=windows GroupType=t4adapter
Machine Group created successfully
```

Figure 58 - Creating group

- **Add member to group**

To add a member to a group, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m addmember
grpname=<group_name>
details="<IP_address>;<user_id>;<password>;*;*,*,<adapter_index>,*;*,*,*,*>"
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m addmember grpname=OptionROM
details="10.193.185.107;administrator;cdrom888;*;*,*0,*;*,*,*,*>"
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m addmember grpname=OptionROM details="10.193.185.107;administrator;cdrom888;*;*,*0,*;*,*,*,*>"
Machine added to group successfully
```

Figure 59 - Adding member to group

- **View group and member details**

To view details of all the groups and members created, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m list
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m list
Machine Group Details
-----
Group Name      : OptionROM
OSType          : windows
Group Type      : t4adapter

Member details
-----
index          : 0
hostname/IP address : 10.193.184.62
user           : administrator
password       : cdrom888
pci id         : *
ifname         : *
port instance  : *
adapter no     : 0
comment        : *
param1         : *
param2         : *
param3         : *
param4         : *

Member details
-----
index          : 1
hostname/IP address : 10.193.184.78
user           : administrator
password       : cdrom888
pci id         : *
ifname         : *
port instance  : *
adapter no     : 0
comment        : *
param1         : *
param2         : *
param3         : *
param4         : *
```

Figure 60 - Viewing group and member details

- **Delete member from a group**

To delete a member from a group, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletemember  
grpname=<group_name> index=<member_index>
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletemember  
grpname=OptionROM index=1
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletemember grpname=OptionROM index=1  
System removed from Machine Group Successfully  
PS C:\Users\Administrator>
```

Figure 61 - Deleting member from group

- **Delete Group**

To delete a group, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletegroup  
grpname=<group_name>
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletegroup  
grpname=OptionROM
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m deletegroup grpname=OptionROM  
Machine Group deleted successfully
```

Figure 62 - Deleting group

7.4.2. Flashing/Erasing Option ROM

Apart from Unified Wire Installer, you can also use Unified Wire Manager's CLI component (*chelsio_uwcli*) to flash or erase Option ROM on multiple nodes. This is particularly useful when you need to flash/erase Option ROM on groups other than the default **OptionROM** group.

- **Flashing Option ROM**

To flash Option ROM using UM, run the following command:


```
PS C:\Users\Administrator> chelsio_uwcli.exe chelsio flashrom  
adapter=BULKADAPTER path=<path_to_optionrom_image_file> -B <group_name>
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe chelsio flashrom  
adapter=BULKADAPTER path=C:\Users\Administrator\Desktop\cuwlbt4.bin -B  
OptionROM
```

```
PS C:\Users\Administrator> chelsio_uwcli.exe chelsio flashrom adapter=BULKADAPTER path=C:\Users\Administrator\Desktop\InstUM\cuwlbt4.bin -B OptionROM  
Executing...  
Sending File C:\Users\Administrator\Desktop\InstUM\cuwlbt4.bin Size 458752  
Completion Progress % (100%) ...  
File has been successfully transferred...!  
CLI version 2.4.59  
*****10.193.150.73*****  
Agent Version 2.4.59  
Command completed successfully.
```

Figure 63 - Flashing option ROM using UM CLI



Note *Flashing option ROM on remote nodes with inbox NDIS drivers will fail. Hence, please ensure that all nodes are updated to the latest version using the Unified Wire Installer.*

- **Viewing status**

You can list the adapters on local host and verify if Option ROM was successfully flashed using the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe chelsio listadapters -B  
<group_name>
```

E.g.

```
PS C:\Users\Administrator> chelsio_uwcli.exe chelsio listadapters -B  
OptionROM
```

```

PS C:\Users\Administrator>chelsio_uwcli.exe chelsio listadapters -B OptionROM
Executing...
CLI version 2.4.59
*****10.193.184.62*****
Agent Version 2.4.59

Adapter information:

Adapter #           : 0
Model              : T440-LP-CR
Serial Number      : NB15110005
Connector          : 10G FIBER_XFI
PHY               : No Phy / No information Available
PCI Vendor ID:Device ID : 1425:01b8
PCI Location       : 08:00:04
Factory MAC address : 00:07:43:04:75:01
OPROM              : Present
Bios Version       : 1.0.4.57

*****10.193.184.78*****
Agent Version 2.4.59

Adapter information:

Adapter #           : 0
Model              : T404-BT
Serial Number      : PT12110700
Connector          : 1G/100M BT_SGMII/RJ-45
PHY               : VCS8634
PCI Vendor ID:Device ID : 1425:01b8
PCI Location       : 02:00:04
Factory MAC address : 00:07:43:10:36:00
OPROM              : Present
Bios Version       : 1.0.4.57

```

Figure 64 - Viewing status

- **Erasing Option ROM**

To erase Option ROM using UM, run the following command:

```

PS C:\Users\Administrator> chelsio_uwcli.exe chelsio eraserom
adapter=BULKADAPTER force=1 -B <group_name>

```

In addition to flashing and erasing Option ROM, you can perform additional bulk operations on remote nodes like setting MTU and VLAN ID, changing adapter and port parameters, etc. To know more about these options available, run the following command:

```

PS C:\Users\Administrator> chelsio_uwcli.exe -

```

```

PS C:\Users\Administrator> chelsio_uwcli.exe chelsio eraserom adapter=BULKADAPTER force=1 -B OptionROM
Executing...
CLI version 2.4.59
*****10.193.150.73*****
Agent Version 2.4.59

Command completed successfully.

```

Figure 65 - Erasing option ROM using UM CLI

7.4.3. Help

To view Unified Wire Manager's CLI help, run the following command:

```
PS C:\Users\Administrator> chelsio_uwcli.exe -m
```


8. *cxgbtool/cxgbnano* help

The *cxgbtool* (*cxgbnano* for Nano Server) command queries or sets various aspects of Chelsio network interface cards. It complements standard tools used to configure network settings and provides functionality not available through such tools.

Some of the commands provided can be used to query running statistics to aid in debugging.

Syntax

```
cxgbtool [vbdIface|nicIface|iSCSIIface|rdma] [category] [command] [options]
```

In case of Nano Server, run the commands using **cxgbnano** instead of **cxgbtool**, i.e.,

```
cxgbnano [vbdIface|nicIface|iSCSIIface|rdma] [category] [commands] [options]
```

Definitions

[*nicIface*] is the name of the network device to work on, given in the format *nic[0]*, *nic[1]*.

[*vbdIface*] is the name of the Chelsio Bus Enumerator instance to work on, given in the format *vbd[0]*, *vbd[1]*

[*iscsIface*] is the name of the Chelsio iSCSI interface to work on, given in the format *iSCSI[0]*, *iSCSI[1]*

[*rdma*] is the name of the Chelsio RDMA interface to work on.

[*category*] is one of the *cxgbtool* categories, i.e., boot, cudbg, debug, firmware, hardware

[*command*] is the action you wish to perform on the adapter or property you wish to view/change.

[*option*] is the optional parameter to be provided with *command*.

• Help

- Displaying *cxgbtool* help: `cxgbtool`
- Displaying list of available *cxgbtool* commands: `cxgbtool -h all`
- Displaying category specific help:

```
cxgbtool [vbdIface|nicIface|iSCSIIface] [category] -h
```

- Displaying list of cudbg entities: `cxgbtool [vbdIface] cudbg dbg -h`
- Displaying RDMA help: `cxgbtool rdma -h`

- **boot**
 - **loadphy**

Description: Load phy firmware.

Syntax: `cxgbtool [vbdIface] boot loadphy [phyFile]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 boot loadphy .\Firmware_1.25.c1.Chelsio.cld
```

- **loadboot**

Description: Flash option ROM image.

Syntax: `cxgbtool [vbdIface] boot loadboot [bootImg]
[pf{val}|offset{val}|clear]`

Parameters:

pf{val}: Flash Option ROM image to the offset defined by the PFs EXPROM_OFST in the serial configuration. Valid value ranging 0-7.

offset {val}: Flash Option ROM image to the offset specified by the user.

clear: The flash area reserved for Option ROM image will be cleared.

Examples:

- Flashing Option ROM image to the offset defined by the PFs EXPROM_OFST:

```
C:\Users\Administrator>cxgbtool vbd0 boot loadboot C:\Users\Administrator\Desktop\cubt4.bin pf 0
```

- Flashing Option ROM image to user specified offset:

```
C:\Users\Administrator>cxgbtool vbd0 boot loadboot c:\Users\Administrator\Desktop\cubt4.bin offset 0x100
```

- **loadboot-cfg**

Description: Load boot configuration file.

Syntax: `cxgbtool [vbdIface] boot loadboot-cfg [bootConfigImg|clear]`

Parameters:

clear: The flash area reserved for boot configuration file will be cleared.

Examples:

- Loading boot configuration file:

```
C:\Users\Administrator>cxgbtool vbd0 boot loadboot-cfg Desktop\bootcfg
Cxgb_CmdLoadBootCfg: BootROM length: 1668, value2add:0
```

- Clearing the flash area:

```
C:\Users\Administrator>cxgbtool vbd0 boot loadboot-cfg clear
```

- **seeprom**

! Important Use this option with caution. Incorrect usage may render the adapter useless.

Description: Read/Write SEEPROM (init+VPD) data.

Syntax:

- Read SEEPROM data to a bin file: `cxgbtool [vbdIface] boot seeprom read`
- Display SEEPROM data onscreen: `cxgbtool [vbdIface] boot seeprom dump`
- Write SEEPROM data: `cxgbtool [vbdIface] boot seeprom write [file]`
- Verify SEEPROM data: `cxgbtool [vbdIface] boot seeprom verify [file]`

i Note The SEEPROM file should be in binary format (.bin).

Examples:

- Reading SEEPROM data:

```
C:\Users\Administrator>cxgbtool vbd0 boot seeprom read
Reading Seeprom data to seeprom.bin
```

- Displaying SEEPROM data onscreen

```
C:\Users\Administrator>cxgbtool vbd0 boot seeprom dump
Reading Seeprom data
Offset      Values
-----
0x0000:      15 07 02 00 00 00 00 00 30 00 07 22 80 00 32 04
0x0010:      31 b9 e5 68 20 70 01 10 b8 00 08 16 00 12 00 00
0x0020:      00 00 00 00 00 00 04 20 01 5c 00 00 64 de 1d 00
0x0030:      00 00 00 00 00 00 00 00 00 00 c3 18 43 00 c8 00
0x0040:      fe 01 86 36 f4 01 00 00 30 01 80 a2 05 23 00 00
```

- Writing SEEPROM data:

```
C:\Users\Administrator>cxgbtool vbd0 boot seeprom write seeprom.bin
Changing the init/vpd can cause the card to become inaccessible if the operation is interrupted
Do you want to flash your T6225-CR (SN:PT43160304,PN:11012096004,NA:0007433987F0) card? (y/n) : y
Hardware configuration changed successfully.
Please reboot for the changes to take effect
```

- Verifying SEEPROM data:

```
C:\Users\Administrator>cxgbtool vbd0 boot seeprom verify seeprom.bin
Verifying seeprom data against seeprom.bin

verification started
Verification : PASSED
```

- **serialinit**

! **Important** Use this option with caution. Incorrect usage may render the adapter useless.

Description: Read/Write serialinit data.

Syntax:

- Read serialinit data to a bin file: `cxgbtool [vbdIface] boot serialinit read`
- Display serialinit data onscreen: `cxgbtool [vbdIface] boot serialinit dump`
- Write serialinit data: `cxgbtool [vbdIface] boot serialinit write [file]`
- Verify serialinit data: `cxgbtool [vbdIface] boot serialinit verify [file]`

i **Note** The `initdata` file should be in binary format (`.bin`).

Examples:

- Reading serialinit data

```
C:\Users\Administrator>cxgbtool vbd0 boot serialinit read
Reading Serial Init data to seeprom_init.bin
```

- Displaying serialinit data onscreen

```
C:\Users\Administrator>cxgbtool vbd0 boot serialinit dump
Reading Serial Init data
Offset          Values
-----
0x0000:         15 07 02 00 00 00 00 00 30 00 07 22 80 00 32 04
0x0010:         31 b9 e5 68 20 70 01 10 b8 00 08 16 00 12 00 00
0x0020:         00 00 00 00 00 00 04 20 01 5c 00 00 64 de 1d 00
0x0030:         00 00 00 00 00 00 00 00 00 00 c3 18 43 00 c8 00
0x0040:         fe 01 86 36 f4 01 00 00 30 01 80 a2 05 23 00 00
0x0050:         00 00 f0 bc cc 08 20 27 90 98 80 91 02 c0 0b 00
0x0060:         6a 01 a4 46 12 16 c6 68 00 27 02 7d 00 14 00 40
0x0070:         99 08 4b 28 00 4a 28 f2 5f 06 42 16 e0 7d 00 00
0x0080:         00 00 00 00 00 80 08 00 04 00 08 00 04 00 53 05
0x0090:         00 00 0f c0 00 00 04 08 7d 42 9f c4 07 00 98 01
0x00a0:         00 30 10 02 02 e3 00 0c 00 40 80 d0 27 f4 49 7c
0x00b0:         00 80 29 00 00 03 21 20 30 0e c0 00 00 04 08 7d
```

- Writing serialinit data

```
C:\Users\Administrator>cxgbtool vbd0 boot serialinit write C:\Users\Administrator\Desktop\t62100_lp_cr_init_800_1050_gen3_x16_mfg.bin
Changing the init/vpd can cause the card to become inaccessible if the operation is interrupted
Do you want to flash your T62100-LP-CR (SN:RE4-1160048,PN:11012106002,MA:000743040390) card? (y/n) : y
Hardware configuration changed successfully.
Please reboot for the changes to take effect
```

- Verifying serialinit data

```
C:\Users\Administrator>cxgbtool vbd0 boot serialinit verify C:\Users\Administrator\Desktop\t62100_lp_cr_init_800_1050_gen3_x16_mfg.bin
Verifying Serial Init data against C:\Users\Administrator\Desktop\t62100_lp_cr_init_800_1050_gen3_x16_mfg.bin
Verification started
Verification : PASSED
```

▪ vpd


Important Use this option with caution. Incorrect usage may render the adapter useless.

Description: Read/write Vital Product Data (VPD).

Syntax:

- Read VPD to a bin file: `cxgbtool [vbdIface] boot vpd read`
- Display VPD onscreen: `cxgbtool [vbdIface] boot vpd dump`

- Write VPD: `cxgbtool [vbdIface] boot vpd write [file]`
- Verify VPD: `cxgbtool [vbdIface] boot vpd verify [file]`

 **Note** *The vpd file should be in binary format (.bin).*

Examples:

- Reading VPD:

```
C:\Users\Administrator>cxgbtool vbd0 boot vpd read
Reading Vpd data to seeprom_vpd.bin
```

- Displaying VPD onscreen:

```
C:\Users\Administrator>cxgbtool vbd0 boot vpd dump
Reading Vpd data
Offset      Values
-----
0x0000:      82 10 00 54 36 32 31 30  30 2d 4c 50 2d 43 52 20
0x0010:      20 20 20 90 ea 00 50 4e  10 31 31 30 31 32 31 30
0x0020:      36 30 30 32 20 20 20 20  20 45 43 10 30 30 30 30
0x0030:      30 30 30 30 30 30 30 30  30 30 30 30 53 4e 18 52
0x0040:      45 34 31 31 36 30 30 34  38 20 20 20 20 20 20 20
0x0050:      20 20 20 20 20 20 20 52  56 a6 a2 00 00 00 00 00
0x0060:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
0x0070:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
0x0080:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
0x0090:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
0x00a0:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
0x00b0:      00 00 00 00 00 00 00 00  00 00 00 00 00 00 00 00
```

- Writing VPD:

```
C:\Users\Administrator>cxgbtool vbd0 boot vpd write seeprom_vpd.bin
Changing the init/vpd can cause the card to become inaccessible if the operation is interrupted
Do you want to flash your T6225-CR (SN:PT43160304,PN:11012096004,NA:0007433987F0) card? (y/n) : y
Hardware configuration changed successfully.
Please reboot for the changes to take effect
```

- Verifying VPD:

```
C:\Users\Administrator>cxgbtool vbd0 boot vpd verify seeprom_vpd.bin
Verifying Vpd data against seeprom_vpd.bin

verification started
Verification : PASSED
```

- **vpdparams**

Description: Display adapter information like serial number, adapter name, EC, core clock, part Number and network address (MAC).

Syntax: cxgbtool [vbdIface] boot vpdparams

Example:

```
C:\Users\Administrator>cxgbtool vbd0 boot vpdparams
Serial Number : PT43160304
Id            : T6225-CR
Ec           : 0000000000000000
Core Clock   : 500000
Pn           : 11012096004
Network Addr : 0007433987F0
```

- **cudbg**

- **cudbg actions**

- **collect**

Description: Collect Chelsio adapter debug logs to a compressed file.

Syntax: cxgbtool [vbdIface] cudbg collect [entity] [outputFile][options]

Examples:

- Collecting debug log for all entities

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect all dump_file
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file dump_file... size: 12634452 bytes
cxgbtool: Done writing cudbg data to file dump_file
```

- Collecting debug log skipping specific debug entities

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect all dump_file skip edc1,edc0
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file dump_file... size: 12082984 bytes
cxgbtool: Done writing cudbg data to file dump_file
```

- o Collecting debug log avoiding entities that can affect running traffic

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect all dump_file safe
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file dump_file... size: 48484 bytes
cxgbtool: Done writing cudbg data to file dump_file
```

- view

Description: Display debug log onscreen stored in a compressed dump file.

Syntax: cxgbtool [vbdIface] cudbg view [entity] [inputFile][options]

Examples:

- o Displaying debug log for a specific entity onscreen.

```
C:\Users\Administrator>cxgbtool vbd0 cudbg view clk dump_file
cudbg_view() dbg entity : clk
Core clock period: 2 ns
TP timer tick: 32.768 us
TCP timestamp tick: 1048.576 us
DACK tick: 8.192 us
DACK timer: 488 us
Retransmit min: 960 us
Retransmit max: 9765440 us
Persist timer min: 976544 us
Persist timer max: 9765440 us
Keepalive idle timer: 7031116800 us
Keepalive interval: 73240800 us
Initial SRTT: 244128 us
FINWAIT2 timer: 9765440 us
```

- o Displaying debug log on the screen skipping specific entities

```
C:\Users\Administrator>cxgbtool vbd0 cudbg view all dump_file2 skip vpddata,regdump,cmla
cudbg_view() dbg entity : devlog
Seq#  Istamp  Level  Facility  Message
15    539161   INFO   CORE      configured with caps nbn|link 0x00000005 switch|nic 0x00030003 toe|rdma 0x00010003 iscsi|crypto 0x00010000 fcoe:0x0
16    539184   INFO   HW        hw_tp_tcp_tunings: tuning for cluster environment
17    540345   INFO   HW        MC: GPO 0x9, RLO 0x1
18    541130   INFO   HW        MC: GPO 0x9, RLO 0x1
19    541136   INFO   HW        DDR init complete, Beginning calibration
20    541762   INFO   HW        MC: Initial calibration PASSED
21    546415   INFO   RES       le configuration: nentries 3072 clip 384 normal filter 384 hi priority filter 0 server 128 active 2560 hash 16384 nservernram 0
22    547142   INFO   DCB       dcbx_ieee_cmdh[0] requesting DCB_IEEE_CMD
23    548132   INFO   DCB       dcbx_ieee_cmdh[1] requesting DCB_IEEE_CMD
24    1334252  INFO   RES       mpartition_init: moved pmx_start from 0x00800000 to 0x006a0000 (EDRAM)
25    1334254  INFO   CORE      flr_timer_start: flowc_id 39212 00000000A07FFD80 buf 00000000A0336180
26    1350378  INFO   PORT      tls_key_start:0xffffffff, tls_key_size:0
27    1351406  INFO   RES       le initialization: nentries 3072 route 0 clip 384 filter 384 server 128 active 2560 hash 16384 nservernram 0
28    2511302  INFO   PORT      module[0]: fec ability of cable 0x800
29    2511303  INFO   PORT      module[0]: gpio 9 vendor id 001e62, identifier 0x0d, SFP28(byte 36/192) 0x0c, SFP(byte 3/131) 0xff, 1G (byte 6) 0xff
30    2511303  INFO   PORT      optical length(byte 15/142) 0, copper cable(byte 8/147) 0xff, length(byte 18/146) 2, module_type 0x04
31    2511304  INFO   PORT      hw_mac_init_port[0], ptype 0x11, speed 0x20, lanes 0xf, fec 0x800
32    2512304  NOTICE  TM        pktsched channel 0 sets speed (from 0) to 100000000 kbps
33    2512305  NOTICE  TM        ch_cl_rate[0/0]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
34    2512306  NOTICE  TM        ch_cl_rate[0/1]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
35    2512307  NOTICE  TM        ch_cl_rate[0/2]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
36    2512308  NOTICE  TM        ch_cl_rate[0/3]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
37    2512308  NOTICE  TM        ch_cl_rate[0/4]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
38    2512309  NOTICE  TM        ch_cl_rate[0/5]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
39    2512310  NOTICE  TM        ch_cl_rate[0/6]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
40    2512310  NOTICE  TM        ch_cl_rate[0/7]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
41    2512311  NOTICE  TM        ch_cl_rate[0/8]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
42    2512312  NOTICE  TM        ch_cl_rate[0/9]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
43    2512312  NOTICE  TM        ch_cl_rate[0/10]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
44    2512313  NOTICE  TM        ch_cl_rate[0/11]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
45    2512314  NOTICE  TM        ch_cl_rate[0/12]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
46    2512314  NOTICE  TM        ch_cl_rate[0/13]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
47    2512315  NOTICE  TM        ch_cl_rate[0/14]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
48    2512315  NOTICE  TM        ch_cl_rate[0/15]: capped class rate from requested 100000000 to configured (effective) channel rate 99990260
49    2518866  INFO     PORT      module[1]: fec ability of cable 0x800
50    2518866  INFO     PORT      module[1]: gpio 14 vendor id 001e62, identifier 0x0d, SFP28(byte 36/192) 0x0c, SFP(byte 3/131) 0xff, 1G (byte 6) 0xff
51    2518867  INFO     PORT      optical length(byte 15/142) 0, copper cable(byte 8/147) 0xff, length(byte 18/146) 2, module_type 0x04
52    2518867  INFO     PORT      hw_mac_init_port[1], ptype 0x11, speed 0x20, lanes 0xf0, fec 0x800
53    2519805  INFO     TM        pktsched channel 1 sets speed (from 0) to 100000000 kbps
```


- **readflash**

Description: Collect debug log from adapter flash memory to a compressed file.

Syntax: cxgbtool [vbdIface] cudbg readflash [entity] [outputfile][options]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg readflash crash_dump
cxgbtool: Writing memory block of size 626688 bytes to file crash_dump...
cxgbtool: Done writing memory block to file crash_dump
```

- **info**

Description: Display summary of debug log present in a compressed dump file onscreen.

Syntax: cxgbtool [vbdIface] cudbg info [entity] [inputFile][options]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg info dump_file
regdump                compressed size 9972
devlog                 compressed size 4968
cimla                  compressed size 300
cimmala                compressed size 76
cimqcfg                compressed size 300
ibqtp0                 compressed size 488
ibqtp1                 compressed size 1828
ibqulp                 compressed size 376
ibqsge0                compressed size 436
ibqsge1                compressed size 1768
ibqncsi                compressed size 1800
obqulp0                compressed size 496
obqulp1                compressed size 456
obqulp2                compressed size 88
obqulp3                compressed size 88
obqsge                 compressed size 1372
obqncsi                compressed size 88
rss                    compressed size 100
rss_pf_config          compressed size 76
rss_key                compressed size 96
rss_vf_config          compressed size 116
rss_config             compressed size 84
pathmtu                compressed size 88
swstate                compressed size 80
wtp                    compressed size 328
pmstats                compressed size 140
hwsched                compressed size 72
tcpstats               compressed size 64
tperrstats             compressed size 68
fcoestats              compressed size 64
rdmastats              compressed size 64
tpindirect             compressed size 744
sgeindirect            compressed size 200
```

- **extract**

Description: Extract the compressed debug log in a human readable format to the specified path.

Syntax: `cxgbtool [vbdIface] cudbg extract [entity] [inputFile][dir]`

Examples:

- Extracting debug log for a specific entity to a specified path.

```
C:\Users\Administrator>cxgbtool vbd0 cudbg extract meminfo dump_file cudbg_log
cudbg_view() dbg entity : meminfo

Debug logs extracted to cudbg_log

C:\Users\Administrator>type cudbg_log\debug_1\meminfo.txt
EDC0:          0-0x3ffffff [4.00 MiB]
EDC1:          0x400000-0x7ffffff [4.00 MiB]
MC:           0x800000-0x407ffffff [1.00 GiB]
RQUQP region: 0xffffffff-0xffffffffe [0 B]
IMSG contexts: 0x271880-0x32b87f [744 KiB]
ULPTX state:  0x32b880-0x33527f [38.5 KiB]
ULPRX state:  0x335280-0x339e7f [19.0 KiB]
Pstructs:     0x339e80-0x3b967f [510 KiB]
Rx FL:        0x3b9680-0x3baabf [5.06 KiB]
Tx FL:        0x3baac0-0x3beabf [16.0 KiB]
Pstruct FL:   0x3beac0-0x3c3fff [21.3 KiB]
LE hash:      0x3c4000-0x403fff [256 KiB]
TCBs:         0x404000-0x66ffff [2.42 MiB]
Rx payload:   0x670000-0x7feffff [121 MiB]
DBQ contexts: 0x8180000-0x8239fff [744 KiB]
FLM cache:    0x823a000-0x835147f [1.09 MiB]
Timers:       0x8351480-0x87fffff [4.68 MiB]
TDDP region:  0x8800000-0x8f877ff [7.52 MiB]
iSCSI region: 0x8f87800-0x93877ff [4.00 MiB]
TPT region:   0x9387800-0xb92d1ff [37.6 MiB]
STAG region:  0x9387800-0xb92d1ff [37.6 MiB]
TXPBL region: 0xb92d200-0x1b92d1ff [256 MiB]
PBL region:   0xb92d200-0x1b92d1ff [256 MiB]
RQ region:    0x1b92d200-0x2047867f [75.2 MiB]
Tx payload:   0x20800000-0x387fffff [384 MiB]
uP RAM:       0x396f4000-0x407fffff [113 MiB]
uP Extmem2:   0-0xffffffff [0 B]
```

- Extracting debug log to a specified path skipping specific entities.

```
C:\Users\Administrator>cxgbtool vbd0 cudbg extract all dump_file cudbg_log skip cimla,mc0,mc1,swstate,maindirect,tpla,rss,letcam,dumpcontext,edc0,edc1
cudbg_view() dbg entity : regdump
cudbg_view() dbg entity : devlog
cudbg_view() dbg entity : cimmla
cudbg_view() dbg entity : cimqcfg
cudbg_view() dbg entity : ibqtp0
cudbg_view() dbg entity : ibqtp1
cudbg_view() dbg entity : ibqulp
cudbg_view() dbg entity : ibqsge0
cudbg_view() dbg entity : ibqsge1
cudbg_view() dbg entity : ibqnsci
cudbg_view() dbg entity : obqulp0
cudbg_view() dbg entity : obqulp1
cudbg_view() dbg entity : obqulp2
cudbg_view() dbg entity : obqulp3
cudbg_view() dbg entity : obqsge
cudbg_view() dbg entity : obqnsci
cudbg_view() dbg entity : rss_pf_config
cudbg_view() dbg entity : rss_key
cudbg_view() dbg entity : rss_vf_config
cudbg_view() dbg entity : rss_config
cudbg_view() dbg entity : pathmtu
cudbg_view() dbg entity : wtp
cudbg_view() dbg entity : pmstats
cudbg_view() dbg entity : hwsched
cudbg_view() dbg entity : tcpstats
cudbg_view() dbg entity : tpeprstats
cudbg_view() dbg entity : fcoestats
cudbg_view() dbg entity : rdmastats
cudbg_view() dbg entity : tpindirect
cudbg_view() dbg entity : sgeindirect
cudbg_view() dbg entity : cplstats
cudbg_view() dbg entity : ddpstats
cudbg_view() dbg entity : wcstats
cudbg_view() dbg entity : ulpxla
cudbg_view() dbg entity : lbstats
cudbg_view() dbg entity : meminfo
cudbg_view() dbg entity : cimpifla
cudbg_view() dbg entity : clk
cudbg_view() dbg entity : obq_sge_rx_q0
cudbg_view() dbg entity : obq_sge_rx_q1
cudbg_view() dbg entity : macstats
cudbg_view() dbg entity : pciindirect
cudbg_view() dbg entity : pmindirect
cudbg_view() dbg entity : full
cudbg_view() dbg entity : txrate
cudbg_view() dbg entity : tidinfo
```

- **dbg**

Description: Display debug log onscreen without storing it in any file.

Syntax: cxgbtool [vbdIface] cudbg dbg [entity]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg full
cudbg_view() dbg entity : full

Tx0 ==0=> T <=0= Rx0
Tx1 ==0=> P <=0= Rx1

Tx0 P =0=> S ? U =>0=> T
Tx1 C =0=> G ? T =>0=> P
    Rd Wr
RX0 P <=0=0=0 S <=0= C <=0= T <=T <=0= T <=0= M
RX1 C <=0=0=0 G <=0= X <=0= C <=P <=0= E <=0= P
```

- **tcb**

Description: Read hardware TCP Control Block, which contains details regarding all offloaded connections.

Syntax: cxgbtool [vbdIface] cudbg tcb [options]

Examples:

- Displaying tcb information for a given tid.

```

C:\Users\Administrator>cxgbtool vbd0 cudbg tcb -t 5050
TID Number 5050
STATE:
  CLOSED      (0 ), IPv4, lock_tid 0, rss_fw 0
  l2t_ix 0x0, smac sel 0x0, tos 0x0
  maxseg 0, recv_scaleflag 0, recv_tstamp 0, recv_sack 0
TIMERS:
  timer      0, dack_timer      0
  mod_schd: tx: 0, rx: 0, reason 0x0
  max_rt 0, rxtshift      0, keepalive 0
  timestamp_offset 0x0, timestamp 0x0
  t_rtt_ts_recent_age 0 t_rttseq_recent 0
  t_srtt 0, t_rttvar 0
TRANSMIT BUFFER:
  snd_una 0, snd_nxt 0, snd_max 0, tx_max 0
  core_fin 0, tx_hdr_offset 0
  rcv_adv 0 (rcv_scale 0 recv_scaleflag 0 active_open 0)
  snd_cwnd 0 snd_ssthresh 0 snd_rec 0
  cctrl: sel Reno, ecn 0, ece 0, cwr 0, rfr 0
  t_dupacks 0, dupack_count_odd 0, fast_recovery 0
  core_more 0, core_urg, 0 core_push 0, core_flush 0
  nagle 0, ssws_disable 0, turbo 0, tx_pdu_out 0
  tx_pace_auto 0, tx_pace_fixed 0, tx_queue 0 tx_quiesce 0
  tx_channel 0, tx_channel1 0, tx_channel0 0
  tx_hdr_ptr 0x0 tx_last_ptr 0x0 tx_compact 0
RECEIVE BUFFER:
  last_ack_sent 0 rx_compact 0

```

- Displaying list of used and retired tids.

```

C:\Users\Administrator>cxgbtool vbd0 cudbg tcb -b
TIDs:
  Currently used TIDs(in range[3072 - 19455])
  13144 13184 17968 18152

  Retired TIDs(in range [3072 - 19455]):
  6192 7552 13200 17952

STIDs:
  Currently used TIDs(in range[2560 - 2687])
  2560 2564 2568 2569

```

- o Displaying tcb information of all active tids.

```

C:\Users\Administrator>cxgbtool vbd0 cudbg tcb
TIDs:
TID Number 13144
STATE:
ESTABLISHED (4 ), IPv4, lock_tid 1, rss_fw 0
l2t_ix 0x0, smac sel 0x41, tos 0x0
maxseg 7, rcv_scaleflag 1, rcv_tstamp 0, rcv_sack 0
TIMERS:
timer 1, dack_timer 0
mod_schd: tx: 0, rx: 0, reason 0x0
max_rt 15, rxtshift 0, keepalive 1
timestamp_offset 0x0, timestamp 0x1b0
t_rtt_ts_recent_age 285667744 t_rttseq_recent 518540076
t_srtt 2, t_rttvar 3
TRANSMIT BUFFER:
snd_una 518540204, snd_nxt 518540204, snd_max 518540204, tx_max 518540204
core_fin 0, tx_hdr_offset 0
rcv_adv 32768 << 6 == 2097152 (rcv_scaleflag 1 rcv_scale 6 active open 0)
snd_cwnd 268435455 snd_ssthresh 268435455 snd_rec 251230524
cctrl: sel Tahoe, ecn 0, ece 0, cwr 0, rfr 0
t_dupacks 0, dupack_count_odd 0, fast_recovery 0
core_more 0, core_urg, 0 core_push 0, core_flush 0
nagle 0, ssws_disable 0, turbo 0, tx_pdu_out 0
tx_pace_auto 1, tx_pace_fixed 0, tx_queue 0 tx_quiesce 0
tx_channel 0, tx_channel1 0, tx_channel0 0
tx_hdr_ptr 0x1ffff tx_last_ptr 0x1ffff tx_compact 1
RECEIVE BUFFER:
last_ack_sent 504824648 rx_compact 1
rcv_nxt 504824648 hdr_off 0
frag0_idx 536898476 length 0 frag0_ptr 0x1ffff
frag1_idx 568972304 length 0
peer_fin 0, rx_pdu_out 0, pdu_len 0
rcv_wnd 2097152 >> snd_scale 6 == 32768, rcv_scaleflag = 1
dack_mss 0 dack 0, dack_not_acked: 0
rcv_coal 0 rcv_co_psh 0 rcv_co_last_psh 1 heart 0
rx_channel 0 rx_quiesce 0 rx_flow_ctrl_dis 1, rx_flow_ctrl_ddp 0
MISCELLANEOUS:
pend_ctl: 0x0, core_bypass: 0x0, main_slush: 0x40000000
Migrating 0, ask_mode 1, non_offload 0, rss_info 1
ULP: ulp_type 4 (RDMA), ulp_raw 3
RDMA: error 0, flm_err 0
qp_id 1030, pd_id 6, stag 0
irs_ulp 456, iss_ulp 304
tx_pdu_len 0
cq_idx_sq 1031, cq_idx_rq 1030
rq_start 1024, rq_MSN 936, rq_max_off 9, rq_write_ptr 168
L_valid 1, rdmap opcode 3
tx_flush: 0, tx_oos_rxmt 0, tx_oos_txmt 0

```

- o Displaying tcb information for given tid from a dump file.

```

C:\Users\Administrator>cxgbtool vbd0 cudbg tcb -f dump_file2 -t 5050
TID Number 5050
STATE:
  CLOSED      (0 ), IPv4, lock_tid 0, rss_fw 0
  l2t_ix 0x0, smac sel 0x0, tos 0x0
  maxseg 0, recv_scaleflag 0, recv_tstamp 0, recv_sack 0
TIMERS:
  timer      0, dack_timer      0
  mod_schd: tx: 0, rx: 0, reason 0x0
  max_rt     0, rxtshift        0, keepalive  0
  timestamp_offset 0x0, timestamp 0x0
  t_rtt_ts_recent_age 0 t_rttseq_recent 0
  t_srtt 0, t_rttvar 0
TRANSMIT BUFFER:
  snd_una 0, snd_nxt 0, snd_max 0, tx_max 0
  core_fin 0, tx_hdr_offset 0
  rcv_adv  0 (rcv_scale 0 recv_scaleflag 0 active_open 0)
  snd_cwnd 0 snd_ssthresh 0 snd_rec 0
  cctrl: sel Reno, ecn 0, ece 0, cwr 0, rfr 0
  t_dupacks 0, dupack_count_odd 0, fast_recovery 0
  core_more 0, core_urg, 0 core_push 0, core_flush 0
  nagle      0, ssws_disable 0, turbo      0, tx_pdu_out 0
  tx_pace_auto 0, tx_pace_fixed 0, tx_queue 0 tx_quiesce 0
  tx_channel 0, tx_channel1 0, tx_channel0 0
  tx_hdr_ptr 0x0 tx_last_ptr 0x0 tx_compact 0
RECEIVE BUFFER:
  last_ack_sent 0 rx_compact 0
  rcv_nxt 0 hdr_off 0
  frag0_idx 0 length 0 frag0_ptr 0x0
  frag1_idx 0 length 0 frag1_ptr 0x0
  frag2_idx 0 length 0 frag2_ptr 0x0
  frag3_idx 0 length 0 frag3_ptr 0x0
  peer_fin 0, rx_pdu_out 0, pdu_len 0
  rcv_wnd 0. (snd_scale 0, recv_scaleflag = 0)
  dack_mss 0 dack 0, dack_not_acked: 0
  rcv_coal 0 rcv_co_psh 0 rcv_co_last_psh 0 heart 0
  rx_channel 0 rx_quiesce 0 rx_flow_ctrl_dis 0, rx_flow_ctrl_ddp 0
MISCELLANEOUS:
  pend_ctl: 0x0, core_bypass: 0x0, main_slush: 0x0
  Migrating 0, ask_mode 0, non_offload 0, rss_info 0
  ULP: ulp_type 0 (TOE), ulp_raw 0, ulp_ext 0
  RDMA: error 0, flm_err 0
  aux1_slush0: 0x0 aux1_slush1 0x0
  pdu_hdr_len 0

```

- o Displaying list of used and retired tids from a dump file.

```
C:\Users\Administrator>cxgbtool vbd0 cudbg tcb -f dump_file -b
TIDs:
  Currently used TIDs(in range[3072 - 19455])
  13168  13240  17928  18112

  Retired TIDs (in range [3072 - 19455]):
  3352  3360  3400  3416  3424  3440  3456  3472  3496  3512
  3520  4864  4880  4904  4920  4928  4968  4984  5000  5024
  5040  5080  5088  5752  6176  6312  7432  7512  9176  9728
  9744  9784  9808  9832  9864  9888  9904  9928  9944  9968
  10248 10264 10272 10288 10312 10352 10384 10408 10432 10448
  10472 10488 11576 11736 11744 13080 13088 13248 13304 13832
  13848 13856 13872 13896 13912 13920 13936 13952 13968 14008
  14016 14032 14056 14336 14352 14376 14392 14400 14416 14440
  14472 14488 14496 14512 14536 14552 14560 14576 15616 15632
  15656 15672 15680 15696 15720 15736 15752 15768 15776 15792
  15816 15840 15856 17176 17184 17200 17224 17240 17248 17264
  17296 17320 17336 17344 17360 17384 17400 17992 18008 18032
  18064 18088 18512 18536

STIDs:
  Currently used TIDs(in range[2560 - 2687])
  2560  2564  2568  2569
```

- o Displaying tcb information for all active tids from a dump file.

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tcb -f dump_file
TIDs:
TID Number 13168
STATE:
  ESTABLISHED (4 ), IPv4, lock_tid 1, rss_fw 0
  l2t_ix 0x1, smac sel 0x41, tos 0x0
  maxseg 7, recv_scaleflag 1, recv_tstamp 0, recv_sack 0
TIMERS:
  timer 1, dack_timer 0
  mod_schd: tx: 0, rx: 0, reason 0x0
  max_rt 15, rxtshift 0, keepalive 1
  timestamp_offset 0x0, timestamp 0x1b9
  t_rtt_ts_recent_age 1645396424 t_rttseq_recent 2183343868
  t_srtt 2, t_rttvar 3
TRANSMIT BUFFER:
  snd_una 2183345212, snd_nxt 2183345212, snd_max 2183345212, tx_max 2183345212
  core_fin 0, tx_hdr_offset 0
  rcv_adv 32768 << 6 == 2097152 (recv_scaleflag 1 rcv_scale 6 active open 0)
  snd_cwnd 268435455 snd_ssthresh 268435455 snd_rec 2140287142
  cctrl: sel Tahoe, ecn 0, ece 0, cwr 0, rfr 0
  t_dupacks 0, dupack_count_odd 0, fast_recovery 0
  core_more 0, core_urg, 0 core_push 0, core_flush 0
  nagle 0, ssws_disable 0, turbo 0, tx_pdu_out 0
  tx_pace_auto 1, tx_pace_fixed 0, tx_queue 1 tx_quiesce 0
  tx_channel 1, tx_channel1 0, tx_channel0 1
  tx_hdr_ptr 0x1ffff tx_last_ptr 0x1ffff tx_compact 1
RECEIVE BUFFER:
  last_ack_sent 2210614520 rx_compact 1
  rcv_nxt 2210614520 hdr_off 0
  frag0_idx 2415939764 length 0 frag0_ptr 0x1ffff
  frag1_idx 2621265008 length 0
  peer_fin 0, rx_pdu_out 0, pdu_len 0
  rcv_wnd 2097152 >> snd_scale 6 == 32768, recv_scaleflag = 1
  dack_mss 0 dack 0, dack_not_acked: 0
  rcv_coal 0 rcv_co_psh 0 rcv_co_last_psh 1 heart 0
  rx_channel 0 rx_quiesce 0 rx_flow_ctrl_dis 1, rx_flow_ctrl_ddp 0
MISCELLANEOUS:
  pend_ctl: 0x0, core_bypass: 0x0, main_slush: 0x40000000
```

▪ **ps**

Description: Display pstruct information.

Syntax:

- Display pstruct info for given pstruct number:

```
cxgbtool [vbdIface] cudbg ps -t [psIndex]
```

- Display pstruct info of range for given index:

```
cxgbtool [vbdIface] cudbg ps -t [startIndex] [endIndex]
```

- Collect pstruct info from given dump file:

```
cxgbtool [vbdIface] cudbg ps -t [psIndex] -f [file]
```

Examples:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg ps -t 6
All region are zeros

C:\Users\Administrator>cxgbtool vbd0 cudbg ps -t 6 8
All region are zeros

C:\Users\Administrator>cxgbtool vbd0 cudbg ps -t 6 -f dump_file
All region are zeros
```

▪ **tddp**

Description: Displays TDDP region information.

Syntax:

- Display TDDP region info for given index:

```
cxgbtool [vbdIface] cudbg tddp -t [tddpIndex]
```

- Display TDDP region info of range for given index:

```
cxgbtool [vbdIface] cudbg tddp -t [startIndex] [endIndex]
```

- Collect tddp info from given dump file:

```
cxgbtool [vbdIface] cudbg tddp -t [tddpIndex] -f [file]
```


Examples:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg tddp -t 6
All region are zeros

C:\Users\Administrator>cxgbtool vbd0 cudbg tddp -t 6 8
All region are zeros

C:\Users\Administrator>cxgbtool vbd0 cudbg tddp -t 6 -f dump_file
All region are zeros
```

cudbg debug entities

- all

Description: Collect/Display debug logs for all cudbg entities

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract] all [file][dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect all dump_file
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file dump_file... size: 12634452 bytes
cxgbtool: Done writing cudbg data to file dump_file
```

- ibqtp0, ibqtp1

Description: Collect/Display CIM TP inbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ibqtp[0|1] [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ibqtp1
cudbg_view() dbg entity : ibqtp1
000000: 00000000 585bd8c4 00000000 2635e313
0x0010: 00000000 64d43b4c 00000000 30bc7dab
0x0020: 00000000 b62c807e 00000000 1bc764f4
0x0030: 00000000 e1635d82 00000000 02e0cc05
0x0040: 00000000 0786d541 00000000 db52c45b
0x0050: 00000000 bbd2a7d8 00000000 f98d23e3
0x0060: 00000000 e5eb3829 00000000 ed1892c2
0x0070: 00000000 aa3fbcd5 00000000 7efb1c73
0x0080: 00000000 fae5a9c1 00000000 c8b3b4f8
0x0090: 00000000 f0926d2a 00000000 443cfd95
0x00a0: 00000000 fb587d8b 00000000 82517038
0x00b0: 00000000 44b0b7f6 00000000 9536ce5d
0x00c0: 00000000 602e0788 00000000 5d072471
```

- **obqulp0, obqulp1, obqulp2, obqulp3**

Description: Collect/Display ULP outbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] obqulp[0|1|2|3] [file]
[dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg extract obqulp0 obqulp0_log C:\Users\Administrator\Desktop\obqulp0_dump
cudbg_view() dbg entity : obqulp0


Debug logs extracted to C:\Users\Administrator\Desktop\obqulp0_dump

C:\Users\Administrator>type C:\Users\Administrator\Desktop\obqulp0_dump\debug_1\obqulp0.txt
000000: 0180c200 000e0007 4304b397 88cc0207
0x0010: 04000743 04b39704 07030007 4304b397
0x0020: 06020078 fe190080 c2098000 01000032
0x0030: 32000000 00000002 02020202 020202fe
0x0040: 060080c2 0b8808fe 050080c2 0c000000
0x0050: 04000000 00992a07 81000000 00000060
0x0060: 0e0007e2 00000050 c0000000 00000000
0x0070: 0180c200 000e0007 4304b397 88cc0207
0x0080: 04000743 04b39704 07030007 4304b397
0x0090: 06020078 fe190080 c2098000 01000032
0x00a0: 32000000 00000002 02020202 020202fe
0x00b0: 060080c2 0b8808fe 050080c2 0c000000
0x00c0: 04000000 00992a07 81000000 00000060
0x00d0: 0e0007e2 00000050 c0000000 00000000
0x00e0: 0180c200 000e0007 4304b397 88cc0207
0x00f0: 04000743 04b39704 07030007 4304b397
```

- **edc0, edc1**

Description: Collect/Display EDC memory details.

Syntax: cxgbtool [vbdIface] cudbg [collect|extract] edc[0|1] [file] [dir]

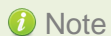 *It is recommended that the file be provided without any extension.*

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect edc0 edc0_log
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file edc0_log... size: 557476 bytes
cxgbtool: Done writing cudbg data to file edc0_log
```

- **rss_key**

Description: Collect/Display RSS Key.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rss_key [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg rss_key
cudbg_view() dbg entity : rss_key
9c28c016ae7acf821e81ce345e70ec69eb194a76eaebc7f7fdae657b006b5e731d23fc4caee6ba81
```

- **pmstats**

Description: Collect/Display Page memory statistics.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pmstats [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect pmstats log_pmstats
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_pmstats... size: 3768 bytes
cxgbtool: Done writing cudbg data to file log_pmstats

C:\Users\Administrator>cxgbtool vbd0 cudbg view pmstats log_pmstats
cudbg_view() dbg entity : pmstats
      Tx pcmds          Tx bytes
Read:                2              2
Write bypass:       6082         4384876
Write mem:           0              0
Bypass + mem:    252126        336115740
      Rx pcmds          Rx bytes
Read:                0              0
Write bypass:    254793        335348101
Write mem:         0              0
Flush:            491268        28987578
      Total wait      Total Occupancy
Tx FIFO wait      1820         2410484836
Rx FIFO wait      1179         2555337154
      Reads          Total wait
Tx latency        2             136
Rx latency        0              0
```

- **tpindirect**

Description: Collect/Display TP indirect registers.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] tpindirect [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tpindirect
cudbg_view() dbg entity : tpindirect

TP_PIO

[0x07e40:0x00020] TP_RX_SCHED_MAP          0x15151515    353703189
  31:24 S_RXMAPCHANNEL3                   0x15          21
  23:16 S_RXMAPCHANNEL2                   0x15          21
  15:8  S_RXMAPCHANNEL1                   0x15          21
  7:0   S_RXMAPCHANNEL0                   0x15          21
[0x07e40:0x00021] TP_RX_SCHED_SGE        0xf           15
  15:12 S_RXSGEMOD1                       0             0
  11:8  S_RXSGEMOD0                       0             0
  3:3   S_RXSGECHANNEL3                   0x1           1
  2:2   S_RXSGECHANNEL2                   0x1           1
  1:1   S_RXSGECHANNEL1                   0x1           1
  0:0   S_RXSGECHANNEL0                   0x1           1
[0x07e40:0x00022] TP_TX_SCHED_MAP        0x7777        30583
  15:12 S_TXMAPCHANNEL3                   0x7           7
  11:8  S_TXMAPCHANNEL2                   0x7           7
  7:4   S_TXMAPCHANNEL1                   0x7           7
  3:0   S_TXMAPCHANNEL0                   0x7           7
[0x07e40:0x00023] TP_TX_SCHED_HDR        0x21212121   555819297
  31:28 S_TXMAPHDRCHANNEL7                0x2           2
  27:24 S_TXMAPHDRCHANNEL6                0x1           1
  23:20 S_TXMAPHDRCHANNEL5                0x2           2
  19:16 S_TXMAPHDRCHANNEL4                0x1           1
  15:12 S_TXMAPHDRCHANNEL3                0x2           2
  11:8  S_TXMAPHDRCHANNEL2                0x1           1
  7:4   S_TXMAPHDRCHANNEL1                0x2           2
  3:0   S_TXMAPHDRCHANNEL0                0x1           1
```

▪ **lbstats**

Description: Collect/Display loopback statistics.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] lbstats [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg lbstats
cudbg_view() dbg entity : lbstats
                Loopback 0          Loopback 1
OctetsOK:                0                0
FramesOK:                 0                0
BcastFrames:             0                0
McastFrames:             0                0
UcastFrames:             0                0
ErrorFrames:             0                0
Frames64:                 0                0
Frames65To127:           0                0
Frames128To255:          0                0
Frames256To511:          0                0
Frames512To1023:         0                0
Frames1024To1518:        0                0
Frames1519ToMax:         0                0
FramesDropped:           0                0
BG0FramesDropped:        0                0
BG1FramesDropped:        0                0
BG2FramesDropped:        0                0
BG3FramesDropped:        0                0
BG0FramesTrunc:          0                0
BG1FramesTrunc:          0                0
BG2FramesTrunc:          0                0
BG3FramesTrunc:          0                0
```

- **obq_sge_rx_q0, obq_sge_rx_q1**

Description: Collect/Display CIM SGE outbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] obq_sge_rx_q[0|1] [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect obq_sge_rx_q1 log_obq1
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_obq1... size: 5536 bytes
cxgbtool: Done writing cudbg data to file log_obq1

C:\Users\Administrator>cxgbtool vbd0 cudbg view obq_sge_rx_q1 log_obq1
cudbg_view() dbg entity : obq_sge_rx_q1
000000: 8bd4ab13 8a9c760c 5fc4cb0c ba602958
0x0010: 5b0b3a2e 7128dbb1 59a86bbf 5fb76a36
0x0020: caa71e0d 4c529e57 ef1856bf 72c1b994
0x0030: 05e13fbb abf4790f b2ceb331 55752b17
0x0040: 06f1cca5 a4a7e487 03070ef6 593fd343
0x0050: b27508c3 3398f9fe c9fb3a3f c4764f6e
0x0060: b05d6e72 c27f2720 753d30c3 90b77f7e
0x0070: 64c942d8 5c5e12b7 95bb3f52 77df3f9f
0x0080: 2e599dfa 4a92e017 73c6ce8d e21b9cfd
0x0090: 674eeb9e c341ef7c 0a382eb3 4e88aa37
0x00a0: 5d24e302 09fb265e 7f09f610 bac48061
0x00b0: 4b9874a7 6b3ab537 0e65a4bf 6ba1999d
0x00c0: 271f051e a00473ab 289c8116 02b2140c
0x00d0: ac54bf88 8a9644fe becee46a 7046bcd4
0x00e0: 23dcf548 a31f7fa3 55c60c60 b5167208
0x00f0: cea8274b 37055cb4 e9c91678 6e6b94b9
```

- **tidinfo**

Description: Collect/Display TID information

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] tidinfo [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tidinfo
cudbg_view() dbg entity : tidinfo

TID INFO

TID range: 0..2559/3072..19455
STID range: 2560..2687
HW TID usage: 0 IP users, 0 IPv6 users
```

- **cctrl**

Description: Collect/Display Congestion control table.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cctrl [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbdo cudbg dbg cctrl
cudbg_view() dbg entity : cctrl
0:  24 108 236 268 384 492 620 724
   730 981 1004 2028 2156 4076 4480 4780
1:   8  36  78  89 128 164 206 241
   243 327 334 676 718 1358 1493 1593
2:   4  21  47  53  76  98 124 144
   146 196 200 405 431 815 896 956
3:   3  15  33  38  54  70  88 103
   104 140 143 289 308 582 640 682
4:   2  10  23  26  38  49  62  72
   73  98 100 202 215 407 448 478
5:   2   7  16  19  27  35  44  51
   52  70  71 144 154 291 320 341
6:   2   5  11  13  19  24  31  36
   36  49  50 101 107 203 224 239
7:   2   3   8   9  13  17  22  25
   26  35  35  72  77 145 160 170
8:   2   2   5   6   9  12  15  18
   18  24  25  50  53 101 112 119
```

- **mboxlog**

Description: Collect/Display firmware mailbox command/reply log information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] mboxlog [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbdo cudbg collect mboxlog log_mbox
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_mbox..., size: 11080 bytes
cxgbtool: Done writing cudbg data to file log_mbox

C:\Users\Administrator>cxgbtool vbdo cudbg view mboxlog log_mbox
cudbg_view() dbg entity : mboxlog
Seq      Tstamp  Atime  Etime  Command/Reply
3374     12225642  0      0      01c00010 00000004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3375     12225643  0      1      01000010 00560004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3376     12225643  0      0      01c00010 00000004 0000003b 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3377     12225643  0      1      01000010 00560004 0000003b 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3378     12225643  0      0      01c00010 00000004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3379     12225643  0      1      01000010 00560004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3380     12225643  0      0      01c00010 00000004 0000003b 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3381     12225643  0      1      01000010 00560004 0000003b 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3382     12225643  0      0      01c00010 00000004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
3383     12225643  0      1      01000010 00570004 0000003a 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0
00000000 00000000
```

- **regdump**

Description: Collect/Display hardware module registers.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] regdump [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg regdump
cudbg_view() dbg entity : regdump
[0x1e000] SGE_PF_KDOORBELL          0          0
  31:15 QID                        0          0
  14:14 Sync                        0          0
  13:13 Type                        0          0
  12:0  PIDX                        0          0
[0x1e004] SGE_PF_GTS                0          0
  31:16 IngressQID                 0          0
  15:13 TimerReg                   0          0
  12:12 SEIntArm                   0          0
  11:0  CIDXInc                     0          0
[0x1e008] SGE_PF_KTIMESTAMP_LO     0x7467a7f6 1952950262
[0x1e00c] SGE_PF_KTIMESTAMP_HI     0x3ac3      15043
[0x1e400] SGE_PF_KDOORBELL          0          0
  31:15 QID                        0          0
  14:14 Sync                        0          0
  13:13 Type                        0          0
  12:0  PIDX                        0          0
```

- **rss_vf_config**

Description: Collect/Display RSS VF Configuration.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rss_vf_config [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect rss_vf_config log_rssvfconfig
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_rssvfconfig... size: 3696 bytes
cxgbtool: Done writing cudbg data to file log_rssvfconfig

C:\Users\Administrator>cxgbtool vbd0 cudbg view rss_vf_config log_rssvfconfig
cudbg_view() dbg entity : rss_vf_config
  RSS
  Enable IVF Dis Enb Hash Tuple Enable
  VF Chn Prt Map VLAN uP IPv6 IPv4 UDP Def Secret Key
  0 no no 0 no no no no no no no 0 0 0
  1 no no 0 no no no no no no no 0 0 0
  2 no no 0 no no no no no no no 0 0 0
  3 no no 0 no no no no no no no 0 0 0
  4 no no 0 no no no no no no no 0 0 0
  5 no no 0 no no no no no no no 0 0 0
  6 no no 0 no no no no no no no 0 0 0
  7 no no 0 no no no no no no no 0 0 0
  8 no no 0 no no no no no no no 0 0 0
  9 no no 0 no no no no no no no 0 0 0
 10 no no 0 no no no no no no no 0 0 0
 11 no no 0 no no no no no no no 0 0 0
 12 no no 0 no no no no no no no 0 0 0
```


- **hwsched**

Description: Collect/Display hardware scheduler information

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] hwsched [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg extract hwsched log_hwsched C:\Users\Administrator\Desktop\dump_hwsched
cudbg_view() dbg entity : hwsched

Debug logs extracted to C:\Users\Administrator\Desktop\dump_hwsched

C:\Users\Administrator>type Desktop\dump_hwsched\debug_1\hwsched.txt
Scheduler Mode Channel Rate (Kbps) Class IPG (0.1 ns) Flow IPG (us)
0 class 0 33502731 disabled disabled
1 class 1 33502731 disabled disabled
2 class 0 33502731 disabled disabled
3 class 1 33502731 disabled disabled
4 class 0 33502731 disabled disabled
5 class 0 33502731 disabled disabled
6 class 0 33502731 disabled disabled
7 class 0 33502731 disabled disabled
```

- **sgcindirect**

Description: Displays sge debug indirect registers.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] sgcindirect [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg sgcindirect
cudbg_view() dbg entity : sgcindirect

[0x10cc:0x1280] SGE_DEBUG_DATA_HIGH_INDEX_0 0x10cc 4300
[0x10cc:0x1284] SGE_DEBUG_DATA_HIGH_INDEX_1 0x10d0 4304
[0x10cc:0x1288] SGE_DEBUG_DATA_HIGH_INDEX_2 0 0
[0x10cc:0x128c] SGE_DEBUG_DATA_HIGH_INDEX_3 0x10 16
[0x10cc:0x1290] SGE_DEBUG_DATA_HIGH_INDEX_4 0x9900000b 2566914235
[0x10cc:0x1294] SGE_DEBUG_DATA_HIGH_INDEX_5 0x220055 2228309
[0x10cc:0x1298] SGE_DEBUG_DATA_HIGH_INDEX_6 0 0
[0x10cc:0x129c] SGE_DEBUG_DATA_HIGH_INDEX_7 0xf000 61440
[0x10cc:0x12a0] SGE_DEBUG_DATA_HIGH_INDEX_8 0x2520 9504
[0x10cc:0x12a4] SGE_DEBUG_DATA_HIGH_INDEX_9 0x8800 34816
[0x10cc:0x12a8] SGE_DEBUG_DATA_HIGH_INDEX_10 0 0
[0x10cc:0x12ac] SGE_DEBUG_DATA_HIGH_INDEX_11 0xffffffff22 4294967074
[0x10cc:0x12b0] SGE_DEBUG_DATA_HIGH_INDEX_12 0x200f5 131317
[0x10cc:0x12b4] SGE_DEBUG_DATA_HIGH_INDEX_13 0x880066 8912998
[0x10cc:0x12b8] SGE_DEBUG_DATA_HIGH_INDEX_14 0x5602c00 90188800
[0x10cc:0x12bc] SGE_DEBUG_DATA_HIGH_INDEX_15 0 0
```

- **tpla**

Description: Collect/Display TP la information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] tpla [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tpla
cudbg_view() dbg entity : tpla
RcfOpCodeOut: 4 State: 0 WcfState: 0 RcfOpSrcOut: 0 CRxError: 0 ERxError: 0
SanityFailed: 0 SpuriousMsg: 1 FlushInputMsg: 0 FlushInputCpl: 0
RssUpBit: 0 RssFilterHit: 0 Tid: 0 InitTcb: 0 LineNumber: 0 Emsg: 0
EdataOut: 0 Cmsg: 0 CdataOut: 0 EreadPdu: 0 CreadPdu: 0 TunnelPkt: 1
RcfPeerFin: 0 RcfReasonOut: 0 TxChannel: 0 RcfTxChannel: 0
RxChannel: 1 RcfRxChannel: 0 RcfDataOutSrdy: 0 RxDvld: 0 RxOoDvld: 0
RxCongestion: 0 TxCongestion: 0
CplCmdIn: 0 MpsVfVld: 1 MpsPf: 4 MpsVf: 66 SynIn: 0 AckIn: 0 FinIn: 0 RstIn: 0
DataIn: 0 DataInVld: 0 PadIn: 0 RxBufEmpty: 1 RxDdp: 0
RxFbCongestion: 0 TxFbCongestion: 0 TxPktSumSrdy: 0 RcfUlpType: 4
Eread: 0 Ebypass: 1 Esave: 0 Static0: 1 Cread: 0 Cbypass: 1 Csave: 0
CPktOut: 0 RxPagePoolFull: 2 RxLpbkPkt: 0 TxLpbkPkt: 0 RxVfValid: 1
SynLearned: 0 SetDelEntry: 0 SetInvEntry: 0 CpcmdDvld: 0 CpcmdSave: 0
RXPstructsFull: 0 EpcmdDvld: 1 EpcmdFlush: 0 EpcmdTrimPrefix: 0
EpcmdTrimPostfix: 0 ERssIp4Pkt: 0 ERssIp6Pkt: 0 ERssTcpUdpPkt: 0
ERssFceFipPkt: 0
```

- **macstats**

Description: Collect/Display MAC statistics for all ports.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] macstats [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg macstats
cudbg_view() dbg entity : macstats

Mac 0 Stats:
tx_octets                               370538854
tx_frames                                497874
tx_bcast_frames                           130
tx_mcast_frames                           2912
tx_ucast_frames                           494832
tx_error_frames                            0
tx_frames_64                              244729
tx_frames_65_127                          3130
tx_frames_128_255                          5411
tx_frames_256_511                          19
tx_frames_512_1023                          57
tx_frames_1024_1518                        244528
tx_frames_1519_max                          0
tx_drop                                    0
tx_pause                                    0
tx_ppp0                                     0
tx_ppp1                                     0
tx_ppp2                                     0
```

- **pcieconfig**

Description: Collect/Display PCIe configuration space information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pcieconfig [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg pcieconfig
cudbg_view() dbg entity : pcieconfig

          PCIE CONFIG

[0x00000:0x00000] PCIE_DEVID_VENID
   15:0 VendorID          0x64071425      1678185509
   31:16 DeviceID        0x1425          5157
[0x00000:0x00004] PCIE_STAT_CMD
   0:0 IOEnable          0              0
   1:1 MemEnable         0x1            1
   2:2 BusMasterEnable   0x1            1
   5:3 Rsvd1             0              0
   6:6 PERREnable        0              0
   7:7 Rsvd2             0              0
   8:8 SERREnable        0x1            1
   9:9 Rsvd3             0              0
  10:10 IntDisable      0x1            1
  18:11 Rsvd4            0              0
  19:19 IntStatus        0              0
  20:20 CapList          0x1            1
  23:21 Rsvd5            0              0
  24:24 MstDatParErr     0              0
  26:25 Rsvd6            0              0
  27:27 SigTgtAbort      0              0
  28:28 RcvTgtAbort      0              0
  29:29 RcvMstAbort      0              0
  30:30 SigSERR          0              0
  31:31 DetPERR          0              0
[0x00000:0x00008] PCIE_CCODEREVID
   7:0 RevisionID        0x2000000      33554432
  31:8 ClassCode         0x20000        131072
```

- **maindirect**

Description: Collect/Display MA indirect registers information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] maindirect [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg maindirect
cudbg_view() dbg entity : maindirect
[0x078f8:0x0a000] MA_SGE_THREAD_0_CLIENT_INTERFACE_EXTERNAL      0x48102242      1209016898
 31:31 CmdVld0          0                0
 30:30 CmdRdy0         0x1              1
 29:29 CmdType0       0                0
 28:21 CmdLen0        0x40             64
 20:8  CmdAddr0       0x1022          4130
 7:7  WrDataVld0      0                0
 6:6  WrDataRdy0     0x1              1
 5:5  RdDataRdy0     0                0
 4:4  RdDataVld0     0                0
 3:0  RdData0        0x2              2
[0x078f8:0x0a001] MA_SGE_THREAD_1_CLIENT_INTERFACE_EXTERNAL    0x48102242      1209016898
 31:31 CmdVld1          0                0
 30:30 CmdRdy1         0x1              1
 29:29 CmdType1       0                0
 28:21 CmdLen1        0x40             64
 20:8  CmdAddr1       0x1022          4130
 7:7  WrDataVld1     0                0
 6:6  WrDataRdy1     0x1              1
 5:5  RdDataRdy1     0                0
 4:4  RdDataVld1     0                0
 3:0  RdData1        0x2              2
[0x078f8:0x0a002] MA_ULP_TX_CLIENT_INTERFACE_EXTERNAL          0x40337f64      1077116772
 31:31 CmdVld2          0                0
 30:30 CmdRdy2         0x1              1
 29:29 CmdType2       0                0
 28:21 CmdLen2        0x1              1
 20:8  CmdAddr2       0x137f          4991
 7:7  WrDataVld2     0                0
 6:6  WrDataRdy2     0x1              1
 5:5  RdDataRdy2     0x1              1
 4:4  RdDataVld2     0                0
 3:0  RdData2        0x4              4
```

- **hmaindirect**

Description: Collect/Display HMA indirect registers information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] hmaindirect [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect hmaindirect log_hmaindirect
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_hmaindirect... size: 3760 bytes
cxgbtool: Done writing cudbg data to file log_hmaindirect

C:\Users\Administrator>cxgbtool vbd0 cudbg view hmaindirect log_hmaindirect
cudbg_view() dbg entity : hmaindirect
[0x51320:0x0a000] HMAT6_DEBUG_FSM_0
  22:18 edc_fsm                0x48555      296277
  17:15 ras_fsm_slv            0x1          1
  14:10 fc_fsm                 0x1          1
   9:8  cookie_arb_fsm         0x1          1
   7:6  pcie_chunk_fsm         0x1          1
   5:4  wtransfer_fsm          0x1          1
   3:2  wd_fsm                 0x1          1
   1:0  rd_fsm                 0x1          1
[0x51320:0x0a001] HMAT6_DEBUG_FSM_1
  20:11 sync_fsm              0xa21        2593
  10:9  ochk_fsm               0x1          1
   8:5  tlb_fsm                0x1          1
   4:0  pio_fsm                0x1          1
[0x51320:0x0a002] HMAT6_DEBUG_PCIE_INTF
  28:28 H_ReqVld              0            0
  27:27 H_ReqFull             0            0
  26:26 H_ReqSOP              0x1          1
  25:25 H_ReqEOP              0            0
  24:24 H_RspVld              0            0
  23:23 H_RspFull             0            0
  22:22 H_RspSOP              0            0
  21:21 H_RspEOP              0x1          1
  20:20 H_RspErr              0            0
  19:19 pcie_cmd_avail         0            0
  18:18 pcie_cmd_rdy          0            0
  17:17 pcie_wnr              0            0
  16:9  pcie_len               0x4          4
   8:8  pcie_trwdat_rdy        0            0
   7:7  pcie_trwdat_avail      0            0
```

- **devlog**

Description: Collect/Display firmware device log information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] devlog [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg devlog
cudbg_view() dbg entity : devlog
Seq#      Tstamp      Level  Facility  Message
 97      10844289     INFO   PORT     bean_fsm[0] : entering state BASEP_HANDLE
 98      10844290     INFO   PORT     bean_fsm[0] : entering state WAIT_COMPLETE
 99      10844291     INFO   PORT     bean_fsm[0] : IEEE ptype 0x11, remote 0xc, negotiated 0x800
100      10844292     INFO   PORT     bean_fsm[0] : state DONE
101      10844292     INFO   PORT     bean_fsm[0] : fec local 0xc, negotiated 0x800
102      10844293     INFO   PORT     hw_mac_init_port[0], ptype 0x11, speed 0x20, lanes 0xf, fec 0x800
103      10845290     INFO   PORT     port[0] negotiated ptype 0x11, speed 0x20, lanes 0xf:0xf, fec 0x800
104      10845291     INFO   PORT     aec_fsm[0] : state START (sigdet 0x7)
105      10845428     INFO   PORT     aec_fsm[0] : transitioning to TRAINING
106      11107578     INFO   PORT     aec_fsm[0] : TRAINING_COMPLETE
107      11107819     INFO   PORT     aec_fsm[0] : Remote fault while waiting for link status 0x29
108      11107950     INFO   PORT     aec_fsm[0] : Remote fault cleared while waiting for link status 0x22
109      11107952     INFO   PORT     hw_mac_link_status[0] int_cause 0x17015f4, link_status 0x22
110      11107954     INFO   PORT     aec_fsm[0] : DONE
111      11107954     INFO   PORT     bean/aec complete (retry: 1)
112      11107955     INFO   PORT     port_hss_sigdet[0]: hss_sigdet changed to 0xf
113      11204292     INFO   PORT     port[0] link up (1) (speed 0x20 acaps 0xc9f4 lpcaps 0xc0c0)
114      11204293     INFO   PORT     port[0] set PAUSE PARAMS: pppen 0 txpe 0x1 rxpe 0x1
115      11204294     INFO   DCB      dcbx_run_version_sm[0] DCBX_VER_STATE_RUN_IEEE
116      11204297     INFO   PORT     port[0] update (flowcid 39032 rc 0)
117      405304302    INFO   DCB      dcbx_timeout[0]
118      405304303    INFO   PORT     port[0] set PAUSE PARAMS: pppen 0 txpe 0x8 rxpe 0x8
119      405805680    INFO   PORT     port_hss_sigdet[0]: hss_sigdet changed to 0x0
120      405805680    INFO   PORT     port[0] link down (1) (lstatus 0xa)
121      405806057    INFO   PORT     port[0] update (flowcid 39032 rc 0)
122      405905315    INFO   PORT     bean_fsm[0] : state START (count = 1)
123      405905316    INFO   PORT     hw_mac_init_port[0], ptype 0x11, speed 0x8, lanes 0xf, fec 0x0
```

- **ibqulp**

Description: Collect/Display CIM ULP inbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ibqulp [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ibqulp
cudbg_view() dbg entity : ibqulp
000000: 3d000000 00980801 00001350 00000058
0x0010: 3d000000 00980801 000026e0 00000000
0x0020: 00000000 00980801 00000000 00000000
0x0030: 00000000 00980901 00000000 00000000
0x0040: 00000000 00980901 00000000 00000040
0x0050: 00000000 00980901 00000000 00000000
0x0060: 00000000 00980801 00000000 7657f010
0x0070: 00000000 00980801 00000000 01b876d0
0x0080: 00000000 00980901 00000000 00000000
0x0090: 00000000 00980901 00000000 00000000
0x00a0: 00000000 00980801 00000000 00000000
0x00b0: 00000000 00980801 00000000 00000000
0x00c0: 00000000 00980901 00000000 00000000
0x00d0: 00000000 00980901 00000000 00000018
0x00e0: 00000000 00980901 00000000 00000000
0x00f0: 00000000 00980901 00000000 008fb63c
0x0100: 00000000 00980801 00000000 00000000
0x0110: 00000000 00980801 00000000 00000018
```

- **mc0, mc1**

Description: Collect MC memory details.

Syntax: cxgbtool [vbdIface] cudbg [collect|extract] mc[0|1] [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg extract mc0 log_mc0 C:\Users\Administrator\Desktop\dump_mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
cudbg_view() dbg entity : mc0
Debug logs extracted to C:\Users\Administrator\Desktop\dump_mc0
```

 *Note* It is recommended that the dump file be provided without any extension.

- **rss_config**

Description: Collect/Display RSS Configuration.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rss_config [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg rss_config
cudbg_view() dbg entity : rss_config
TP_RSS_CONFIG: 0x300001c
Tnl4TupEnIpv6: no
Tnl2TupEnIpv6: no
Tnl4TupEnIpv4: no
Tnl2TupEnIpv4: no
TnlTcpSel: no
TnlIp6Sel: no
TnlVrtSel: yes
TnlMapEn: yes
OfdHashSave: no
OfdVrtSel: no
OfdMapEn: no
OfdLkpEn: no
Syn4TupEnIpv6: no
Syn2TupEnIpv6: no
Syn4TupEnIpv4: no
Syn2TupEnIpv4: no
Syn4TupEnIpv6: no
SynIp6Sel: no
SynVrt6Sel: no
SynMapEn: no
SynLkpEn: no
ChnEn: no
PrtEn: no
TnlAllLkp: no
```

- **tcpstats**

Description: Collect/Display IPv4/IPv6 TCP statistics.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] tcpstats [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tcpstats
cudbg_view() dbg entity : tcpstats
                IP                IPv6
OutRsts:                0                0
InSegs:                491270            0
OutSegs:                491262            0
RetransSegs:            2                0
```


- **cplstats**

Description: Collect/Display CPL Request and Response Statistics for all channels.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cplstats [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg view cplstats log_cplstats
cudbg_view() dbg entity : cplstats
                channel 0  channel 1
CPL requests:      246298      7
CPL responses:     1524       7
```

- **meminfo**

Description: Collect/Display memory information.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] meminfo [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg view meminfo log_meminfo
cudbg_view() dbg entity : meminfo
EDC0:      0-0x3fffff [4.00 MiB]
EDC1:      0x400000-0x7fffff [4.00 MiB]
MC:        0x800000-0x807fffff [2.00 GiB]
RQUUDP region: 0xffffffff-0xfffffff0 [0 B]
IMSG contexts: 0x23a480-0x2d047f [600 KiB]
ULPTX state:  0x2d0480-0x2d9dbf [38.3 KiB]
ULPRX state:  0x2d9dc0-0x2de9bf [19.0 KiB]
Pstructs:    0x2de9c0-0x3de5bf [1023 KiB]
Rx FL:       0x3de5c0-0x3e0f7f [10.4 KiB]
Tx FL:       0x3e0f80-0x3e8f7f [32.0 KiB]
Pstruct FL:  0x3e8f80-0x3f3a7f [42.7 KiB]
LE hash:     0x3f3a80-0x433a7f [256 KiB]
TCBs:       0x433a80-0x69ffff [2.42 MiB]
Rx payload:  0x6a0000-0x1011ffff [250 MiB]
DBQ contexts: 0x10280000-0x10315fff [600 KiB]
FLM cache:   0x10316000-0x10368c3f [331 KiB]
Timers:      0x10368c40-0x107fffff [4.58 MiB]
TDDP region: 0x10800000-0x1170f07f [15.0 MiB]
iSCSI region: 0x1170f080-0x11f0f07f [8.00 MiB]
TPT region:  0x11f0f080-0x16a5a4ff [75.2 MiB]
STAG region: 0x11f0f080-0x16a5a4ff [75.2 MiB]
TXPBL region: 0x16a5a500-0x36a5a4ff [512 MiB]
PBL region:  0x16a5a500-0x36a5a4ff [512 MiB]
RQ region:   0x36a5a500-0x400f0dff [150 MiB]
Tx payload:  0x40800000-0x707fffff [768 MiB]
uP RAM:      0x79728000-0x807fffff [112 MiB]
uP Extmem2:  0-0xffffffff [0 B]
```

- **pcieindirect**

Description: Collect/Display PCIe indirect registers information.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pcieindirect [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg pcieindirect
cudbg_view() dbg entity : pcieindirect

PCIE_PDBG

[0x05a04:0x00000] PCIE_PDEBUG_REG_0x0          0x3504349      55591753
[0x05a04:0x00001] PCIE_PDEBUG_REG_0x1          0xfcafbc6     4239375542
[0x05a04:0x00002] PCIE_PDEBUG_REG_0x2          0x1000600     16778752
 18:11 tagq_ch0_tags_used                      0              0
 10:10 tagq_ch0_data_empty                    0x1            1
  9:9 rdq_ch0_req_empty                       0x1            1
  8:8 req_ctl_rd_ch0_wait_for_tagtq           0              0
  7:7 req_ctl_rd_ch0_wait_for_cmd             0              0
  6:6 req_ctl_rd_ch0_wait_for_data_mem        0              0
  5:5 req_ctl_rd_ch0_wait_for_rdq            0              0
  4:4 req_ctl_rd_ch0_wait_for_txn_disable_fifo 0              0
  3:3 req_ctl_rd_ch0_exit_bot_vld_started     0              0
  2:2 req_ctl_rd_ch0_exit_top_vld_started     0              0
  1:1 req_ctl_rd_ch0_wait_for_pause           0              0
  0:0 req_ctl_rd_ch0_wait_for_fifo_data       0              0
[0x05a04:0x00003] PCIE_PDEBUG_REG_0x3          0x200f840     33617984
 18:11 tagq_ch1_tags_used                      0x1f           31
 10:10 req_ch1_data_empty                    0              0
  9:9 rdq_ch1_req_empty                       0              0
  8:8 req_ctl_rd_ch1_wait_for_tagtq           0              0
  7:7 req_ctl_rd_ch1_wait_for_cmd             0              0
  6:6 req_ctl_rd_ch1_wait_for_data_mem        0x1            1
  5:5 req_ctl_rd_ch1_wait_for_rdq            0              0
  4:4 req_ctl_rd_ch1_wait_for_txn_disable_fifo 0              0
  3:3 req_ctl_rd_ch1_exit_bot_vld_started     0              0
  2:2 req_ctl_rd_ch1_exit_top_vld_started     0              0
  1:1 req_ctl_rd_ch1_wait_for_pause           0              0
  0:0 req_ctl_rd_ch1_wait_for_fifo_data       0              0
[0x05a04:0x00004] PCIE_PDEBUG_REG_0x4          0              0
 18:11 tagq_ch2_tags_used                      0              0
 10:10 req_ch2_data_empty                    0              0
  9:9 rdq_ch2_req_empty                       0              0
  8:8 req_ctl_rd_ch2_wait_for_tagtq           0              0
  7:7 req_ctl_rd_ch2_wait_for_cmd             0              0
  6:6 req_ctl_rd_ch2_wait_for_data_mem        0              0
  5:5 req_ctl_rd_ch2_wait_for_rdq            0              0
  4:4 req_ctl_rd_ch2_wait_for_txn_disable_fifo 0              0
  3:3 req_ctl_rd_ch2_exit_bot_vld_started     0              0
  2:2 req_ctl_rd_ch2_exit_top_vld_started     0              0
  1:1 req_ctl_rd_ch2_wait_for_pause           0              0
  0:0 req_ctl_rd_ch2_wait_for_fifo_data       0              0
```

- **dumpcontext**

Description: Collect/Display SGE context.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] dumpcontext [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg view dumpcontext log_dumpcontext
cudbg_view() dbg entity : dumpcontext

Context type: egress
Queue ID: 0
DCA_ST: 0
StatusPgNS: 0
StatusPgR0: 0
FetchNS: 0
FetchR0: 0
Valid: 0x1
ReschedulePending_1: 0
PCIEDataChannel: 0
StatusPgTPHintEn: 0
StatusPgTPHint: 0
FetchTPHintEn: 0
FetchTPHint: 0
FCThreshOverride: 0
WRLength: 0
WRLengthKnown: 0x200
ReschedulePending: 0
TimerIx: 0x1
```

- **ulptxla**

Description: Collect/Display ULP TX LA information.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ulptxla [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ulptxla
cudbg_view() dbg entity : ulptxla
=====
DUMPING ULP_TX_LA_0
=====
[0x8ec0] ULP_TX_LA_RDPTR_0 0
[0x8ec8] ULP_TX_LA_WRPTR_0 0
[0x8ec4] ULP_TX_LA_RDDATA_0 0
[0] 0 [0]
[0x1] 0 [0]
[0x2] 0 [0]
[0x3] 0 [0]
[0x4] 0 [0]
[0x5] 0 [0]
[0x6] 0 [0]
[0x7] 0 [0]
[0x8] 0 [0]
[0x9] 0 [0]
[0xa] 0 [0]
[0xb] 0 [0]
[0xc] 0 [0]
[0xd] 0 [0]
[0xe] 0 [0]
[0xf] 0 [0]
```

- **cimla**

Description: Collect/Display CIM LA information.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cimla [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg cimla
cudbg_view() dbg entity : cimla
Status  Inst  Data      PC      LS0Stat  LS0Addr  LS0Data  LS1Stat  LS1Addr  LS1Data
02      00003000 00001000 1fffcfd2 00b00020 1ffce008 00000000 00000010 a02ced98 00000000
02      00003000 00001000 1fffcfd2 00b00020 1ffce008 00000000 00000010 a02ced98 00000000
3c      00003003 1fffcfd2 1fffcfd2 00b00020 1ffce008 00000000 00000010 a02ced98 00000000
02      00003000 00001000 1fffcfd5 00b00020 1ffce008 00000000 00000010 a02ced98 00000000
3c      00003003 1fffcfd5 1fffcfd5 00b00020 1ffce008 00000000 00000010 a02ced98 00000000
3c      00003002 1fffcfd8 1fffcfd8 00a00025 1fff1588 1fffc8f8 00000010 a02ced98 00000000
02      00003000 00001000 1fffcfda 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
02      00003000 00001000 1fffcfda 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003003 1fffc8f8 1fffcfda 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffc8f8 1fffc8f8 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffcfda 1fffc8f8 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffcfda 1fffc8f8 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
3c      00003003 1fffc8f8 1fffc8f8 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
08      00003002 1fffcfdd 1fffc8fb 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffc8fb 1fffcfdd 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffc8fb 1fffcfdd 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
14      00003003 1fffcfcc 1fffcfdd 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffcfdd 1fffcfcc 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffcfdd 1fffcfcc 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
04      00003000 1fffcfdd 1fffcfcc 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
3c      00003003 1fffcfcc 1fffcfcc 00a00020 1fff1588 00000000 00000010 a02ced98 00000000
3c      00003003 1fffcfcf 1fffcfcf 00b00025 1ffce008 00000000 00000010 a02ced98 00000000
```

- **ibqsge0, ibqsge1**

Description: Collect/Display CIM SGE inbound queue.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ibqsge[0|1] [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ibqsge1
cudbg_view() dbg entity : ibqsge1
000000: 00000000 969d0c76 00000000 8efa4efc
0x0010: 00000000 f8e552e4 00000000 c837c219
0x0020: 00000000 e871a8ac 00000000 f1310f54
0x0030: 00000000 fb8adbef 00000000 71f86d8f
0x0040: 00000000 519c6b7e 00000000 b8958216
0x0050: 00000000 8b7fd936 00000000 ac13bdff
0x0060: 00000000 e11694c6 00000000 7098783f
0x0070: 00000000 66eab2b5 00000000 6ba6cd67
0x0080: 00000000 00710b5f 00000000 d9a070cb
0x0090: 00000000 c883b836 00000000 2607fd88
0x00a0: 00000000 26a27306 00000000 40a82d63
0x00b0: 00000000 61cc81ad 00000000 1000a776
0x00c0: 00000000 38b5db23 00000000 be93cb01
0x00d0: 00000000 7ad76889 00000000 1275733f
0x00e0: 00000000 a2e8a4cc 00000000 fb82414c
0x00f0: 00000000 a0d2b10e 00000000 dc24aae7
0x0100: 00000000 4a0da9bc 00000000 24f5518c
0x0110: 00000000 33bb8a6e 00000000 39673cd2
0x0120: 00000000 901e7a25 00000000 18558425
0x0130: 00000000 a599f3ad 00000000 76b77ef4
0x0140: 00000000 4af71c44 00000000 65f5a5c8
```

- **pathmtu**

Description: Collect/Display hardware MTU table.

Syntax: `cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pathmtu [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg pathmtu
cudbg_view() dbg entity : pathmtu
88 256 512 576 808 1024 1280 1488 1500 2002 2048 4096 4352 8192 9000 9600
```

- **tperrstats**

Description: Collect/Display TP error statistics for channel 0-3.

Syntax:

`cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] tperrstats [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg tperrstats
cudbg_view() dbg entity : tperrstats
          channel 0  channel 1
macInErrs:          0          0
hdrInErrs:          0          0
tcpInErrs:          0          0
tcp6InErrs:         0          0
tnlCongDrops:       0          0
tnlTxDrops:         0          0
ofldVlanDrops:      0          0
ofldChanDrops:      0          0

ofldNoNeigh:        0
ofldCongDefer:      0
```

- **ddpstats**

Description: Collect/Display DDP (Direct Data Placement) statistics.

Syntax:

`cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ddpstats [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ddpstats
cudbg_view() dbg entity : ddpstats
Frames: 0
Octets: 0
Drops: 0
```

cimpifla**Description:** Collect/Display CIM PIF logic analyzer trace.**Syntax:**

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cimpifla [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg cimpifla
cudbg_view() dbg entity : cimpifla
Cntl ID DataBE Addr Data
01 01 f000 e1003060 80005044000000000000000000000000
81 00 f000 e1003060 00005044000000000000000000000000
81 00 f000 e1003060 80004044000000000000000000000000
01 01 0f00 e1003064 80004044000000000000000000000000
01 01 f000 e1003060 80004044000000000000000000000000
81 00 f000 e1003060 00004044000000000000000000000000
81 00 f000 e1003060 80003044000000000000000000000000
01 01 0f00 e1003064 80003044000000000000000000000000
01 01 f000 e1003060 80003044000000000000000000000000
81 00 f000 e1003060 00003044000000000000000000000000
81 00 f000 e1003060 80002044000000000000000000000000
01 01 0f00 e1003064 80002044000000000000000000000000
01 01 f000 e1003060 80002044000000000000000000000000
81 00 f000 e1003060 00002044000000000000000000000000
81 00 f000 e1003060 80001044000000000000000000000000
```

pmindirect**Description:** Collect/Display PM indirect registers information.**Syntax:**

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pmindirect [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg pmindirect
cudbg_view() dbg entity : pmindirect

PM_RX
[0x08fd0:0x10000] PM_TX_ISPI_DBG_4B_DATA0          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10001] PM_RX_ISPI_DBG_4B_DATA1          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10002] PM_RX_ISPI_DBG_4B_DATA2          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10003] PM_RX_ISPI_DBG_4B_DATA3          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10004] PM_RX_ISPI_DBG_4B_DATA4          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10005] PM_RX_ISPI_DBG_4B_DATA5          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10006] PM_RX_ISPI_DBG_4B_DATA6          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10007] PM_RX_ISPI_DBG_4B_DATA7          0          0
31:0 ispi_dbg_data
[0x08fd0:0x10008] PM_RX_ISPI_DBG_4B_DATA8          0          0
31:0 ispi_dbg_data
```

- **mpstcam**

Description: Collect/Display MPS TCAM configuration.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] mpstcam [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg mpstcam
cudbg_view() dbg entity : mpstcam
Idx Ethernet address Mask VNI Mask IVLAN Vld DIP_Hit Lookup Port Vld Ports PF VF Replication P0 P1 P2 P3 ML
0 01:80:c2:00:00:0e ffffffff - - - N - 0 0 Y 0x3 7 98 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
1 00:07:43:04:b3:90 ffffffff - - - N - 0 0 Y 0x1 4 65 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
2 01:00:5e:00:00:01 ffffffff - - - N - 0 0 Y 0x3 4 65 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
3 33:33:00:00:00:01 ffffffff - - - N - 0 0 Y 0x3 4 65 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
4 33:33:ff:ff:69:e5 ffffffff - - - N - 0 0 Y 0x1 4 65 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
5 00:07:43:04:b3:98 ffffffff - - - N - 0 0 Y 0x2 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
6 33:33:ff:fd:e6:68 ffffffff - - - N - 0 0 Y 0x2 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
7 33:33:00:00:00:fb ffffffff - - - N - 0 0 Y 0x3 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
8 33:33:00:01:00:03 ffffffff - - - N - 0 0 Y 0x3 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
9 01:00:5e:00:00:fb ffffffff - - - N - 0 0 Y 0x3 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
10 01:00:5e:00:00:fc ffffffff - - - N - 0 0 Y 0x3 4 66 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0 0 0 0 0
```

- **upcimindirect**

Description: Collect/Display UP CIM Indirect registers information.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] upcimindirect [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg upcimindirect
cudbg_view() dbg entity : upcimindirect
[0x07b50:0x02000] CIM_CTL_CONFIG 0xc060 49248
21:17 AutoPrefLoc 0 0
16:16 AutoPrefEn 0 0
15:15 DisMATimeOut 0x1 1
14:14 DisSlowTimeOut 0x1 1
9:9 IntLRspEn 0 0
8:8 PIFMultiCmd 0 0
7:7 UPSelfResetTOut 0 0
6:6 PLSwapDisWr 0x1 1
5:5 PLSwapDisRd 0x1 1
4:4 Timer1En 0 0
3:3 Timer0En 0 0
1:1 TimerEn 0 0
0:0 PrefEn 0 0
[0x07b50:0x02004] CIM_CTL_PREFADDR 0 0
31:0 PrefAddr 0 0
[0x07b50:0x02008] CIM_CTL_ALLOCADDR 0 0
31:0 IbgGen0 0 0
[0x07b50:0x0200c] CIM_CTL_INVLDTADDR 0 0
31:0 InvldtAddr 0 0
[0x07b50:0x02010] CIM_CTL_STATIC_PREFADDR0 0 0
31:0 StaticPrefAddr 0 0
[0x07b50:0x02014] CIM_CTL_STATIC_PREFADDR1 0 0
31:0 StaticPrefAddr 0 0
[0x07b50:0x02018] CIM_CTL_STATIC_PREFADDR2 0 0
31:0 StaticPrefAddr 0 0
[0x07b50:0x0201c] CIM_CTL_STATIC_PREFADDR3 0 0
31:0 StaticPrefAddr 0 0
```

▪ **cimmala**

Description: Collect/Display results of CIM MA logic analyzer trace.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cimmala [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect cimmala log_cimmala
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_cimmala... size: 3668 bytes
cxgbtool: Done writing cudbg data to file log_cimmala

C:\Users\Administrator>cxgbtool vbd0 cudbg view cimmala log_cimmala
cudbg_view() dbg entity : cimmala
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
```

▪ **obqsge**

Description: Collect/Display SGE outbound queue.

Syntax:

cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] obqsge [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg obqsge
cudbg_view() dbg entity : obqsge
000000: 01000022 0063db01 01000449 00987803
0x0010: 01000320 0063dc01 0100ca4c 00987803
0x0020: 01286a20 0063dd01 0100b8eb 00987803
0x0030: 01000023 0063de01 01007eec 00987803
0x0040: 01000023 0063df01 01006f5a 00987803
0x0050: 01000320 0063e001 010087d0 00987803
0x0060: 0128ea20 0063e101 0100738d 00987803
0x0070: 01000023 0063e201 0100398c 00987803
0x0080: 01000023 0063e301 0100143a 00987803
0x0090: 01000320 0063e401 0100da26 00987803
0x00a0: 01296a20 0063e501 0100d77e 00987803
0x00b0: 01000022 0063e601 01009df3 00987803
0x00c0: 01000022 0063e701 0100a58b 00987803
0x00d0: 01000322 0063e801 01006b75 00987803
```


- **rss**

Description: Collect/Display RSS information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rss [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg rss
cudbg_view() dbg entity : rss
 0:      0      0      0      0      0      0      0      0
 8:      0      0      0      0      0      0      0      0
16:      0      0      0      0      0      0      0      0
24:      0      0      0      0      0      0      0      0
32:      0      0      0      0      0      0      0      0
40:      0      0      0      0      0      0      0      0
48:      0      0      0      0      0      0      0      0
56:      0      0      0      0      0      0      0      0
64:      0      0      0      0      0      0      0      0
72:      0      0      0      0      0      0      0      0
80:      0      0      0      0      0      0      0      0
88:      0      0      0      0      0      0      0      0
96:      0      0      0      0      0      0      0      0
104:     0      0      0      0      0      0      0      0
112:     0      0      0      0      0      0      0      0
120:     0      0      0      0      0      0      0      0
128:    37     41     36     38     39     40     42     43
136:    37     41     36     38     39     40     42     43
144:    37     41     36     38     39     40     42     43
152:    37     41     36     38     39     40     42     43
160:    37     41     36     38     39     40     42     43
168:    37     41     36     38     39     40     42     43
```

- **swstate**

Description: Collect/Display software state information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] swstate [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg swstate
cudbg_view() dbg entity : swstate

FW STATE : Alive
OS       : Unknown
CALLER   : Unknown
```

- **fcoestats**

Description: Collect/Display FCoE statistics.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] fcoestats [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg fcoestats
cudbg_view() dbg entity : fcoestats
                channel 0          channel 1
octetsDDP:           0              0
framesDDP:           0              0
framesDrop:          0              0
```

- **wcstats**

Description: Collect/Display write coalescing statistics.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] wcstats [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg wcstats
cudbg_view() dbg entity : wcstats
WriteCoalSuccess: 0
WriteCoalFail: 0
```

- **clk**

Description: Collect/Display core clock information.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] clk [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg clk
cudbg_view() dbg entity : clk
Core clock period: 1.252 ns
TP timer tick: 41.25536 us
TCP timestamp tick: 1312.817152 us
DACK tick: 5.128192 us
DACK timer: 485 us
Retransmit min: 984 us
Retransmit max: 9984730 us
Persist timer min: 998473 us
Persist timer max: 9984730 us
```

- **full**

Description: Verify if egress and ingress buffers are becoming full.

Syntax: `cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] full [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg full
cudbg_view() dbg entity : full

Tx0 ==0=> T <=0= Rx0
Tx1 ==0=> P <=0= Rx1

Tx0 P =0=> S ? U =>0=> T
Tx1 C =0=> G ? T =>0=> P
      Rd Wr
RX0 P <=0=0=0 S <=0= C <=0= T <=T <=0= T <=0= M
RX1 C <=0=0=0 G <=0= X <=0= C <=P <=0= E <=0= P
```

- **pbttables**

Description: Collect/Display PBT Table information.

Syntax:

`cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] pbttables [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg pbttables
cudbg_view() dbg entity : pbttables
Dynamic Addr Table [0x000]: 0x002d880c
  [28:28] vld      0
  [27:27] alloc   0
  [26:26] pending 0
  [25: 0] address<<6 0x0b620300
Dynamic Addr Table [0x004]: 0x02a2298d
  [28:28] vld      0
  [27:27] alloc   0
  [26:26] pending 0
  [25: 0] address<<6 0x288a6340
Dynamic Addr Table [0x008]: 0x012bb725
  [28:28] vld      0
  [27:27] alloc   0
  [26:26] pending 0
  [25: 0] address<<6 0x4aedc940
Dynamic Addr Table [0x00c]: 0x008032ae
  [28:28] vld      0
```

- **vpddata**

Description: Collect/Display vpd information like serial number, vpd version, firmware version, etc.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] vpddata [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect vpddata log_vpddata
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_vpddata... size: 3720 bytes
cxgbtool: Done writing cudbg data to file log_vpddata

C:\Users\Administrator>cxgbtool vbd0 cudbg view vpddata log_vpddata
cudbg_view() dbg entity : vpddata
MN T520-S0
SN PT26130519
BN 11011695002
NA 000743288600
SCFG Version 0x1005000
VPD Version 0x1
Firmware Version: 1.16.38.0
```

- **cimqcfg**

Description: Collect/Display CIM queue configuration details.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] cimqcfg [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg collect cimqcfg log_cimqcfg
cxgbtool: This may take a while. Please be patient
cxgbtool: Writing cudbg block to file log_cimqcfg... size: 3896 bytes
cxgbtool: Done writing cudbg data to file log_cimqcfg

C:\Users\Administrator>cxgbtool vbd0 cudbg view cimqcfg log_cimqcfg
cudbg_view() dbg entity : cimqcfg
Queue Base Size Thres RdPtr WrPtr SOP EOP Avail
TP0 0 2048 0 570 570 2412 2412 2048
TP1 800 2048 0 0 0 0 0 2048
ULP 1000 2048 0 20 20 2 2 2048
SGE0 1800 2048 0 480 480 762 762 2048
SGE1 2000 2048 0 0 0 0 0 2048
NC-SI 2800 2048 0 0 0 0 0 2048
ULP0 0 2048 7f0 7f0 3895 3895 2048
ULP1 800 2048 1d0 1d0 53 53 2048
ULP2 1000 2048 0 0 0 0 2048
ULP3 1800 2048 0 0 0 0 2048
SGE 2000 2048 440 440 840 840 2048
NC-SI 2800 2048 0 0 0 0 2048
```

- **ibqncsi**

Description: Collect/Display CIM NCSI inbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ibqncsi [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ibqncsi
cudbg_view() dbg entity : ibqncsi
000000: 00000000 6084f1a4 00000000 02ac5032
0x0010: 00000000 5aee8fdb 00000000 650a9bc8
0x0020: 00000000 78ca245f 00000000 f86aa0e1
0x0030: 00000000 1d3edbfe 00000000 fb6c063b
0x0040: 00000000 89fa5845 00000000 100a5ae2
0x0050: 00000000 644d432a 00000000 349fed29
0x0060: 00000000 ff6c5f83 00000000 0e64d7e3
0x0070: 00000000 6194b426 00000000 73e787d9
0x0080: 00000000 18a9ae41 00000000 5b4ac20f
0x0090: 00000000 d4b1cae5 00000000 16b2f989
0x00a0: 00000000 4a0b2d2a 00000000 f760f8de
0x00b0: 00000000 aa57c5de 00000000 9ec473f7
0x00c0: 00000000 b51ea495 00000000 6859293c
0x00d0: 00000000 ec6d2d7b 00000000 79b6de6d
0x00e0: 00000000 46f36574 00000000 17690232
0x00f0: 00000000 c9a1cad2 00000000 72f65ca9
0x0100: 00000000 11586e13 00000000 89d4b998
```

- **obqncsi**

Description: Collect/Display NCSI outbound queue.

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] obqncsi [file] [dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg obqncsi
cudbg_view() dbg entity : obqncsi
000000: 00000001 00000001 00010200 000000ff
0x0010: 00000001 00000001 00010200 000000ff
0x0020: 00000001 00000001 00010200 000000ff
0x0030: 00000001 00000001 00010200 000000ff
0x0040: 00000001 00000001 00010200 000000ff
0x0050: 00000001 00000001 00010200 000000ff
0x0060: 00000001 00000001 00010200 000000ff
0x0070: 00000001 00000001 00010200 000000ff
0x0080: 00000001 00000001 00010200 000000ff
0x0090: 00000001 00000001 00010200 000000ff
0x00a0: 00000001 00000001 00010200 000000ff
0x00b0: 00000001 00000001 00010200 000000ff
0x00c0: 00000001 00000001 00010200 000000ff
0x00d0: 00000001 00000001 00010200 000000ff
0x00e0: 00000001 00000001 00010200 000000ff
```

- **rss_pf_config**

Description: Collect/Display RSS PF Configuration

Syntax:

```
cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rss_pf_config [file]
[dir]
```

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg rss_pf_config
cudbg_view() dbg entity : rss_pf_config
PF Map Index Size = 0
```

PF	RSS			IPF Map	PF Mask Size	VF Mask Size	Hash Tuple		Enable		UDP Four	Default Queue	
	Map	Chn	Prt				IPv6 Four	Two	IPv4 Four	Two		Ch1	Ch0
0	yes	no	no	0	7	5	no	no	no	no	no	0	0
1	yes	no	no	1	7	5	no	no	no	no	no	0	0
2	yes	no	no	2	7	5	no	no	no	no	no	0	0
3	yes	no	no	3	7	5	no	no	no	no	no	0	0
4	yes	no	no	4	7	5	no	no	no	no	no	0	0
5	yes	no	no	5	7	5	no	no	no	no	no	0	0
6	yes	no	no	6	7	5	no	no	no	no	no	0	0
7	yes	yes	no	7	7	7	yes	yes	yes	yes	no	0	0

- wtp

Description: Trace the Ingress and Egress path of a packet through the Chelsio adapter.

Syntax: cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] wtp [file] [dir]

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg wtp
cudbg_view() dbg entity : wtp
ifaces = nic0 nic1
*****EGGRESS (TX) PATH *****
MOD : core---->PCIE---->SGE<- | #Ring Doorbell
SOP ?      ???
EOP ?      ???
MOD |<-core<----PCIE<----SGE<- | #Request Work Request
SOP_CH0 AB    0b
SOP |   AB    16
EOP |   AB    16
MOD |->core---->PCIE---->SGE----->CIM/uP-> | uP<-CIM<-CSW #->Work req. <-Pkts
SOP_CH0 AB    00    08 |          1
SOP_CH1 |          00
SOP |   AB    00    8 |          1
EOP |   AB    0    8 |
MOD |<-core<----PCIE<----SGE<-----UTX<----- | #data dma requests
SOP_CH0 0F
SOP_CH1 00
SOP |   F
EOP |   F
MOD |->core-->PCIE-->SGE-->UTX---->TPC----->TPE---->MPS--->MAC--->MACOK->wire
SOP_CH0 BF      8      8      8      1  E1 E1 E1      FF  FF
EOP_CH0 03      8      8      8      1  E1 E1 E1      FF  FF
SOP_CH1 50      7      7      7      0  40 40 40      FF  FF
EOP_CH1 03      7      7      7      0  40 40 40      FF  FF
SOP_CH2 00      0      0      0      0  00 00
EOP_CH2 00      0      0      0      0  00 00
SOP_CH3 00      0      0      0      0  00 00
EOP_CH3 00      0      0      0      0  00 00
SOP    10F     F      0      F      1  121 121 121      1FE  1FE
EOP     6      0      0      F      1  121 121 121      1FE  1FE
*****INGRESS (RX) PATH *****
MOD core<-PCIE<---SGE<---CSW<-----TPC<-URX<-LE-TPE<-----MPS<---MAC<-MACOK<---wire
SOP_CH0 9 2 A B B D D 8 F 0 5F B7 FF FF
EOP_CH0 9 2 A B B D D 8 F 0 5F B7 FF FF
SOP_CH1 C 9 0 0 0 0 0 7 0 00 B6 FF FF
EOP_CH1 C 9 0 0 0 0 0 7 0 00 B6 FF FF
SOP_CH2 0 0 0 0 0 0 0 0 0 37
EOP_CH2 0 0 0 0 0 0 0 0 0 37
SOP_CH3 0 0 0 0 0 0 0 0 0 00
EOP_CH3 0 0 0 0 0 0 0 0 0 00
SOP_CH4 0 0 0 0 0 0 0 0 0 00
EOP_CH4 0 0 0 0 0 0 0 0 0 00
SOP_CH5 0 0 0 0 0 0 0 0 0 00
EOP_CH5 0 0 0 0 0 0 0 0 0 00
SOP_CH6
EOP_CH6
SOP_CH7
EOP_CH7
```

▪ rdmastats

Description: Collect/Display RDMA Statistics.

Syntax:

`cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] rdmastats [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg rdmastats
cudbg_view() dbg entity : rdmastats
NoRQEModDefferals: 0
NoRQEPktDefferals: 0
```

▪ ulprxla

Description: Collect/Display ULP RX LA.

Syntax:

`cxgbtool [vbdIface] cudbg [collect|view|extract|dbg] ulprxla [file] [dir]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 cudbg dbg ulprxla
cudbg_view() dbg entity : ulprxla
  Pcmd      Type  Message          Data
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
000000000000000000  0 00000000 0000000000000000000000000000000000
```


- **debug**
- **filter**

Description: Display list of configured hardware filters

Syntax: `cxgbtool [nicIface] debug filter`

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug filter
```

Ftid	Prot	FPORT	LPORT	Type	Que_Id	DMAC_Idx	Locked	Hits
0	0	0	0	IPv4	0	0	1	23
1	0	0	0	IPv4	0	0	1	0

- **qsets**

Description: Read number of qsets

Syntax: `cxgbtool [nicIface] debug qsets`

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug qsets
```

QueType	AbsId	RelId	Ft0Id	IngId	Msix	QDepth
TxEth	5	5	n/a	5	n/a	1024
TxCtrl	6	6	n/a	6	n/a	1024
TxRdma	7	7	n/a	6	n/a	512
RxIng	6	6	0	n/a	2	1023
RxEth	5	5	4	n/a	35	2047
RxRdma	1	1	0	n/a	3	511
RxRdma	2	2	1	n/a	15	511
RxRdma	3	3	2	n/a	19	511
RxRdma	4	4	3	n/a	31	511
TxVPort	13	13	n/a	11	n/a	1024
RxVPort	11	11	12	n/a	51	2047
TxVPort	19	19	n/a	14	n/a	1024
RxVPort	14	14	18	n/a	7	2047

- **qstats**

Description: Display statistics for each Tx & Rx queue.

Syntax: `cxgbtool [nicIface|iscsiIface] debug qstats [queueType [(clr)]]`

Parameters:

clr: Clear queue statistics.

Queue Type	Description
<i>txeth</i>	Tx tunnel queue statistics.
<i>rxeth</i>	Rx tunnel queue statistics.
<i>txvirt</i>	Tx VM queue statistics.
<i>rxvirt</i>	Rx VM queue statistics.
<i>txtoe</i>	Tx Chimney queue statistics.
<i>rxtoe</i>	Rx Chimney queue statistics.
<i>txrdma</i>	Tx RDMA queue statistics.
<i>rxrdma</i>	Rx RDMA queue statistics.
<i>txctrl</i>	Chimney control queue statistics.
<i>txfwd</i>	Chimney forwarding queue statistics.
<i>txnvgre</i> *	Tx NVGRE statistics.
<i>rxnvgre</i> *	Rx NVGRE statistics.
<i>txiscsi</i>	Tx iSCSI queue statistics.
<i>rxiscsi</i>	Rx iSCSI queue statistics.
<i>txpd</i>	Tx PacketDirect queue statistics.
<i>rxpd</i>	Rx PacketDirect queue statistics.

* not supported on T6 adapters

Qstats Parameter	Description
<i>BcBytes</i>	Broadcast packet size in bytes.
<i>BcPkts</i>	Number of broadcast packets.
<i>CoalBytes</i>	Coalesced packet size in bytes.
<i>CoalPkts</i>	Number of coalesced packets.
<i>DropPkts</i>	Number of dropped packets.
<i>EncapBytes</i> #	NVGRE/VXLAN packet size in bytes.
<i>EncapPkts</i> #	Number of NVGRE/VXLAN packets.
<i>VlanMismatch</i>	Number of packets with VLAN mismatch.
<i>Fw4Ack</i>	Number of SGE update requests.
<i>LargeRxDropPkts</i>	Dropped packets due to large size counter.
<i>LSO</i>	Number of large send offloaded packets.
<i>McBytes</i>	Multicast packet size in bytes.
<i>McPkts</i>	Number of multicast packets.
<i>NblsRecv</i>	Total Nbls received.
<i>NblsSent</i>	Total Nbls sent.
<i>NoRxBufs</i>	Packets couldn't process because of lack of memory.
<i>NvPkts</i>	Send NVGRE packets.
<i>PeerAbort</i>	Peer abort request.
<i>CqComp</i>	Number of CQ completions.
<i>PktsDefrag</i>	Number of defragged packets.
<i>PktsDrop</i>	Total packets dropped.
<i>PktsQued</i>	Total packets queued.
<i>PktsSent</i>	Total packets sent.
<i>Quefull</i>	Number of time queue full happened.
<i>RecvNbls</i>	Total Nbls received.
<i>RssGroup</i>	RSS group number allocated to queue.
<i>VPortId</i>	Vport ID of queue.

<i>RssProc</i>	RSS processor number allocated to queue.
<i>RxCsumErr</i>	Number of received packets with checksum error.
<i>RxCsumErrIp</i>	Number of received IP packets with checksum error.
<i>RxCsumErrTcp</i>	Number of received TCP packets with checksum error.
<i>SysThreadEvts</i>	Number of system thread events.
<i>TxCsumOfld</i>	Number of checksum offloaded Tx packets.
<i>UcBytes</i>	Unicast packets size in bytes.
<i>UcPkts</i>	Number of unicast packets.
<i>VlanEx</i>	Number of VLAN extracted packets.
<i>VLANin</i>	Number of VLAN inserted packets.

supported only on T6 adapters

Example of rxeth qstats

```
C:\Users\Administrator>cxgbtool nic0 debug qstats rxeth
```

StatsType	RxEth#36	RxEth#37	RxEth#38	RxEth#39
UcPkts	21	3	3	1
UcBytes	1324	260	239	93
McPkts	0	2	3	0
McBytes	0	180	258	0
BcPkts	6	0	45	0
BcBytes	360	0	4572	0
CoalPkts	0	0	0	0
CoalBytes	0	0	0	0
DropPkts	0	0	0	0
RecvNbls	27	5	51	1
RxCsumErr	0	0	0	0
RxCsumErrTcp	0	0	0	0
RxCsumErrIp	0	0	0	0
VLANex	0	0	0	0
SysThreadEvts	0	0	0	0
LargeRxDropPkts	0	0	0	0
RssProc	0	16	24	32
RssGroup	0	0	0	0

- **dumpctx**

Description: Display adapter context.

Syntax: cxgbtool [nicIface] debug dumpctx

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug dumpctx

Type                Value
Link State          Connected
Link Speed           10 Gbps
Hw Addr              00:07:43:39:87:f0
Cur Addr             00:07:43:39:87:f0
Port No              0
NetIfIdx              4
Mtu                   1500
Pkt Filter            0xf
CurOfldCaps          0x17fe00
FwdTx Pend           0
CtrlTx RefCount      1
ToeTx Pend           0
RdmaTx RefCount      1
ToeRx Pend           0
ToeRxData Pend       0
Ndk Connect          0
Ndk Accept            0
Ndk ConnectFail      0
Ndk ConnectErr       0
```

- **version**

Description: Display the adapter information like part number, serial number, device ID, firmware Version, TP, etc.

Syntax: cxgbtool [vbdIface|nicIface|iscsiIface] debug version

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug version
P/N:                11012096004
S/N:                 PT43160304
DeviceId:            6401 (T6225-CR)
FW Ver:              1.16.38.0
TP Ver:              0.1.23.2
Driver Ver:          6.5.4.10
Nic File Ver:        6.5.4.10
VBD File Ver:        6.5.4.10
Cudbg lib Ver:       1.14.0
SCFG Ver:            0x1402000
```

▪ **coalesce**

Description: Change the coalescing settings for tunnel Rx queues of the specified Ethernet device.

Syntax:

```
cxgbtool [nicIface] debug coalesce [rx-usecs-irq {val}] [rx-frames-irq {val}] [(persistent)]
```

Parameters

rx-usecs-irq: Rx Coalescing Timer. Number of microseconds after which interrupt will be sent.

rx-frames-irq: Rx Coalescing Threshold Packets. Number of packets after which interrupt will be sent.

Examples:

- Setting Rx Coalescing Timer:

```
C:\Users\Administrator>cxgbtool nic0 debug coalesce rx-usecs-irq 5
```

- Setting Rx Coalescing Threshold Packets

```
C:\Users\Administrator>cxgbtool nic0 debug coalesce rx-frames-irq 20
```

▪ **eps**

Description: Print endpoints (eps) if NDK/ND is enabled.

Syntax: cxgbtool [nicIface] debug eps

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug eps
ep FFFF888EDC304810 cm_id FFFF8E88E308E830 state 1 flags 0x80 stid 2564 backlog 1024 fe80:0000:0000:0000:15b4:5e09:90fd:e668:5445
ep FFFF888ED7C33AE0 cm_id FFFF888ED65F84F0 state 1 flags 0x80 stid 2569 backlog 1024 160.254.230.104:5445
```

- **qps**

Description: Print queue pairs (qps) if NDK/ND is enabled.

Syntax: `cxgbtool [nicIface] debug qps`

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug qps
rc qp sq id 1024 in_use 0 rq id 1025 in_use 256 state 1 onchip 0 ep tid 14576 state 7 102.1.8.2:5445 -> 102.1.8.3:1030
rc qp sq id 1026 in_use 0 rq id 1027 in_use 256 state 1 onchip 0 ep tid 15680 state 7 102.1.8.2:5445 -> 102.1.8.3:1031
rc qp sq id 1028 in_use 0 rq id 1029 in_use 224 state 1 onchip 0 ep tid 17296 state 7 102.1.8.2:5445 -> 102.1.8.3:1034
rc qp sq id 1030 in_use 0 rq id 1031 in_use 256 state 1 onchip 0 ep tid 13856 state 7 102.1.8.2:5445 -> 102.1.8.3:1035
rc qp sq id 1048 in_use 0 rq id 1049 in_use 256 state 1 onchip 0 ep tid 3400 state 7 102.1.8.2:5445 -> 102.1.8.3:1038
rc qp sq id 1050 in_use 0 rq id 1051 in_use 256 state 1 onchip 0 ep tid 10488 state 7 102.1.8.2:5445 -> 102.1.8.3:1039
rc qp sq id 1052 in_use 0 rq id 1053 in_use 256 state 1 onchip 0 ep tid 3416 state 7 102.1.8.2:5445 -> 102.1.8.3:1042
rc qp sq id 1054 in_use 0 rq id 1055 in_use 256 state 1 onchip 0 ep tid 10472 state 7 102.1.8.2:5445 -> 102.1.8.3:1043
rc qp sq id 1064 in_use 0 rq id 1065 in_use 256 state 1 onchip 0 ep tid 13872 state 7 102.1.8.2:5445 -> 102.1.8.3:1047
rc qp sq id 1066 in_use 0 rq id 1067 in_use 256 state 1 onchip 0 ep tid 7512 state 7 102.1.8.2:5445 -> 102.1.8.3:1045
rc qp sq id 1068 in_use 0 rq id 1069 in_use 256 state 1 onchip 0 ep tid 14560 state 7 102.1.8.2:5445 -> 102.1.8.3:1050
rc qp sq id 1070 in_use 0 rq id 1071 in_use 256 state 1 onchip 0 ep tid 15696 state 7 102.1.8.2:5445 -> 102.1.8.3:1051
rc qp sq id 1080 in_use 0 rq id 1081 in_use 256 state 1 onchip 0 ep tid 5000 state 7 102.1.8.2:5445 -> 102.1.8.3:1055
rc qp sq id 1082 in_use 0 rq id 1083 in_use 256 state 1 onchip 0 ep tid 9784 state 7 102.1.8.2:5445 -> 102.1.8.3:1054
```

- **rdma_stats**

Description: Print RDMA statistics if NDK/ND is enabled

Syntax: `cxgbtool [nicIface] debug rdma_stats`

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug rdma_stats
Object:      Total      Current      Max      Fail
PDID:        65536      108          116      0
QID:         24576      240          240      0
TPTMEM:      78951552    114048      122496   0
PBLMEM:      536870912   884736      950272   0
RQTMEM:      157903104   7077888     7602176  0
OCQPMEM:     0            0            0         0
DB FULL:     0
DB EMPTY:   0
DB DROP:    0
DB State: NORMAL Transitions 0
TCAM_FULL:  0
ACT_OFLD_CONN_FAILS: 0
PAS_OFLD_CONN_FAILS: 0
AVAILABLE IRD: 621728
```

- **stags**

Description: Print STAG contents if NDK/ND is enabled.

Syntax: cxgbtool [nicIface] debug stags

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug stags

Stag(0):0x700
0x1150f160 0000000000000000 0000000000000000 0000000000000000 0000000000000000
0x1150f160: (inactive): stag idx 0x0700 key 0x00 state INV type NSMR pdid 0x0
                    perms none rem_inv_dis 0 addr_type ZBTO
                    bind_enable 0 pg_size 4096 qpid 0x0 pbl_off 0x0000
                    pbl_addr 0x16a5a500 len 0 va 0000000000000000 bind_cnt 0

Stag(1):0xa00
0x1150f1c0 0000000000000000 0000000000000000 0000000000000000 0000000000000000
0x1150f1c0: (inactive): stag idx 0x0a00 key 0x00 state INV type NSMR pdid 0x0
                    perms none rem_inv_dis 0 addr_type ZBTO
                    bind_enable 0 pg_size 4096 qpid 0x0 pbl_off 0x0000
                    pbl_addr 0x16a5a500 len 0 va 0000000000000000 bind_cnt 0

Stag(2):0xe00
0x1150f240 0000000000000000 0000000000000000 0000000000000000 0000000000000000
0x1150f240: (inactive): stag idx 0x0e00 key 0x00 state INV type NSMR pdid 0x0
                    perms none rem_inv_dis 0 addr_type ZBTO
                    bind_enable 0 pg_size 4096 qpid 0x0 pbl_off 0x0000
                    pbl_addr 0x16a5a500 len 0 va 0000000000000000 bind_cnt 0

Stag(3):0x1c00
0x1150f400 0000000000000000 0000000000000000 0000000000000000 0000000000000000
0x1150f400: (inactive): stag idx 0x1c00 key 0x00 state INV type NSMR pdid 0x0
                    perms none rem_inv_dis 0 addr_type ZBTO
                    bind_enable 0 pg_size 4096 qpid 0x0 pbl_off 0x0000
                    pbl_addr 0x16a5a500 len 0 va 0000000000000000 bind_cnt 0
```

- **l2t**

Description: Display l2t table contents.

Syntax: cxgbtool [nicIface] debug l2t

Example:

```
C:\Users\Administrator>cxgbtool nic0 debug l2t
IDX      REF_COUNT  MTU      DEST_ADDR  DEST_MAC      PORT
0         114        1500     102.1.7.3  00:07:43:04:B3:70  0
1         114        1500     102.1.8.3  00:07:43:04:B3:78  1
```


- **iscsi_log**

Description: Dump debug prints to system event log.

Syntax: cxgbtool [iscsiIface] debug iscsi_log

Example:

```
C:\Users\Administrator>cxgbtool iscsi0 debug iscsi_log
```

- **fwtoc**

Description: Convert firmware binary file to source file header.

Syntax: cxgbtool debug fwtoC [firmwareFile] filename= [CFile].bin

Example:

```
C:\Users\Administrator>cxgbtool debug fwtoC Desktop\t6fw-1.16.33.0.bin filename=t6fw-1.16.33.0.bin filetype=bin filename=t6fw-1.16.33.0.bin filetype=bin
```

- **inst**

Description: Install driver package specified in the setup information file (.inf).

Syntax: cxgbtool debug inst [filePath]

Example:

```
C:\Users\Administrator>cxgbtool debug inst Desktop\chvbdx64.inf
ENTER: DriverPackageInstallA
ENTER: DriverPackageInstallW
Installing INF file "C:\Users\Administrator\Desktop\chvbdx64.inf" (Plug and Play).
Looking for Model Section [Chelsio.NTamd64]...
Installing devices with Id "PCI\VEN_1425&DEV_5410&SUBSYS_00001425&REV_00" using INF "C:\Windows\System32\DriverStore\FileRepository\chvbdx64.inf_amd64_db5d99a4eb080b3f\chvbdx64.inf".
Installation did not occur because the hardware isn't currently present.
Installing devices with Id "PCI\VEN_1425&DEV_6401&SUBSYS_00001425&REV_00" using INF "C:\Windows\System32\DriverStore\FileRepository\chvbdx64.inf_amd64_db5d99a4eb080b3f\chvbdx64.inf".
ENTER: UpdateDriverForPlugAndPlayDevices...
RETURN: UpdateDriverForPlugAndPlayDevices.
Installation was successful.
Marked Phantom Device with Hardware/Compatible Id 'PCI\VEN_1425&DEV_5410&SUBSYS_00001425&REV_00' for reinstall on next plug-in.
Install completed
RETURN: DriverPackageInstallW (0x0)
RETURN: DriverPackageInstallA (0x0)
```

- **uninst**

Description: Uninstall driver package specified in the setup information file (.inf).

Syntax: cxgbtool debug uninst [filePath]

Example:

```
C:\Users\Administrator>cxgbtool debug uninst Desktop\chvbdx64.inf
Removing device instance PCI\VEN_1425&DEV_6401&SUBSYS_00001425&REV_00\4&2A43D483&080410
Removing device instance PCI\VEN_1425&DEV_5410&SUBSYS_00001425&REV_00\4&31024D2F&080418
ENTER: DriverPackageGetPathA
RETURN: DriverPackageGetPathA (0x7A)
ENTER: DriverPackageGetPathA
RETURN: DriverPackageGetPathA (0x0)
ENTER: DriverPackageUninstallA
ENTER: DriverPackageUninstallW
Uninstalling driver package C:\Windows\System32\DriverStore\FileRepository\chvbdx64.inf_amd64_db5d99a4eb080b3f\chvbdx64.inf...
Successfully uninstalled 'C:\Windows\INF\oem6.inf'.
No devices found for C:\Windows\System32\DriverStore\FileRepository\chvbdx64.inf_amd64_db5d99a4eb080b3f\chvbdx64.inf uninstall.
Successfully deleted properties for driver store entry 'C:\Windows\System32\DriverStore\FileRepository\chvbdx64.inf_amd64_db5d99a4eb080b3f\chvbdx64.inf'.
Uninstall completed.
RETURN: DriverPackageUninstallW (0x0)
RETURN: DriverPackageUninstallA (0x0)
```

- **update**

Description: Update driver package.

Syntax: cxgbtool debug update [file]

Example:

```
C:\Users\Administrator>cxgbtool debug update C:\Users\Administrator\Desktop\v6.5.8.0\bin\fre\x64\chvbdx64.inf
Driver for HwId:PCI\VEN_1425&DEV_6407&SUBSYS_00001425&REV_00 updated successfully!!!
```

- **rescan**

Description: Scan for hardware changes in the device manager.

Syntax: cxgbtool debug rescan

Example:

```
C:\Users\Administrator>cxgbtool debug rescan
```

- **trace**

Description: Enable driver debug prints.

Syntax: cxgbtool debug trace [nic|vbd] [flags] [level]

Example:

```
C:\Users\Administrator>cxgbtool debug trace nic 8 7
Tracing nic flags=0x8 level=7
Press 'q' to quit tracing: _
```

- **firmware**

- mbox**

Description: Display the last command in each mailbox.

Syntax: `cxgbtool [vbdIface|iscsiIface] firmware mbox [0|1|2|...|7]`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 firmware mbox 0
mailbox[0] owned by driver

0000000000000000
0000000000000000
0000000000000000
0000000000000000
0000000000000000
0000000000000000
```

- **hardware**

- **mdio**

Description: Read/Write MDIO register.

Syntax:

`cxgbtool [vbdIface|nicIface|iscsiIface] hardware mdio [physAddr] [mngDevAddr] [regAddr] [value]`

Example

Read MDIO register

```
C:\Users\Administrator>cxgbtool vbd0 hardware mdio 1 1 1
0xffff [65535]
```

 **Note** Write MDIO register currently not supported.

- **sensor**

Description: Display sensor data.

Syntax: `cxgbtool [nicIface] hardware sensor`

Example:

```
C:\Users\Administrator>cxgbtool nic0 hardware sensor
Temperature: 80C
Core VDD: 855mV
```

- **reg**

Description: Read/Write register.

Syntax:

- Register Read:

```
cxgbtool [vbdIface|nicIface|iscsiIface] hardware reg [readAddr]
```

- Register Write:

```
cxgbtool [vbdIface|nicIface|iscsiIface] hardware reg [[writeAddr] = {val}]
```

Example:

- Register read:

```
C:\Users\Administrator>cxgbtool vbd0 hardware reg 0x19428  
00000008 [8]
```

- Register write:

```
C:\Users\Administrator>cxgbtool vbd0 hardware reg 0x19428 = 0x3
```

- **sgedbg**

Description: Display sge debug indirect registers.

Syntax: `cxgbtool [vbdIface] hardware sgedbg`

Example:

```
C:\Users\Administrator>cxgbtool vbd0 hardware sgedbg


SGE_DEBUG_DATA_HIGH00      0x332200aa  857866410
SGE_DEBUG_DATA_HIGH01      0x990055    10027093
SGE_DEBUG_DATA_HIGH02      0           0
SGE_DEBUG_DATA_HIGH03      0x4620      17952
SGE_DEBUG_DATA_HIGH04      0xd020      53280
SGE_DEBUG_DATA_HIGH05      0x8800      34816
SGE_DEBUG_DATA_HIGH06      0           0
SGE_DEBUG_DATA_HIGH07      0x111177aa  286357418
SGE_DEBUG_DATA_HIGH08      0x200bb     131259
SGE_DEBUG_DATA_HIGH09      0xbb0022    12255266
SGE_DEBUG_DATA_HIGH10      0x5602c00   90188800
SGE_DEBUG_DATA_HIGH11      0           0
SGE_DEBUG_DATA_HIGH12      0           0
SGE_DEBUG_DATA_HIGH13      0           0
SGE_DEBUG_DATA_HIGH14      0x45475301  1162302209
SGE_DEBUG_DATA_HIGH15      0xbab8acfe  3132665086

SGE_DEBUG_DATA_LOW00       0           0
SGE_DEBUG_DATA_LOW01       0x3f000     258048
SGE_DEBUG_DATA_LOW02       0           0
SGE_DEBUG_DATA_LOW03       0x60253001  1613049857
SGE_DEBUG_DATA_LOW04       0x700026    7340070
SGE_DEBUG_DATA_LOW05       0x6002c     393260
SGE_DEBUG_DATA_LOW06       0x60066     393318
SGE_DEBUG_DATA_LOW07       0x60401     394241
SGE_DEBUG_DATA_LOW08       0x446       1094
SGE_DEBUG_DATA_LOW09       0x604e1     394465
SGE_DEBUG_DATA_LOW10       0xa50025    10813477
SGE_DEBUG_DATA_LOW11       0x25        37
SGE_DEBUG_DATA_LOW12       0x25        37
SGE_DEBUG_DATA_LOW13       0           0
SGE_DEBUG_DATA_LOW14       0x1534745   22234949
SGE_DEBUG_DATA_LOW15       0xfeacb8ba  4272732346
```

- **flash**

Description: Redirect Flash memory details to a file.

Syntax: `cxgbtool [vbdIface] hardware flash [file]`

 **Note** *It is recommended that the file should be provided without any extension.*

Examples:

- Displaying RDMA statistics

```
C:\Users\Administrator>cxgbtool rdma -s
Object:      Total      Current      Max      Fail
PDID:       65536       0            2        0
QID:        24576       8            8        0
TPTMEM:     78951552    0            2112     0
PBLMEM:     536870912   0            16384    0
RQTMEM:     157903104   0            131072   0
OCQPMEM:    0            0            0        0
DB FULL:    0
DB EMPTY:   0
DB DROP:    0
DB State: NORMAL Transitions 0
TCAM_FULL:  0
ACT_OFLD_CONN_FAILS: 0
PAS_OFLD_CONN_FAILS: 0
AVAILABLE IRD: 622592
```

- Displaying RDMA stags

```
C:\Users\Administrator>cxgbtool rdma -t
0x1e000
0x1ed00
0x1fb00
0x1fc00
0x20100
0x20e00
0x21c00
0x21d00
0x22300
0x22400
0x22900
0x23000
0x23900
0x23a00
0x23f00
0x24400
0x24500
0x24d00
0x24e00
0x25700
0x26600
0x26800
0x27000
0x27600
0x27e00
0x28c00
0x29400
```

- Displaying RDMA queue pairs (qps):

```
C:\Users\Administrator>cxgbtool rdma -d 0 -q
rc qp sq id 1028 in_use 0 rq id 1029 in_use 256 state 1 onchip 0 ep tid 9952 state 7 102.1.7.2:5445 -> 102.1.7.3:1024
rc qp sq id 1030 in_use 0 rq id 1031 in_use 256 state 1 onchip 0 ep tid 4944 state 7 102.1.7.2:5445 -> 102.1.7.3:1025

C:\Users\Administrator>cxgbtool rdma -d 1 -q
rc qp sq id 1032 in_use 0 rq id 1033 in_use 256 state 1 onchip 0 ep tid 9768 state 7 102.1.8.2:5445 -> 102.1.8.3:1026
rc qp sq id 1034 in_use 0 rq id 1035 in_use 256 state 1 onchip 0 ep tid 5016 state 7 102.1.8.2:5445 -> 102.1.8.3:1027
```

- Displaying RDMA endpoints:

```
C:\Users\Administrator>cxgbtool rdma -d 0 -e
ep FFFF8C808ABD9A90 cm_id FFFF888EDBFB5A10 state 1 flags 0x80 stid 2560 backlog 1024 102.1.7.2:5445
ep FFFF8A8896F0C5E0 cm_id FFFF8A8896B63C60 state 1 flags 0x80 stid 2568 backlog 1024 fe80:0000:0000:0000:7093:1096:46f5:69e5:5445
ep FFFF8489CE53E010 cm_id FFFF8489CE562AD0 state 7 flags 0x70 history 0x42b0 hwtid 9952 atid 0 102.1.7.2:5445 <-> 102.1.7.3:1024
ep FFFF8489CE322400 cm_id FFFF8C808B808F010 state 7 flags 0x70 history 0x42b0 hwtid 4944 atid 0 102.1.7.2:5445 <-> 102.1.7.3:1025
```

- Displaying list of iWARP adapters:

```
C:\Users\Administrator>cxgbtool rdma -l

T6/T5 iwarp adapter 0
T6/T5 iwarp adapter 1
```

- Starting krping server/client:

```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-s:102.1.7.2"
Starting krping in server mode:-
  ip: 102.1.7.2
  port: 9999
  max_conns: 1
  bufsz: 1048576
  mem_type: 1
  write to file: 0
cr:1   cs:1   dis:1  ce:0   sb:40  rb:40  rr:65536  rw:0
```

```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-c:102.1.7.2 -rr"
Starting krping in client mode:-
  ip:
  port: 9999
  conns: 1
  iosz: 65536
  mem_type: 1
  op:1
  server invalidate: 0
  write to file: 0

Krping stats:-
  connect requests: 1
  connects: 1
  disconnects: 1
  connect errors: 0
  send bytes: 40 (1)
  recv bytes: 40 (1)
  read bytes: 0 (0)
  write bytes: 0 (0)
```



```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-c:102.1.5.2 -rw"
Starting krping in client mode:-
  ip:
  port: 9999
  conns: 1
  iosz: 65536
  mem_type: 1
  op:2
  server invalidate: 0
  write to file: 0

Krping stats:-
  connect requests: 1
  connects: 1
  disconnects: 1
  connect errors: 0
  send bytes: 40 (1)
  recv bytes: 40 (1)
  read bytes: 0 (0)
  write bytes: 0 (0)
```

```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-s:102.1.5.2"
Starting krping in server mode:-
  ip: 102.1.5.2
  port: 9999
  max_conns: 1
  bufisz: 1048576
  mem_type: 1
  write to file: 0
cr:1   cs:1   dis:1  ce:0   sb:40  rb:40  rr:0   rw:65536
```

```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-s:102.1.7.2"
Starting krping in server mode:-
  ip: 102.1.7.2
  port: 9999
  max_conns: 1
  bufisz: 1048576
  mem_type: 1
  write to file: 0

Krping stats:-
  connect requests: 1
  connects: 1
  disconnects: 1
  connect errors: 0
  send bytes: 40 (1)
  recv bytes: 40 (1)
  read bytes: 65536 (1)
  write bytes: 0 (0)
```

```
C:\Users\Administrator>cxgbtool rdma -d 0 -k "-s:102.1.5.2"
Starting krping in server mode:-
  ip: 102.1.5.2
  port: 9999
  max_conns: 1
  bufsz: 1048576
  mem_type: 1
  write to file: 0

Krping stats:-
  connect requests: 1
  connects: 1
  disconnects: 1
  connect errors: 0
  send bytes: 40 (1)
  recv bytes: 40 (1)
  read bytes: 0 (0)
  write bytes: 65536 (1)
```

9. Software/Driver Uninstallation

Similar to installation, Chelsio Unified Wire can be uninstalled using the Installer or zip package. Refer the relevant section depending on the method of installation used to install drivers.

9.1. Installer

Chelsio Unified Wire Installer can be uninstalled using two methods: **GUI** or **CLI** mode. GUI mode requires user interaction and uninstallation occurs with options specified by the user. Whereas, CLI mode does not require any user input.

9.1.1. GUI mode (Installer)

- i. Run the **ChelsioUwire-x.x.x.xx.exe** application.
- ii. Select **Modify** to add or remove features. Select **Repair** to repair the previous installation. Select **Remove** to uninstall the application. After you have selected the appropriate option, click **Next**.

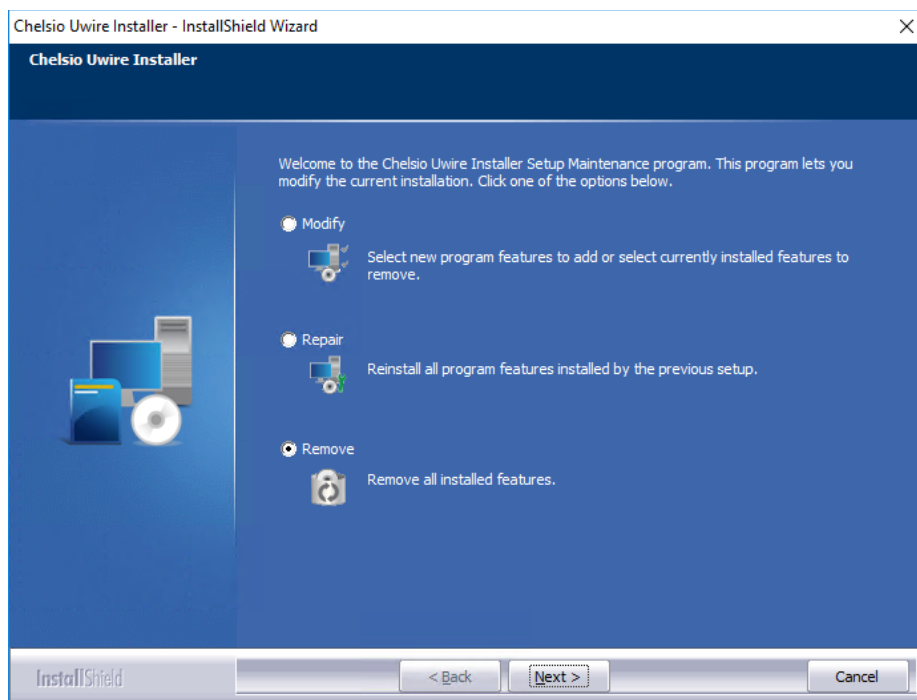


Figure 66 - Selecting maintenance option

iii. Click on the **Finish** button to exit from the installer.

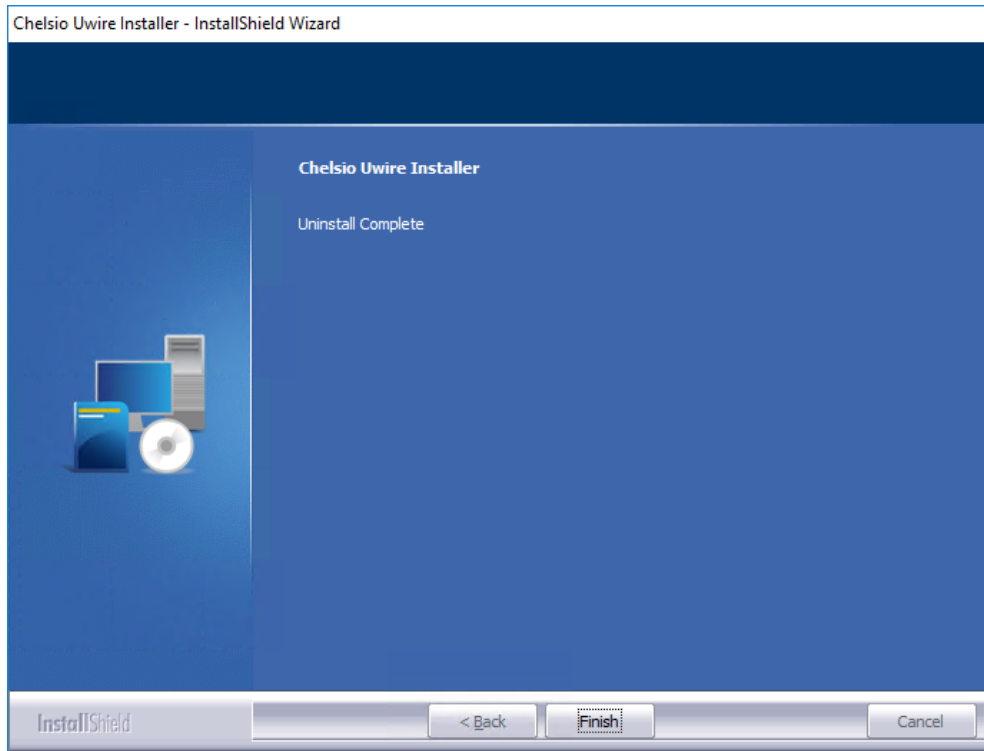


Figure 67 - Finishing uninstallation

Note

- This method of uninstallation is possible only if the drivers were installed using Unified Wire Installer.
- Uninstalling Unified Wire package using the above method will not uninstall Unified Wire Manager. See [Uninstallation](#) section of **Unified Wire Manager** chapter for more information.

9.1.2. CLI Mode

To uninstall all the drivers, execute the following command:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.xx.exe -un all
```


To uninstall a particular driver, execute the following command:

```
C:\Users\Administrator>ChelsioUwire-x.x.x.x.exe -rm <driver(s)>
```

E.g.:


```
C:\Users\Administrator>ChelsioUwire-x.x.x.x.exe -rm iSCSI
```

The above command will uninstall iSCSI Storport Miniport driver.

 **Note** *Uninstalling Unified Wire package using the above method will not uninstall Unified Wire Manager. You will have to manually uninstall it using “Programs and Features” in the Control Panel.*


9.2. Zip Package

If the driver components were installed using the zip package, they will have to be uninstalled manually. The following section lists the various components and their respective methods of uninstallation.

 **Important** *The driver components need to be uninstalled strictly in the order described here. Using any other order is not supported.*

- **NDIS Miniport driver**

- Open the **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on the **Network Adapters**, right click on the **Chelsio Network Adapter** and select **Uninstall**.

 **Note** *In case of Virtual Functions in VM, use Chelsio VF Network Adapter.*


- Select the **Delete the driver software for this device** checkbox when **Confirm Device Uninstall** is prompted and click **OK**.
- Repeat the same procedure for the other **Chelsio Network Adapters**.

- **iSCSI Storport Miniport**

- Open the **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on **Storage controllers**, right-click on **Chelsio iSCSI Initiator** and select **Uninstall**.
- Select **Delete the driver software for this device** checkbox when **Confirm Device Uninstall** is prompted and click **OK**.
- Repeat the same procedure for other Initiator ports.

- **Virtual Bus Driver**

- iv. Open the **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on the **System Devices**, right click on the **Chelsio Bus Enumerator** and select **Uninstall**.



Note In case of Virtual Functions in VM, use **Chelsio Bus Enumerator [Virtual Function]**.

- v. Select the **Delete the driver software for this device** checkbox when **Confirm Device Uninstall** is prompted and click **OK**.

- **Generic Function**

- i. Open the **Device Manager** (Control Panel -> System & Security-> System -> Device Manager), click on the **Network Adapters**, right click on the **Chelsio Generic Function** and select **Uninstall**.
- ii. Select the **Delete the driver software for this device** checkbox when **Confirm Device Uninstall** is prompted and click **OK**.
- iii. Repeat the same procedure for the other **Generic Functions**.

II. NDIS Function

1. Introduction

Chelsio's Terminator series of Unified Wire adapters provide extensive support for NIC operation, including all stateless offload mechanisms for both IPv4 and IPv6 (IP, TCP and UDP checksum offload, LSO - Large Send Offload aka TSO - TCP Segmentation Offload, Network Direct and assist mechanisms for accelerating RSC - Receive Segment Coalescing).

1.1. Hardware Requirements

1.1.1. Supported Adapters

Following is the list of NDIS components and supported Chelsio adapters:

Table 1 - Chelsio adapters and supported NDIS components

Chelsio Adapter	NDIS Components
T62100-SO-CR	NIC
T6225-SO-CR	
T6425-CR	NIC, NVGRE, VXLAN, VMMQ/vRSS
T62100-CR	NIC, NVGRE, VXLAN, PacketDirect, VMMQ/vRSS
T62100-LP-CR	
T6225-CR	
T580-CR	
T520-CR	
T580-LP-CR	
T580-OCP-SO	
T520-OCP-SO	
T580-SO-CR	NIC, NVGRE, VXLAN, VMMQ/vRSS
T520-SO-CR	
T520-LL-CR	
T540-CR	
T520-BT	

1.2. Software Requirements

1.2.1. Windows Requirement

Following is the list of NDIS components and supported Windows versions:

Windows Version	NDIS Components
Server 2016	NIC, NVGRE, VXLAN, PacketDirect, VMMQ/vRSS, SR
Nano Server 2016	NIC, VMMQ/vRSS
10 AU Client	NIC
Server 2012 R2	NIC, NVGRE

2. Software/Driver Configuration and Fine-tuning

2.1. Advanced Configuration

The Chelsio network driver provides advanced configuration options under the **Device Properties**. In the **Network Connections** window, select the Chelsio adapter's **Local Area Connection** interface (right-click -> properties). Click the **Configure** button.

2.1.1. VBD Driver Parameters

To see all tunable VBD driver parameters, open the **Device Manager**, click on the **System Devices**, double click on the **Chelsio Bus Enumerator**, and then click the **Advanced** tab.

- **iSCSI Instances**

- *Description:* Specify the number of iSCSI instances.
- *Value:* 0-2 | default
- *Default:* default

- **Nic Instances:**

- *Description:* Specify the number of NIC instances.
- *Value:* 0-8 | default
- *Default:* default

2.1.2. NDIS Miniport Driver Parameters

To see all tunable NDIS Miniport Driver parameters, open the **Device Manager**, click on the **Network adapters**, double click on any **Chelsio Network Adapter**, and then click the **Advanced** tab.

- **Encapsulated Task Offload**

- *Description:* Enable or disable stateless offloads (checksums, LSO, VMQ and filtering) of encapsulated traffic.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **Encapsulated Overhead**

- *Description:* Specify the amount of overhead required in Ethernet frames due to virtual network overlay encapsulation such as VXLAN and NVGRE.
- *Value:*
 - 32
 - 64
 - 96
 - 128

- 160
- 192
- 224
- 256
- *Default:* 0

- **Flow Control**

- *Description:* Enable or disable the receipt or transmission of PAUSE frames. If Rx is enabled, all incoming PAUSE frames will be honored. If Tx is enabled, the HW will send PAUSE frames when its MAC Rx FIFO usage is beyond a high-watermark. If Disabled option is selected, no PAUSE will be sent. When Rx MAC FIFO gets full, further ingress packets will be dropped. If Rx & Tx Enabled is selected, both Rx and Tx options will be enabled.
- *Value:*
 - Auto Negotiation
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Auto Negotiation

- **Interrupt Moderation**

- *Description:* Control the interrupts generated by NIC hardware.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **Interrupt Moderation Rate**

- *Description:* Set the interrupt rate.
- *Value:*
 - Extreme
 - High
 - Low
 - Minimal
 - Moderate
- *Default:* Low

- **IPv4 Checksum Offload**

- *Description:* Allow the checksum to be computed by the adapter for IPV4 packets.
- *Value:*
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Rx & Tx Enabled

- **Jumbo Packet (Maximum Transmission Unit)**
 - *Description:* Specify the Maximum Transmission Unit (MTU) value.
 - *Value:*
 - 4088 Bytes
 - 9014 Bytes
 - Disabled
 - *Default:* Disabled
- **Large Send Offload V2 (IPv4)**
 - *Description:* Allow for configuring Large Send Offload (LSO) using version 2 for the IPv4 traffic.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Large Send Offload V2 (IPv6)**
 - *Description:* Allow for configuring Large Send Offload (LSO) using version 2 for the IPv6 traffic.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Locally Administered Address**
 - *Description:* Specify a new MAC address for the port. If Not Present, the default MAC from EEPROM is used. If specified, the new MAC overwrites the default MAC. This specified MAC is persistent across machine reboot.
 - *Value:* Not Present | Any legal 6-byte MAC address
 - *Default:* Not Present
- **Maximum Number of RSS Processors**
 - *Description:* Change the number of RSS Processors.
 - *Value:* 1-64
 - *Default:* 8
- **Maximum Number of RSS Queues**
 - *Description:* Change the number of RSS Queues.
 - *Value:* 1-16
 - *Default:* 8
- **Maximum RSS Processor Number**
 - *Description:* Set the number of RSS processors to help the overall performance of the computer.
 - *Value:* 0-63
 - *Default:* 63

- **NDIS QoS**

- *Description:* Enable or disable NDIS Quality of Service for DCB interface.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **NetworkDirect Functionality**

- *Description:* Enable or disable Network Direct Functionality.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **NetworkDirect Interrupt Moderation**

- *Description:* Control the interrupts generated during NDK traffic.
- *Value:* Disabled | Enabled
- *Default:* Enabled

For more information, refer <http://msdn.microsoft.com/en-us/library/windows/hardware/ff556017%28v=vs.85%29.aspx>

- **Nvgre Task Offload**

- *Description:* Enable or disable offloading processing of NVGRE encapsulated frames.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **Packet Direct**

- *Description:* Enable or disable PacketDirect feature.
- *Value:* Disabled | Enabled
- *Default:* Disabled

- **Preferred NUMA node**

- *Description:* The NUMA node that the adapter can allocate memory from.
- *Value:*
 - Default Settings
 - Node 0
 - Node 1
 - Node 2
 - Node 3
 - Node 4
 - Node 5
 - Node 6
 - Node 7
- *Default:* Default Settings


- **Receive Side Scaling (RSS)**
 - *Description:* Control the RSS functions. If on, the Microsoft RSS function is enabled. If off, the Chelsio RSS function is enabled.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Recv Segment Coalescing (IPv4)**
 - *Description:* Enable or disable the Receive Segment Coalescing feature for IPv4 traffic. This is a receiver packets aggregating feature which helps reduce the receive host CPU load and improve throughput in a network environment where CPU can be the bottleneck.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Recv Segment Coalescing (IPv6)**
 - *Description:* Enable or disable the Receive Segment Coalescing feature for IPv6 traffic. This is a receiver packets aggregating feature which helps reduce the receive host CPU load and improve throughput in a network environment where CPU can be the bottleneck.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **RSS Base processor**
 - *Description:* Specify the number of the base RSS processors.
 - *Value:* 0-63
 - *Default:* 0
- **RSS load balancing profile**
 - *Description:* Control the RSS load balancing profile.
 - *Value:*
 - Closest Processor
 - Closest Processor Static
 - Conservative Scaling
 - NUMA Scaling
 - NUMA Scaling Static
 - *Default:* NUMA Scaling Static

For more information, refer <http://technet.microsoft.com/en-us/library/hh997036.aspx>

- **Rx Ethernet Queue Size**
 - *Description:* Set different Rx Queue sizes. Driver ships with reasonable defaults.
 - *Value:* 512-4096
 - *Default:* 2048

- **Rx Offload Queue Size**

- *Description:* Set different Offload Rx Queue sizes. Driver ships with reasonable defaults.
- *Value:* 256-2048
- *Default:* 512

 **Note** *This feature is not fully tested and available for experimental usage only.*

- **SR-IOV**

- *Description:* Enable or disable SR-IOV feature.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **TCP Checksum Offload (IPv4):**

- *Description:* Enable or disable computation of TCP checksum by the adapter for IPv4 packets.
- *Value:*
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Rx & Tx Enabled

- **TCP Checksum Offload (IPv6):**


- *Description:* Enable or disable computation of TCP checksum by the adapter for IPv6 packets.
- *Value:*
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Rx & Tx Enabled

- **Tx Ethernet Queue Size**

- *Description:* Set different Tx Queue sizes. Driver ships with reasonable defaults.
- *Value:* 512-4096
- *Default:* 1024

- **Tx Offload Queue Size**

- *Description:* Set different Offload Tx Queue sizes. Driver ships with reasonable defaults.
- *Value:* 256-4096
- *Default:* 512

 **Note** *This feature is not fully tested and available for experimental usage only.*

- **UDP Checksum Offload (IPv4)**

- *Description:* Enable or disable computation of UDP checksum by the adapter for IPv4 packets.
- *Value:*
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Rx & Tx Enabled

- **UDP Checksum Offload (IPv6)**

- *Description:* Enable or disable computation of UDP checksum by the adapter for IPv6 packets.
- *Value:*
 - Disabled
 - Rx & Tx Enabled
 - Rx Enabled
 - Tx Enabled
- *Default:* Rx & Tx Enabled

- **User Mode NetworkDirect**

- *Description:* Enable or disable Microsoft's Remote Direct memory Access (RDMA) interface for high speed, low latency networks.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **Virtual Machine Queues**

- *Description:* Enable or disable the virtual machine queue feature on the interface.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **Virtual Switch RSS**

- *Description:* Enable or disable Virtual Switch Receive Side Scaling.
- *Value:* Disabled | Enabled
- *Default:* Enabled

- **VLAN Identifier**

- *Description:* Specify the VLAN ID to be inserted.
- *Value:* 0-4095
- *Default:* 0

- **VMQ LookAhead Split**

- *Description:* Enable or disable the ability to split receive buffers into lookahead and post-lookahead buffers.

- *Value:* Disabled | Enabled
- *Default:* Enabled
- **VMQ VLAN ID Filtering**
 - *Description:* Enable or disable the ability to filter network packets by using the VLAN identifier in the media access control (MAC) header.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Vxlan Task Offload**
 - *Description:* Enable or disable offloading processing of VXLAN encapsulated frames.
 - *Value:* Disabled | Enabled
 - *Default:* Enabled
- **Vxlan UDP Port Number**
 - *Description:* Specify the current VXLAN UDP destination port number that is currently operational in the NIC.
 - *Value:* 1-65535
 - *Default:* 4789

2.2. NVGRE Offload

Chelsio's Terminator based adapters are uniquely capable of offloading the processing of NVGRE encapsulated frames such that all stateless offloads (checksums, LSO, VMQ, RSS and filtering) are preserved, resulting in significant performance benefits. This feature is enabled by default. Configure the relevant customer and provider network settings on the host.

2.3. VXLAN Task Offload

Virtual Extensible LAN (VXLAN), an extension of the existing VLAN protocol, is an encapsulation protocol which creates an overlay network on the existing Layer 3 infrastructure. VXLAN not only extends VLAN's Ethernet Layer 2 network services but also provides more extensibility, flexibility and scalability for large scale cloud deployments than VLAN.

Chelsio's Terminator based adapters are capable of offloading the processing of VXLAN encapsulated frames such that all stateless offloads (checksums, LSO, VMQ, RSS and filtering) are preserved, resulting in significant performance benefits. This feature is enabled by default.


2.4. PacketDirect

PacketDirect Provider Interface (PDPI), an extension to the existing NDIS miniport driver model, gives applications complete control over buffers, poll processors, and sending and receiving packets over a miniport adapter.

Chelsio's Unified Wire adapters offer extensive support for this feature leading to a higher throughput performance. This feature is disabled by default.

Follow the steps mentioned below to enable and configure PacketDirect:

- i. Open **Device Manager**, click on **Network adapters**, double click on **Chelsio Network Adapter**, and then click the **Advanced** tab.
- ii. Select the *PackDirect* property from the list and enable it. Click OK

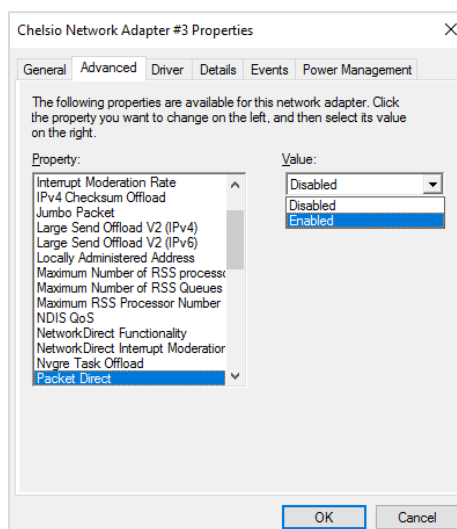

- iii. Create a new virtual switch and enable PacketDirect on the host:

```
C:\Users\Administrator> New-VMSwitch -SwitchName <virtual_switch>
-NetAdapterName <chelsio_interface> -EnablePacketDirect $true
```

```
PS C:\Users\Administrator> New-VMSwitch -SwitchName sw0 -NetAdapterName "Ethernet 3" -EnablePacketDirect $true
Name SwitchType NetAdapterInterfaceDescription
-----
sw0 External Chelsio Network Adapter
```

- iv. Enable *Azure Virtual Filtering Platform (VFP) Switch Extension* on the switch.

```
C:\Users\Administrator> Enable-VMSwitchExtension -VMSwitchName
<virtual_switch> -Name "Microsoft Azure VFP Switch Extension"
```

```
PS C:\Users\Administrator> Enable-VMSwitchExtension -VMSwitchName sw0 -Name "Microsoft Azure VFP Switch Extension"

Id           : E9B59CFA-2BE1-4B21-828F-B6FBDBDDC017
Name        : Microsoft Azure VFP Switch Extension
Vendor      :
Version     :
ExtensionType : Forwarding
ParentExtensionId :
ParentExtensionName :
SwitchId    : 48f433e2-10ad-447a-8566-bb4864dbcb12
SwitchName  : sw0
Enabled     : True
Running     : True
CimSession  : CimSession: .
ComputerName : DUKE2
IsDeleted   : False
```

- v. Add a virtual network adapter to the virtual machine and connect it to the virtual switch:

```
C:\Users\Administrator> Add-VMNetworkAdapter -VMName <virtual_machine>
-SwitchName <virtual_switch> -Name <virtual_adapter>
```

```
C:\Users\Administrator> Add-VMNetworkAdapter -VMName VM1 -SwitchName sw0 -Name pd_nw1
C:\Users\Administrator>
```

- vi. Set the number of PacketDirect processors:

```
C:\Users\Administrator> Set-VMNetworkAdapter -VMName <virtual_machine>
-PacketDirectNumProcs <1-8>
```

```
PS C:\Users\Administrator> Set-VMNetworkAdapter -VMName VM1 -PacketDirectNumProcs 4
PS C:\Users\Administrator>
```

- vii. Start the VM:

```
C:\Users\Administrator> Start-VM <virtual_machine>
```

```
PS C:\Users\Administrator> Start-VM VM1
```

viii. On the host, create a PowerShell script (with `.ps1` extension) with the following code:

```
param(
    [string]$switchName = $(throw "please specify a switch name")
)

$switches = Get-WmiObject -Namespace root\virtualization\v2 -Class
Msvm_VirtualEthernetSwitch
foreach ($switch in $switches) {
    if ( $switch.ElementName -eq $switchName) {
        $ExternalSwitch = $switch
        break
    }
}

$vpfCtrlExe = "vpfctrl.exe"
$ports = $ExternalSwitch.GetRelated("Msvm_EthernetSwitchPort",
"Msvm_SystemDevice", $null, $null, $null, $null, $false, $null)
foreach ($port in $ports) {
    #if ($port.ElementName -eq "Dynamic Ethernet Switch Port")
    #{
        $portGuid = $port.Name
        echo "Disabling VFP on port: " $portGuid
        & $vpfCtrlExe /disable-port /port $portGuid
    #}
}
```

ix. Run the script:

```
PS C:\Users\Administrator> <script>.ps1 <virtual_switch>
```

```

PS C:\Users\Administrator> .\disableVFP.ps1 sw0
Disabling VFP on port:
0D46B798-B405-40FE-86BC-6C67A870F368
ERROR: failed to execute disable-port
Error (1): Incorrect function.
Disabling VFP on port:
670970D3-23AF-45B0-8741-422C79F2B3DC
ERROR: failed to execute disable-port
Error (1): Incorrect function.
Disabling VFP on port:
C0C0B3ED-F097-4815-AD12-66B0492D360D
Command disable-port succeeded!
Disabling VFP on port:
D9049B8A-D9AA-4D08-B746-D0960EC25848
Command disable-port succeeded!
PS C:\Users\Administrator>

```

Note The errors seen in the output are expected.

- x. Use system performance monitoring utilities, such as *PerfMon*, to add PacketDirect counters and verify if they are updated.

PacketDirect Transmit Counters	EC 1300: IfIndex 6: VPort 1: TX 3:	EC 1300: IfIndex 6: VPort 2: TX 8:	EC 2604: IfIndex 6: VPort 2: TX 6:	EC 2848: IfIndex 6: VPort 2: TX 5:	EC 4312: IfIndex 6: VPort 0: TX 1:	EC 4312: IfIndex 6: VPort 2: TX 7:
Bytes Transmitted	33,969,000	132,000	1,160,000	30,439,000	0,000	344,000
Bytes Transmitted/sec	0,000	0,000	0,000	0,000	0,000	0,000
Packets Transmitted	135,000	2,000	14,000	96,000	0,000	4,000
Packets Transmitted/sec	0,000	0,000	0,000	0,000	0,000	0,000

Processor Information	_Total
% Processor Time	0.473

2.5. VMMQ/vRSS

Network throughput of a multi-core virtual machine is limited by the processing power of a single virtual processor, since only one processor handles all the interrupts from a virtual network adapter. Virtual Machine Multi-Queue (VMMQ) or Virtual Switch Receive-side Scaling (vRSS) solves this bottleneck by distributing the network traffic across multiple virtual processors.

If NDIS function driver is installed using Unified Wire installer, VMMQ/vRSS will be enabled by default. However, if the driver is installed manually (using zip package), the feature will be disabled. Use **NDIS Miniport Driver Parameters** (Device manager → Chelsio Network Adapter Properties → Advanced Tab → Virtual Switch RSS) to enable it. Additionally, VMMQ/vRSS needs to be enabled for each Virtual Machine using the below command on the host:

```

PS C:\Users\Administrator> Set-VMNetworkAdapter -VMName <VM Name> -
VrssEnabled:$true -VmmqEnabled:$true -VmmqQueuePairs <No. of Queues>

```

Example:

```

PS C:\Users\Administrator> Set-VMNetworkAdapter -VMName VM -VrssEnabled:$true -VmmqEnabled:$true -VmmqQueuePairs 8

```

III. iWARP (ND)

1. Introduction

ND or Network Direct is Microsoft's new Remote Direct memory Access (RDMA) interface for high speed, low-latency networks such as those running on 10/25/40/50/100 Gigabit Ethernet or InfiniBand, with an architecture that directly bypasses OS and TCP/IP overhead. ND achieves better performance for massively parallel programs that can utilize very low-latency, high-bandwidth, and enables efficient CPU utilization.

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio adapters that are compatible with Chelsio iWARP (ND) driver:

- T62100-LP-CR
- T6225-CR
- T580-CR
- T580-LP-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-BT

1.2. Software Requirements

1.2.1. Windows Requirement

Currently Chelsio iWARP (ND) driver is available for the following Windows version(s):

- Server 2016
- Server 2012 R2

Other versions have not been tested and are not guaranteed to work.

2. Software/Driver Configuration and Fine-tuning

2.1. Registering iWARP(ND) driver

Chelsio Unified Wire Installer registers Chelsio iWARP provider automatically during installation.

In case of zip package, run the following command to register:

```
C:\Users\Administrator>chinstallsp.exe -i
```

The iWARP provider should show up using:

```
C:\Users\Administrator>chinstallsp.exe -l
```

You should see a similar output:

```
0000001019 - Chelsio Network Direct provider
```

IV. SMB Direct

1. Introduction

SMB Direct is an extension of the Server Message Block (SMB) technology by Microsoft used for file operations. The *Direct* part implies the use of various high speed Remote Data Memory Access (RDMA) methods to transfer large amounts of data with little CPU intervention. By using RDMA as a transport medium for SMB, unprecedented levels of performance and efficiency can be achieved. With fully offloaded RDMA support, Chelsio Unified Wire adapters deliver large performance and efficiency gains to Windows users in a seamless, plug and play fashion.

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio adapters that are compatible with Chelsio SMB Direct and RDMA/NVGRE concurrent (Mode 2) driver:

- T62100-CR
- T62100-LP-CR
- T6425-CR
- T6225-CR
- T580-CR
- T580-LP-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-BT

1.2. Software Requirements

1.2.1. Windows Requirement

Currently Chelsio SMB Direct driver is available for the following Windows versions:

- Server 2016 *
- Nano Server 2016
- 10 AU Client
- Server 2012 R2 (Mode 2 not supported)

* SMB Direct and RDMA/NVGRE concurrent (Mode 2)

Other versions have not been tested and are not guaranteed to work.

2. Software/Driver Configuration and Fine-tuning

2.1. Enabling SMB Direct

- **Windows Server 2016/Server 2012 R2**

SMB Direct is installed and enabled by default on Windows Server 2016/Server 2012 R2. RDMA functionality on Chelsio adapters will be enabled after installing the driver from the package.

- **Windows 10 AU Client**

On Windows 10 AU Client systems, SMB Direct feature is installed but disabled by default. To enable it, follow the steps mentioned below:

- Open **Control Panel** and click **Programs**.
- Under **Programs and Features**, click **Turn Windows features on or off**.
- In the **Windows Features** window, scroll down and select the *SMB Direct* checkbox.
- Click **OK**.

RDMA functionality on Chelsio adapters will be enabled after installing the driver from the package.

- **Configuration**

You can use the PowerShell command `Get-NetAdapterRdma` to get a list of RDMA capable interfaces in your system. At least one adapter should indicate “RDMA Capable” true to take advantage of SMB RDMA capability.

The next step is to configure your network so that SMB server and client machines can communicate with each other. Please configure the Microsoft firewall to allow traffic between the SMB clients and server.

2.2. Verifying RDMA

There are number of ways to verify if RDMA is working:

2.2.1. Verify active connections using PowerShell

Open PowerShell window and execute the command `Get-SmbConnection`

2.2.2. Use Event Viewer

You can use Event Viewer to view SMB connection events. To do this:

- Open Event Viewer
- In the console tree, expand **Event Viewer**.
- Navigate to **Application and Service Logs-> Microsoft->Windows->SMBClient ->Operational**

2.3. RDMA/NVGRE concurrent (Mode 2)

In this mode, you can run RDMA traffic using a virtual switch. This feature is enabled by default in the driver, but must be enabled on the Hyper-V Virtual Ethernet adapter. Follow the steps mentioned below to enable the feature:

- i. If you haven't done already, run the Chelsio Unified Wire Installer which will install NDIS function driver.
- ii. Verify if the driver is installed and loaded using the `Get-NetAdapter` command. The `InterfaceDescription` field should list Chelsio adapter as shown in the image below:

```
PS C:\Users\Administrator> Get-NetAdapter
```

Name	InterfaceDescription	ifIndex	Status	MacAddress	LinkSpeed
vEthernet (p0)	Hyper-V Virtual Ethernet Adapter	18	Up	00-07-43-04-B4-20	25 Gbps
Ethernet 4	Chelsio Network Adapter #2	9	Up	00-07-43-04-B4-28	25 Gbps
Ethernet 3	Chelsio Network Adapter	2	Up	00-07-43-04-B4-20	25 Gbps
Ethernet 2	Intel(R) 82574L Gigabit Network Co...#2	8	Disconnected	00-25-90-35-95-FB	0 bps
Ethernet	Intel(R) 82574L Gigabit Network Conn...	11	Not Present	00-25-90-35-95-FA	0 bps
Local Area Connection* 1	Microsoft Kernel Debug Network Adapter	10	Up	00-25-90-35-95-FA	1 Gbps

Figure 68 - Verifying Chelsio driver

- iii. Next, create a virtual switch using the following syntax:

```
PS C:\Users\Administrator> New-VMSwitch -Name <virtual_switch>
-NetAdapterName <chelsio_interface>
```

```
PS C:\Users\Administrator> New-VMSwitch -Name switch0 -NetAdapterName "Ethernet 4"
```

Name	SwitchType	NetAdapter	InterfaceDescription
switch0	External	Chelsio	Network Adapter #2

Figure 69 - Creating virtual switch

- iv. Using `Get-NetAdapter` command, verify if the virtual switch is created successfully. The Mac address of the switch and the port on which the switch was created, should be same.

```
PS C:\Users\Administrator> Get-NetAdapter
```

Name	InterfaceDescription	ifIndex	Status	MacAddress	LinkSpeed
vEthernet (switch0)	Hyper-V Virtual Ethernet Adapter #4	3	Up	00-07-43-04-B4-28	25 Gbps
vEthernet (p0)	Hyper-V Virtual Ethernet Adapter	18	Up	00-07-43-04-B4-20	25 Gbps
Ethernet 4	Chelsio Network Adapter #2	9	Up	00-07-43-04-B4-28	25 Gbps
Ethernet 3	Chelsio Network Adapter	2	Up	00-07-43-04-B4-20	25 Gbps
Ethernet 2	Intel(R) 82574L Gigabit Network Co...#2	8	Disconnected	00-25-90-35-95-FB	0 bps
Ethernet	Intel(R) 82574L Gigabit Network Conn...	11	Not Present	00-25-90-35-95-FA	0 bps
Local Area Connection* 1	Microsoft Kernel Debug Network Adapter	10	Up	00-25-90-35-95-FA	1 Gbps

Figure 70 - Verifying virtual switch

- v. Enable RDMA on the virtual switch using `Enable-NetAdapterRdma` command.

```
PS C:\Users\Administrator> Enable-NetAdapterRdma
PS C:\Users\Administrator> _
```

Figure 71 - Enabling RDMA on virtual switch

- vi. Run `Get-NetAdapterRdma` command to verify if RDMA is enabled on the switch.

```
PS C:\Users\Administrator> Get-NetAdapterRdma
```

Name	InterfaceDescription	Enabled
vEthernet (switch0)	Hyper-V Virtual Ethernet Adapter #4	True
vEthernet (p0)	Hyper-V Virtual Ethernet Adapter	True
Ethernet 4	Chelsio Network Adapter #2	True
Ethernet 3	Chelsio Network Adapter	True

Figure 72 - Verifying RDMA on virtual switch

2.1. Storage Replica

Storage Replica (SR) is a Windows Server 2016 feature which enables block-level replication between clusters or individual servers for disaster recovery, and stretching of failover clusters to metropolitan (MAN) and wide area (WAN, US coast-to-coast) distances for high availability. SR provides two modes of operation: *synchronous* and *asynchronous* replication. Synchronous replication enables mirroring of data with zero data loss at the volume level, whereas asynchronous replication trades off full data replication guarantees for reduced latency by locally completing I/O operations.

Currently, Unified Wire supports Server to Server replication mode. In this mode, data is synced between two servers and each server keeps an identical copy of the same volume. For more information on how to setup and configure in this mode, please refer to [Microsoft's official documentation](#).

2.2. Troubleshooting

If RDMA is not working in your system, please check for the following:

- Operating system version should be Windows Server 2016, Server 2012 R2 or 10 AU Client.
- Verify network interface configurations on both sides.
- Please ensure that the interfaces are reachable using `ping` command.
- In the Event Viewer (on the client side), please ensure that the traffic running is not over TCP.

- Verify that SMB driver is loaded and working. Open PowerShell window and execute the following command:

```
C:\Users\Administrator>driverquery.exe | findstr \I smb
```

- Verify that Chelsio driver is loaded and working. Open PowerShell window and execute the following command:

```
C:\Users\Administrator>driverquery.exe | findstr \I chel
```

- Confirm that traffic is running over Chelsio adapter.
- Look for potential errors in Event Log.

V. NDIS SR-IOV

1. Introduction

The ever-increasing network infrastructure of IT enterprises has led to a phenomenal increase in maintenance and operational costs. IT managers are forced to acquire more physical servers and other data center resources to satisfy storage and network demands. To solve the Network and I/O overhead, users are opting for server virtualization which consolidates I/O workloads onto lesser physical servers thus resulting in efficient, dynamic and economic data center environments. Other benefits of Virtualization include improved disaster recovery, server portability, cloud computing, Virtual Desktop Infrastructure (VDI), etc. Chelsio's Unified Wire family of adapters deliver increased bandwidth, lower latency and lower power with virtualization features to maximize cloud scaling and utilization. The adapters also provide full support for PCI-SIG SR-IOV to improve I/O performance on a virtualized system.

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio adapters that are compatible with the Chelsio NDIS SR-IOV driver:

- T62100-CR
- T62100-LP-CR
- T62100-SO-CR
- T6425-CR
- T6225-CR
- T6225-SO-CR
- T580-CR
- T580-LP-CR
- T580-SO-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-SO-CR
- T520-BT

1.2. Software Requirements

Currently, the NDIS SR-IOV driver is available for the following Windows versions:

- Server 2016
- Nano Server 2016
- Server 2012 R2

Other versions have not been tested and are not guaranteed to work.

2. Software/Driver Configuration and Fine-tuning

Please ensure that Unified Wire is installed on the host before proceeding. Refer [Software/Driver Installation](#) section of the **Chelsio Unified Wire** chapter for step-by-step instructions.

2.1. Enabling SR-IOV

Important *The adapter's configuration should be updated to make use of the SR-IOV feature. You can do this by running the **chelsio_adapter_config.ps1** configuration script. To use the adapter in non-SRIOV scenarios in Windows or with other operating systems, the configuration type must be changed to **NON-SRIOV (Default)**.*

2.1.1. Windows GUI Machine


In case of Installer, the script will be copied to `<system_drive>\Windows\System32` during installation.

If you are using the zip package, copy `cxgbtool.exe` from `ChelsioUwire-x.x.x.xx` folder to `<system_drive>\Windows\System32`. Also, change your working directory to `ChelsioUwire-x.x.x.xx\Adapter Configuration`.

- i. Open PowerShell with administrative privileges.
- ii. Check if the machine is SR-IOV capable:

```
PS C:\Users\Administrator> Get-VMHost | fl *iov*
```

The `IovSupport` field should display “True” as shown in the image below:

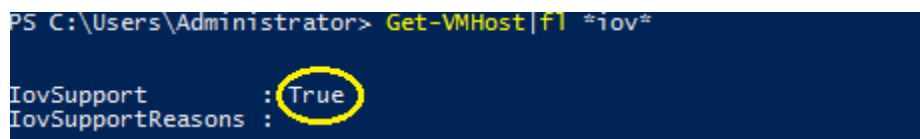

```
PS C:\Users\Administrator> Get-VMHost | fl *iov*
IovSupport           : True
IovSupportReasons   :
```

Figure 73 - Checking SR-IOV capability

- iii. Run the adapter configuration script and select *Windows GUI* (option 1) as the Windows version. Hit [Enter].

Installer:

```
PS C:\Users\Administrator> chelsio_adapter_config.ps1
```



```

PS C:\Users\Administrator> chelsio_adapter_config.ps1
  1. Windows GUI
  2. Windows Nano Server
Input: 1

chelsio_adapter_config Version
Please stop all the traffic on Chelsio adapters before updating !!

```

Figure 74 - Adapter configuration utility (Installer)

Zip Package:

```

PS D:\ChelsioUwire-x.x.x.xx\Adapter Configuration>
.\chelsio_adapter_config.ps1

```

```

PS D:\ChelsioUwire-... \Adapter Configuration> .\chelsio_adapter_config.ps1
  1. Windows GUI
  2. Windows Nano Server
Input: 1

chelsio_adapter_config Version
Please stop all the traffic on Chelsio adapters before updating !!

```

Figure 75 - Adapter configuration utility (Zip Package)

- iv. Enter the index of the adapter for which the configuration needs to be updated. Hit [Enter].

```

Select the Adapter
  1.T6225-CR          S/N:RE41160011
Input : 1

```

Figure 76 - Selecting adapter

- v. Select SRIOV (option 2) as the configuration type and enter y to confirm. Hit [Enter].

```

Choose the configuration type:
  1. NON-SRIOV (Default)
  2. SRIOV
Input : 2
Do you want to continue (y/n): y
Successfully updated the selected configuration type.
Verification: Passed
Please reboot the machine for changes to take effect.
PS C:\Users\Administrator> _

```

Figure 77 - Setting the configuration type

- vi. Reboot system for changes to take effect.


2.1.2. Nano Server (Nano Server Installer & Zip Package)

- i. Connect to Nano Server Machine.

- ii. Check if the machine is SR-IOV capable using the following command:

```
[nanomachine-ip]: PS C:\> Get-VMHost | fl *iov*
```

The *lovSupport* field should display “True” as shown in the image below:

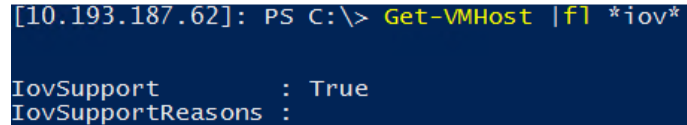


```
[10.193.187.62]: PS C:\> Get-VMHost | fl *iov*  
IovSupport           : True  
IovSupportReasons   :
```

Figure 78 - Checking SR-IOV capability

- iii. If Unified wire was installed on the Nano Server machine using the Nano Server installer, skip to step (vii). If the driver components were manually installed using the boot image (Zip package), follow all the steps mentioned below.
- iv. Copy *ChelsioUwire-x.x.x.xx* folder to a desired location.
- v. Copy *cxgbnano.exe* from *ChelsioUwire-x.x.x.xx* folder to *<system_drive>\Windows\System32*
- vi. Change your working directory to *ChelsioUwire-x.x.x.xx\Adapter Configuration*.
- vii. Run the adapter configuration script and select *Windows Nano Server (option 2)* as the Windows version. Hit [Enter].

Nano Server Installer

```
[nanomachine-ip]: PS D:\> chelsio_adapter_config.ps1
```

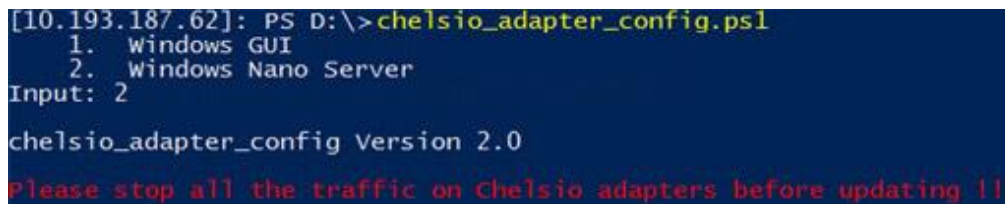

```
[10.193.187.62]: PS D:\> chelsio_adapter_config.ps1  
1. Windows GUI  
2. Windows Nano Server  
Input: 2  
  
chelsio_adapter_config Version 2.0  
Please stop all the traffic on Chelsio adapters before updating !!
```

Zip Package

```
[nanomachine-ip]: PS D:\ChelsioUwire-x.x.x.xx\Adapter Configuration>  
.\chelsio_adapter_config.ps1
```

```
[10.193.187.62]: PS D:\ChelsioUwire-5.0.0.57\Adapter Configuration> .\chelsio_adapter_config.ps1
1. Windows GUI
2. Windows Nano Server
Input: 2
chelsio_adapter_config Version 2.0
Please stop all the traffic on Chelsio adapters before updating !!
```

Figure 79 - Adapter configuration utility

- viii. Enter the index of the Chelsio adapter for which the configuration needs to be updated. Hit [Enter].

```
Select the Adapter
1.T6225-CR          S/N:RE41160011
Input : 1
```

Figure 80 - Selecting adapter

- ix. Select SRIOV (option 2) as the configuration type and enter y to confirm. Hit [Enter].

```
Choose the configuration type:
1. NON-SRIOV (Default)
2. SRIOV
3. Port settings
Input : 2
Do you want to continue (y/n): y
Successfully updated the selected configuration type.
Verification: Passed
Please reboot the machine for changes to take effect.
```

Figure 81 - Setting the configuration type

- x. Reboot the Nano Server system for changes to take effect.

2.2. vSwitch Configuration

- i. Create a vSwitch with SR-IOV enabled using Chelsio adapter.
- ii. Assign a virtual network adapter with SR-IOV enabled to the VM.
- iii. Bring up the VM.

2.3. Guest (VM) Configuration

Please ensure that Unified Wire is installed on the guest before proceeding. Refer Software/Driver Installation section of the Chelsio Unified Wire chapter for step-by-step instructions.

To uninstall Unified Wire, please refer Software/Driver Uninstallation section of the Chelsio Unified Wire chapter for step-by-step instructions.

VI. iSCSI Storport Miniport

1. Introduction

The Chelsio Terminator series of Adapters support iSCSI acceleration and iSCSI Direct Data Placement (DDP) where the hardware handles the expensive byte touching operations, such as CRC computation and verification, and direct DMA to the final host memory destination:

- **iSCSI PDU digest generation and verification**

On transmitting, Chelsio h/w computes and inserts the Header and Data digest into the PDUs. On receiving, Chelsio h/w computes and verifies the Header and Data digest of the PDUs.

- **Direct Data Placement (DDP)**

Chelsio h/w can directly place the iSCSI Data-In or Data-Out PDU's payload into pre-posted final destination host-memory buffers based on the Initiator Task Tag (ITT) in Data-In or Target Task Tag (TTT) in Data-Out PDUs.

- **PDU Transmit and Recovery**

On transmitting, Chelsio h/w accepts the complete PDU (header + data) from the host driver, computes and inserts the digests, decomposes the PDU into multiple TCP segments if necessary, and transmit all the TCP segments onto the wire. It handles TCP retransmission if needed.

On receiving, Chelsio h/w recovers the iSCSI PDU by reassembling TCP segments, separating the header and data, calculating and verifying the digests, then forwarding the header to the host. The payload data, if possible, will be directly placed into the pre-posted host DDP buffer. Otherwise, the payload data will be sent to the host too.

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio Adapters that are compatible with the iSCSI Storport Miniport:

- T62100-CR
- T62100-LP-CR
- T6225-CR
- T520-BT
- T520-CR
- T580-CR
- T580-LP-CR
- T520-LL-CR
- T540-CR

1.2. Software Requirements

1.2.1. Windows Requirement

Currently iSCSI Storport Miniport driver is available for Windows versions.

- Server 2016
- 10 AU Client
- Server 2012 R2

Other versions have not been tested and are not guaranteed to work.

2. Software/Driver Configuration and Fine-tuning

2.1. Configuring iSCSI Initiator

Follow the steps mentioned below to assign IP, Subnet Mask, Default Gateway and VLAN IDs on port 0.

1. Open **Device Manager**, right click on **Chelsio iSCSI Initiator** under **Storage controllers** and click on **Properties**.

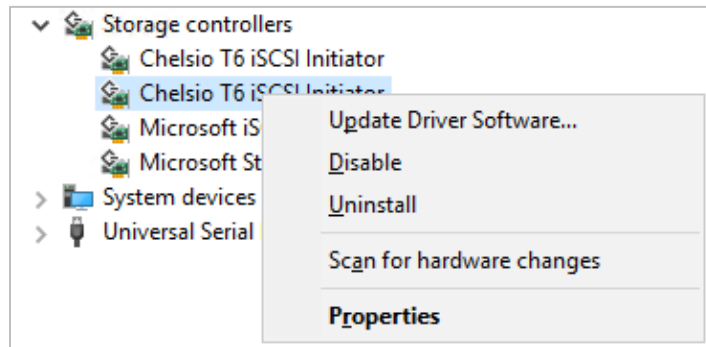


Figure 82 - Device Manager

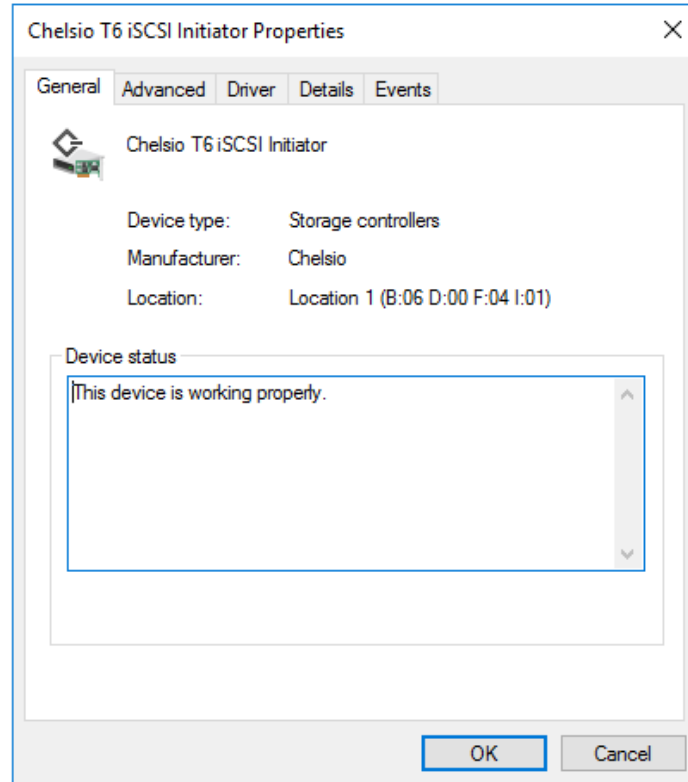


Figure 83 - Chelsio adapter physical port properties

2. Click on **Advanced** tab and select IP option and add IP. Similarly add subnet mask and default gateway.

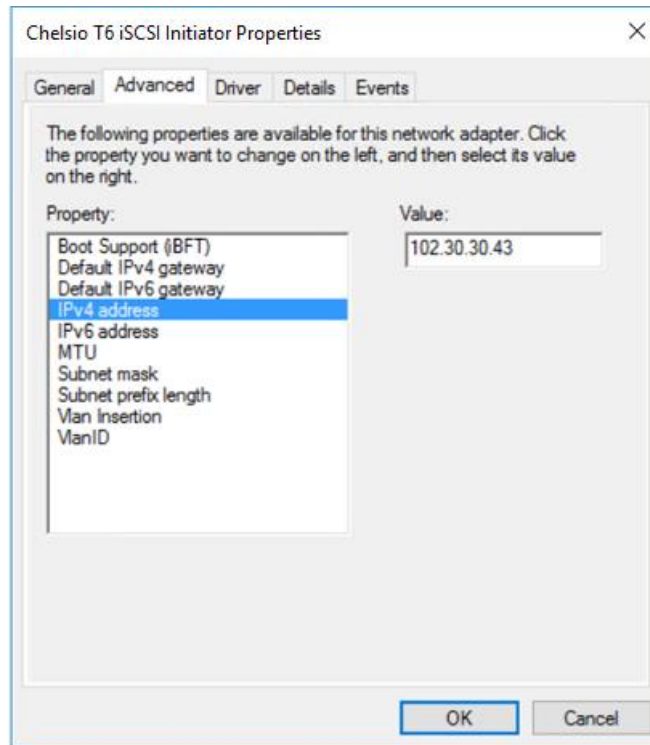


Figure 84 - Assigning IPv4 address

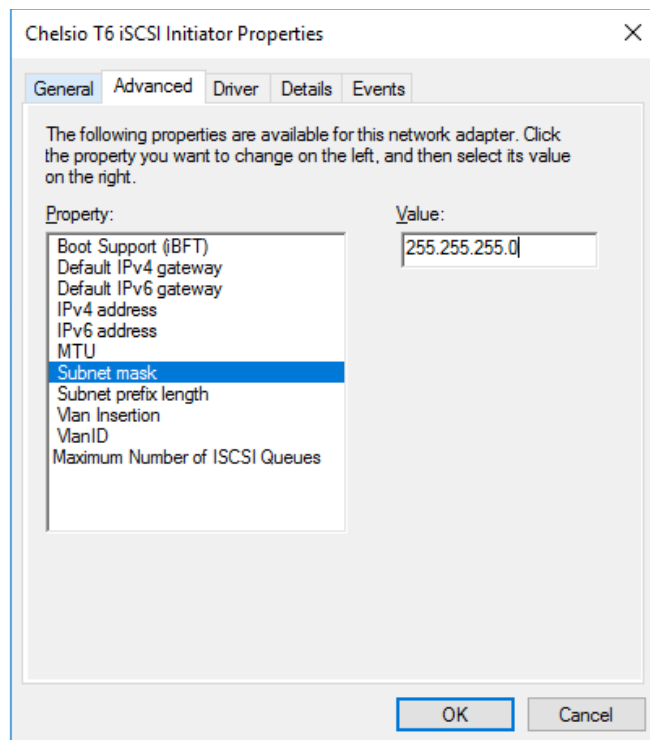


Figure 85 - Adding Subnet mask

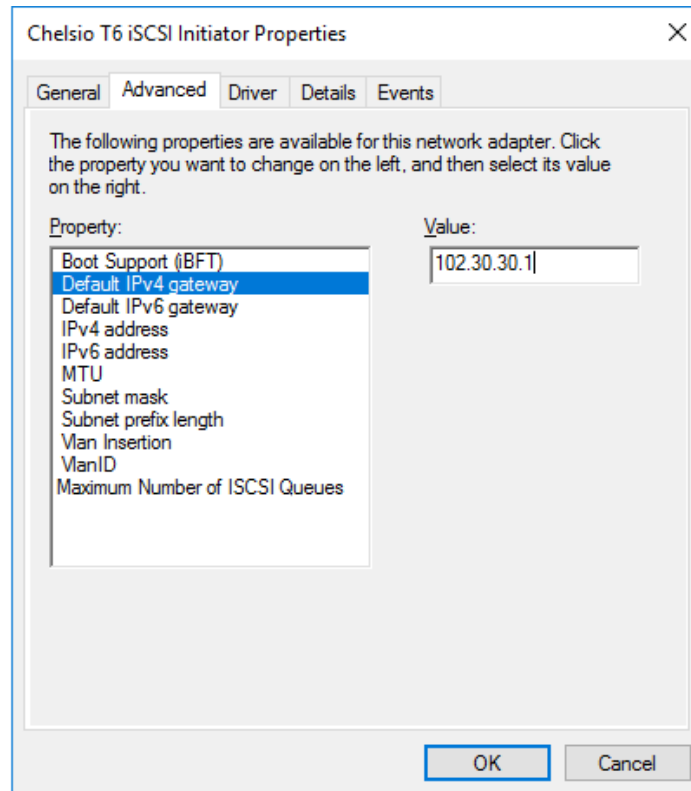


Figure 86 - Adding Default IPv4 gateway

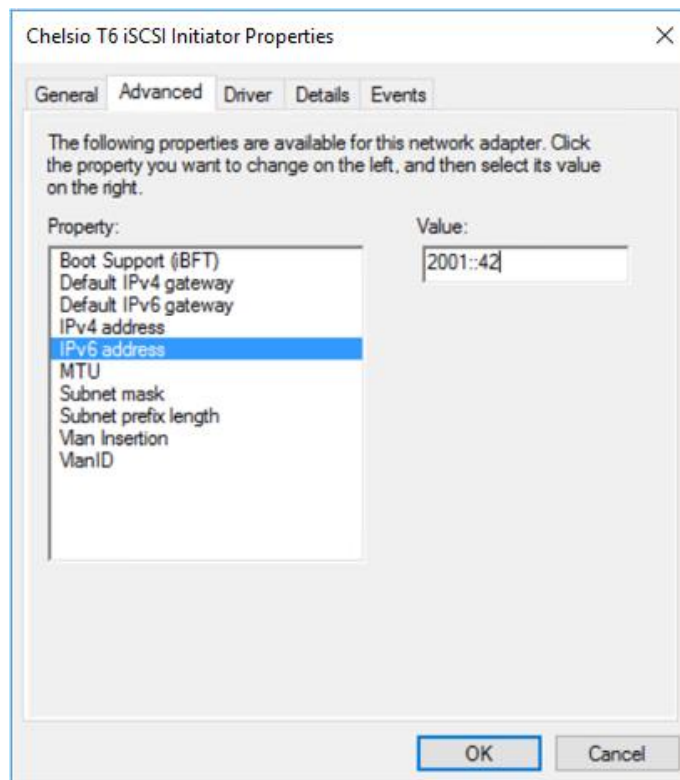


Figure 87 - Assigning IPv6 address

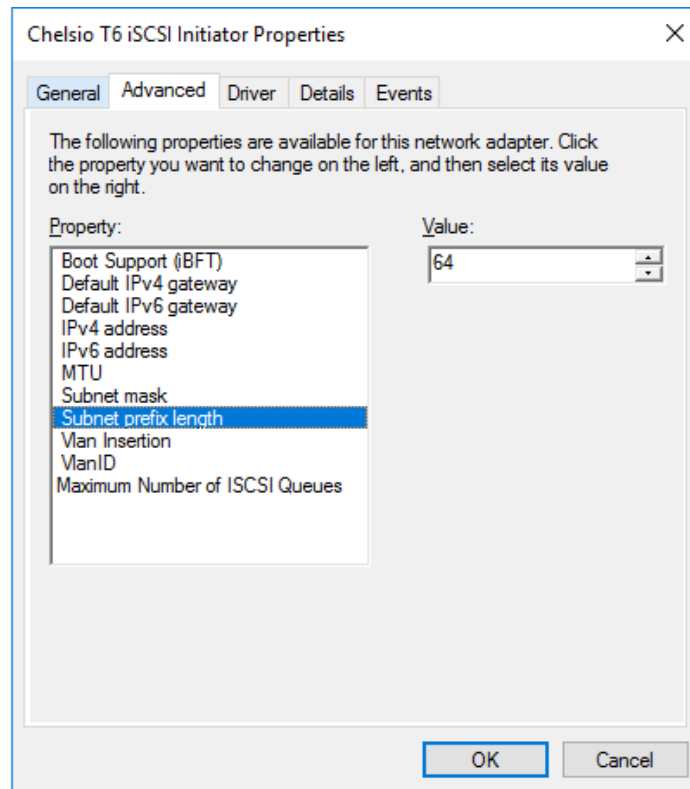


Figure 88 - Adding Subnet prefix length

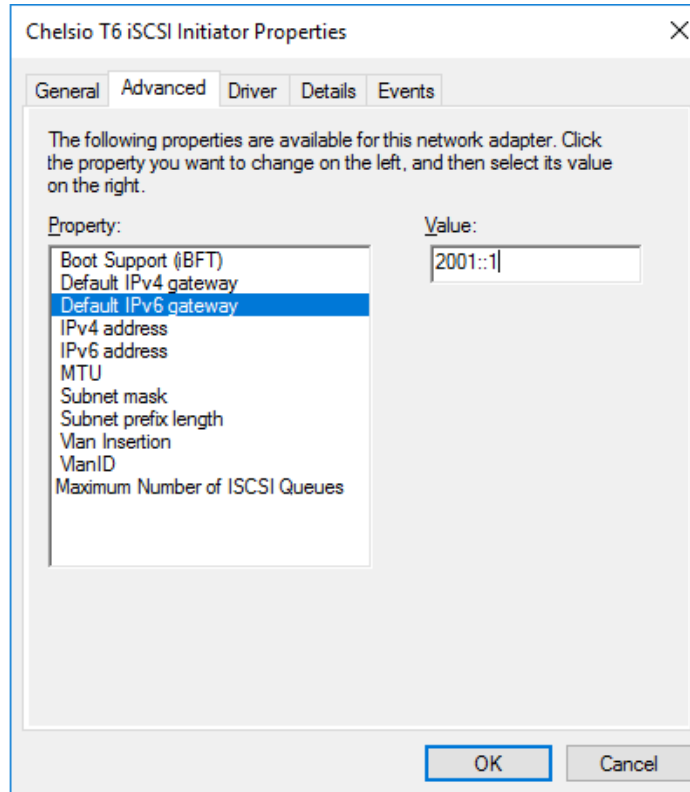


Figure 89 - Adding Default IPv6 gateway

3. Select MTU and assign value as per requirement.

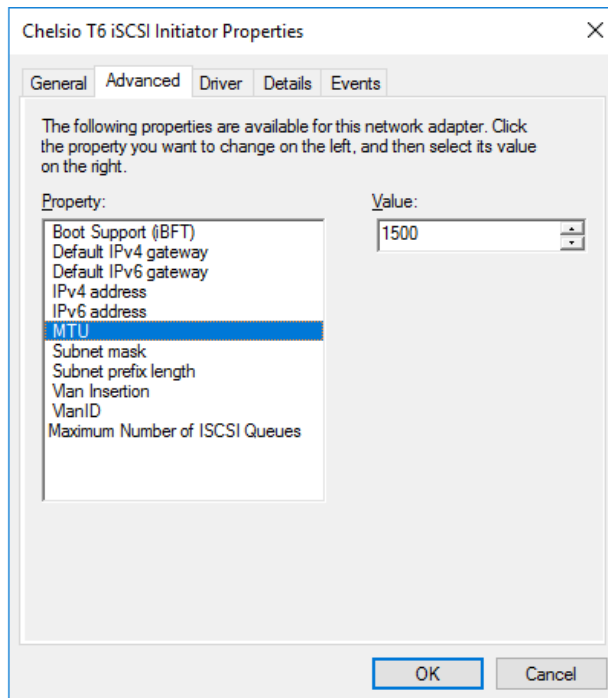


Figure 90 - Setting MTU

4. VLAN is disabled by default, so to enable, click on “Vlan Insertion” and select value as “Enabled”.

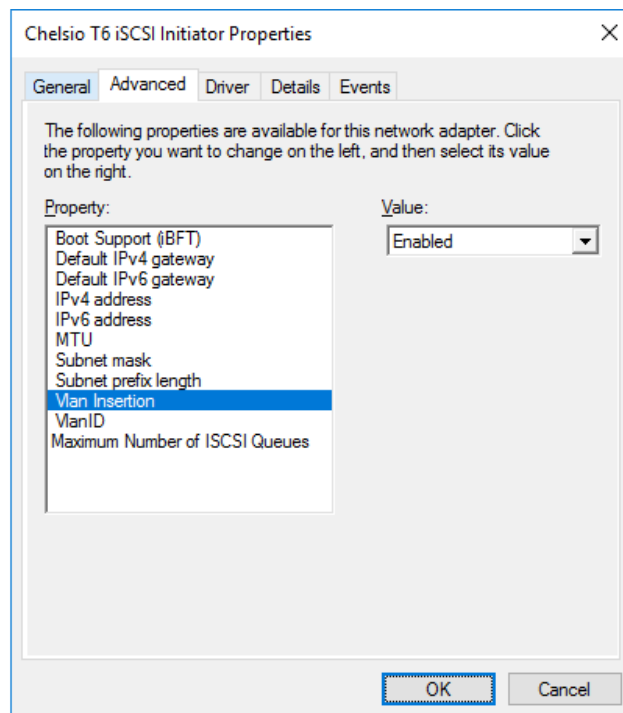


Figure 91 - Enabling VLAN

5. Assign the required VLAN ID and click **OK**.

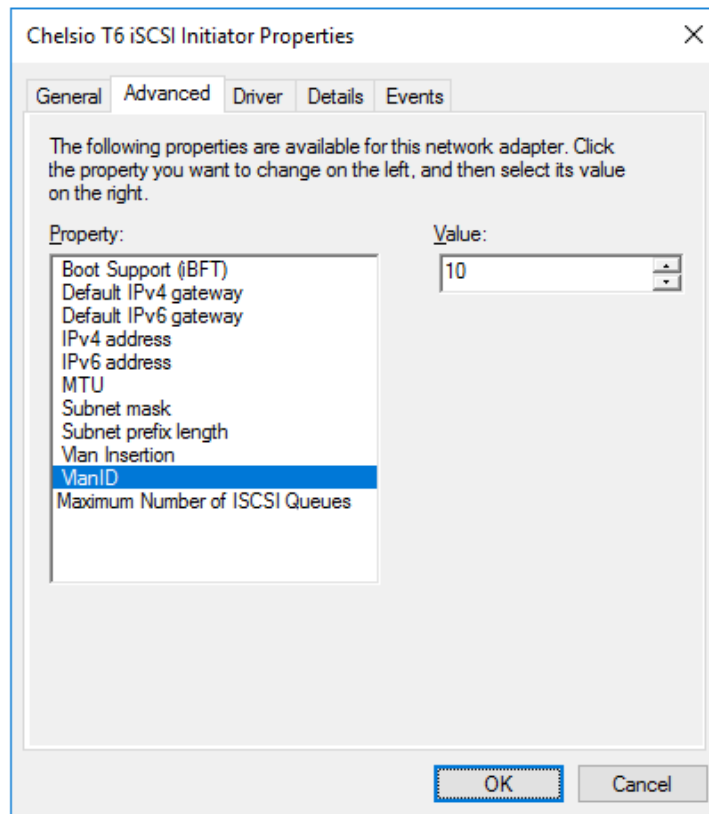


Figure 92 - Assigning VLAN Id

Repeat the above-mentioned steps to assign these driver properties on other ports.

2.2. iSCSI Target Discovery and Login

Before target discovery, make sure a static IP address is assigned in the Device Manager to the respective Chelsio iSCSI node.

Following are the set of instructions to discover the target and login to it using the Chelsio iSCSI interface:

1. To start the Initiator configuration, go to Control Panel and click on the **iSCSI Initiator** option.

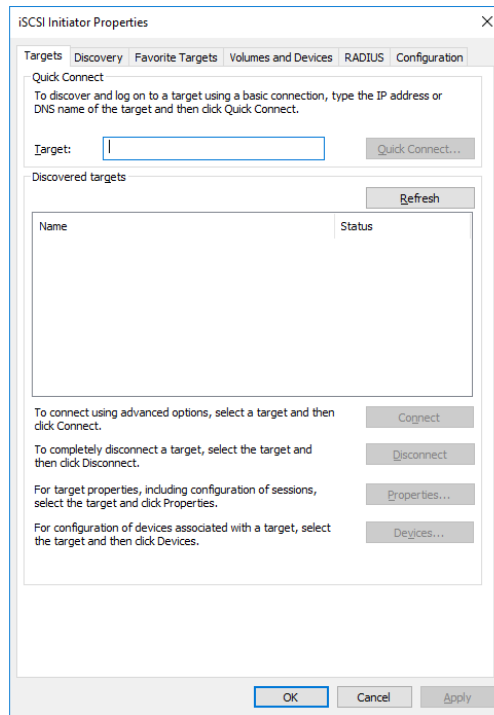


Figure 93 - iSCSI Initiator Properties: Targets tab

2. Choose the **Discovery** tab and click on **Discover Portal**.

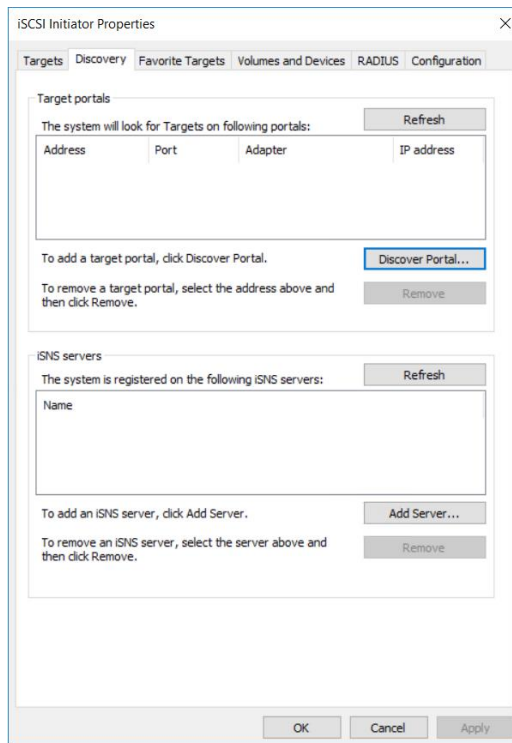


Figure 94 - iSCSI Initiator Properties: Discovery tab

3. Click on **Advanced** button.

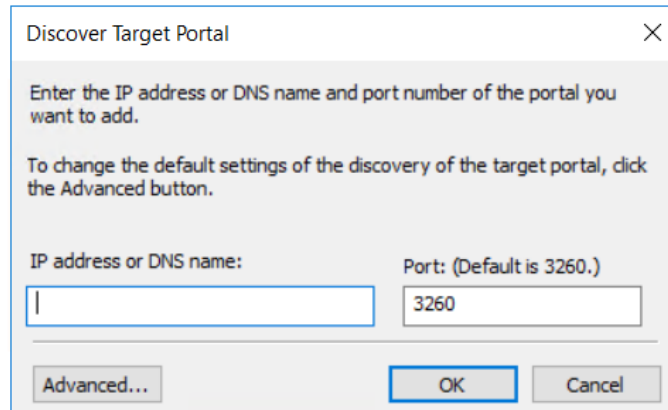


Figure 95 - Discovery Target Portal window

4. In the **Advanced Settings** window, select **Chelsio iSCSI interface** as the local adapter.

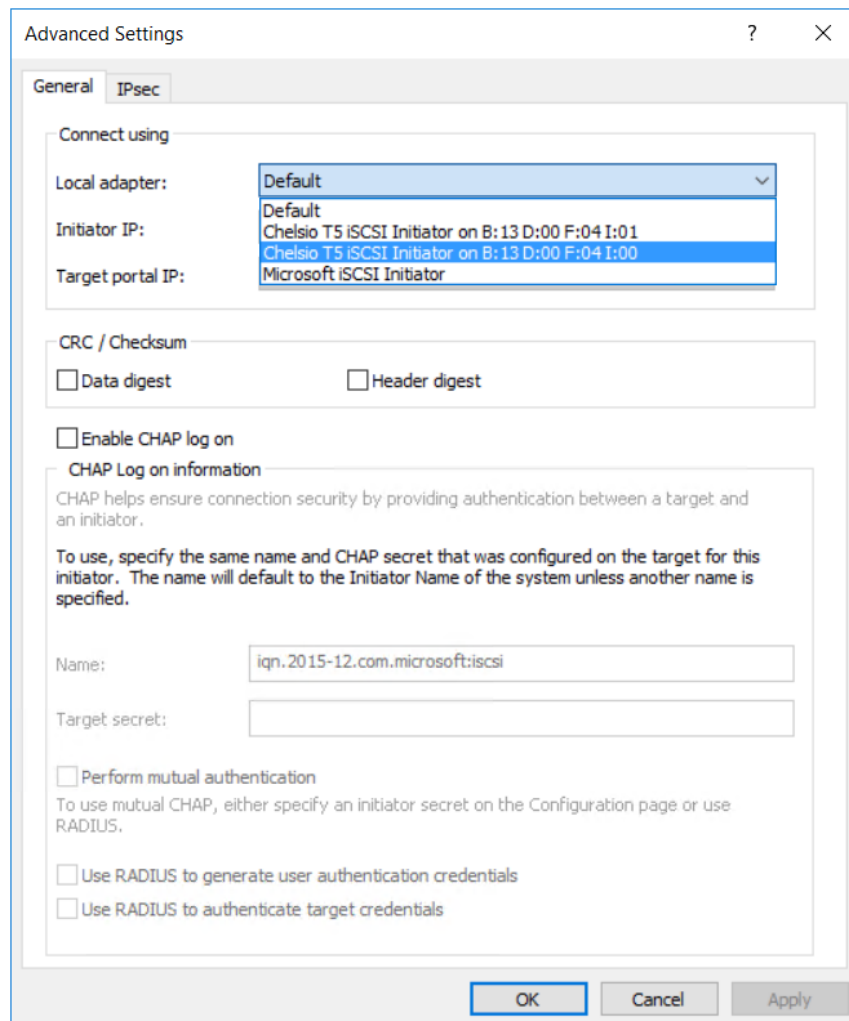


Figure 96 - Discovery Target Portal Advanced Settings: Selecting Local adapter

5. Select the corresponding Chelsio iSCSI Interface IP as the Initiator IP and click **OK**.

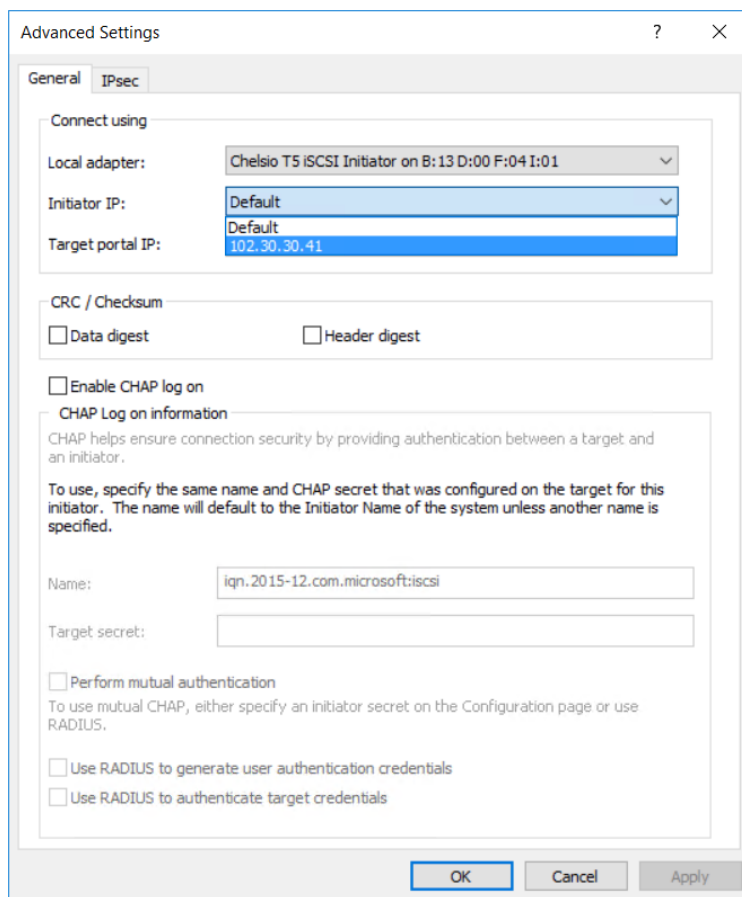


Figure 97 - Discovery Target Portal Advanced Settings: Specifying Initiator IP

6. Enter the IP address (DNS name not supported) of the target machine and the corresponding port number and click **OK** on the **Discover Target Portal** Window. Note that the default port number for iSCSI traffic is 3260.

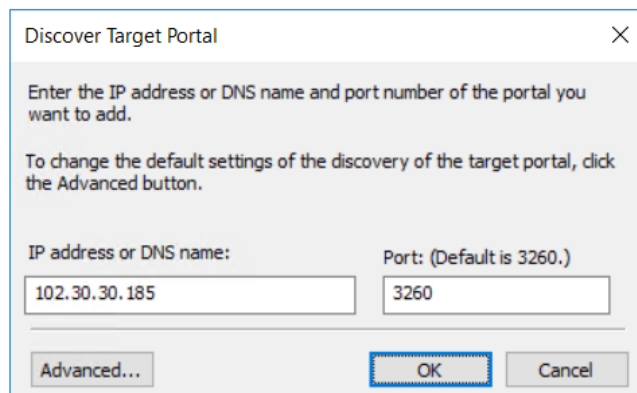


Figure 98 - Adding Target portal

7. Once target portal is added, details like target and initiator machine IP, Port number and Chelsio iSCSI interface IP will be displayed.

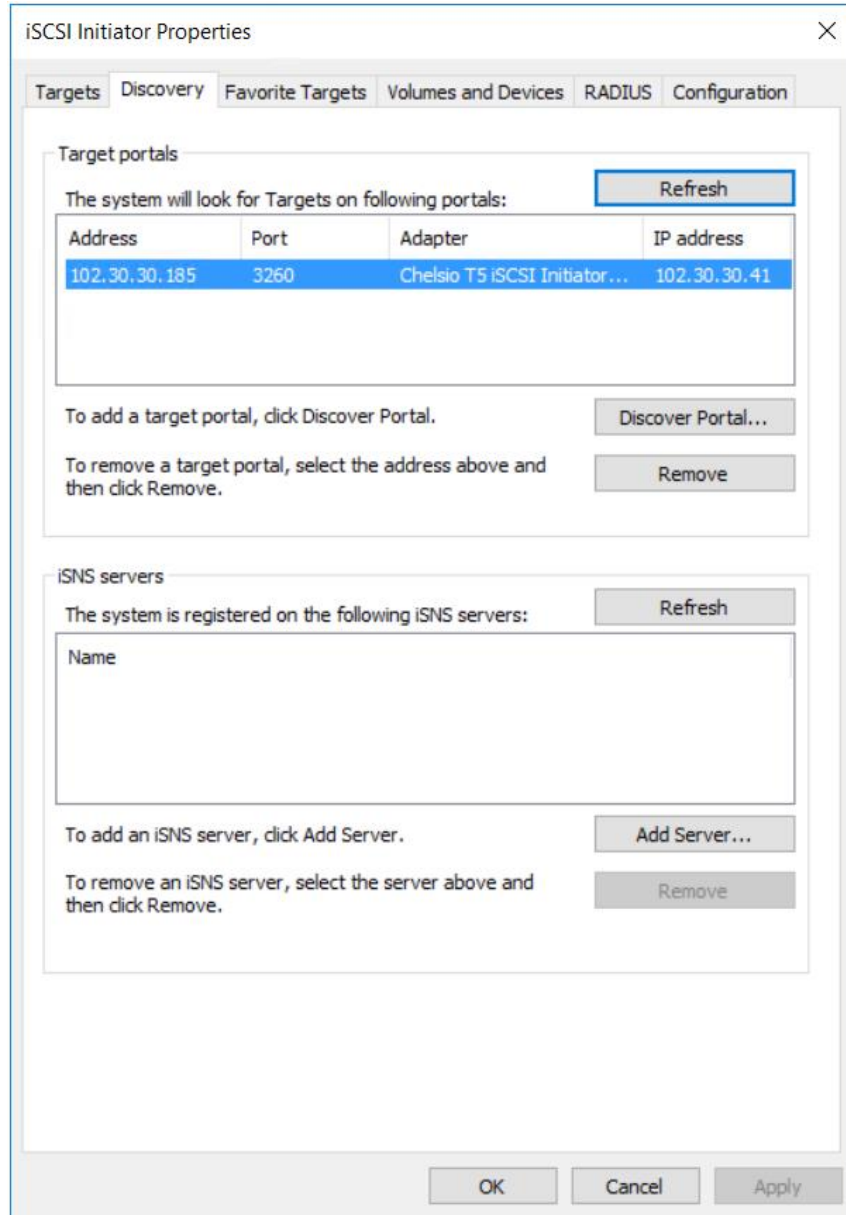


Figure 99 - Target portal added

- Click on the **Targets** tab to see the list of targets available, choose a particular target and click on **Connect**.

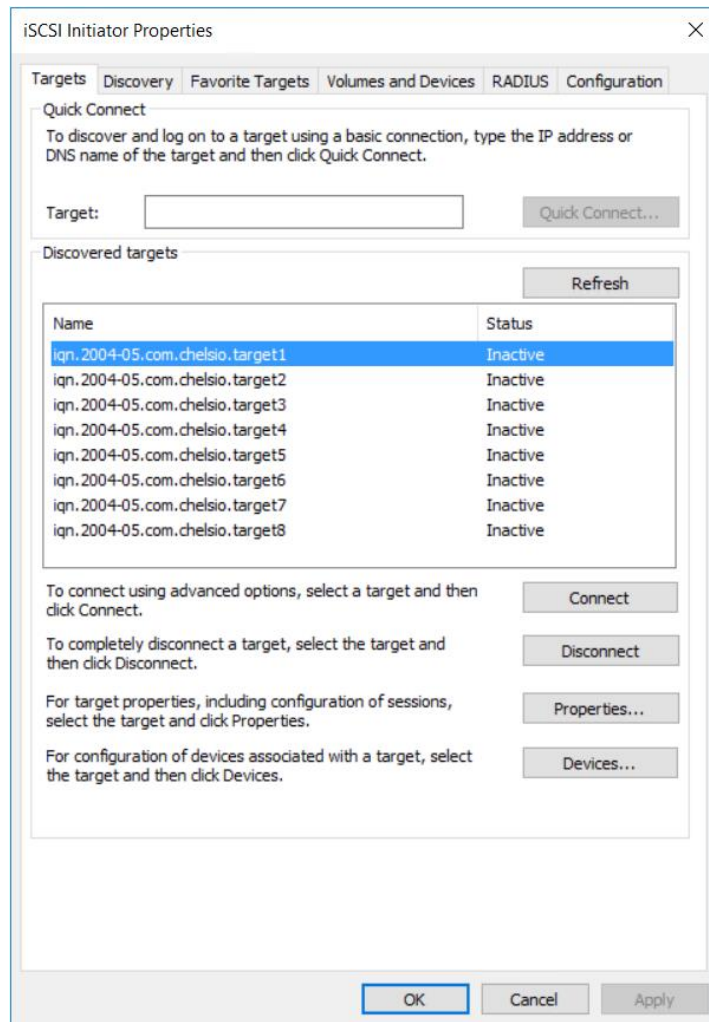


Figure 100 - Targets tab displaying list of available targets

- A window pops up showing the Target Name, Click **OK**.

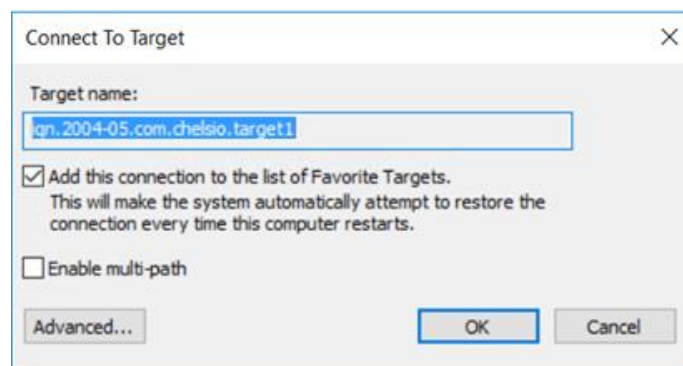


Figure 101 - Connecting to Target

10. After logging in to the target, the state of the target will change from *Inactive* to *Connected*.

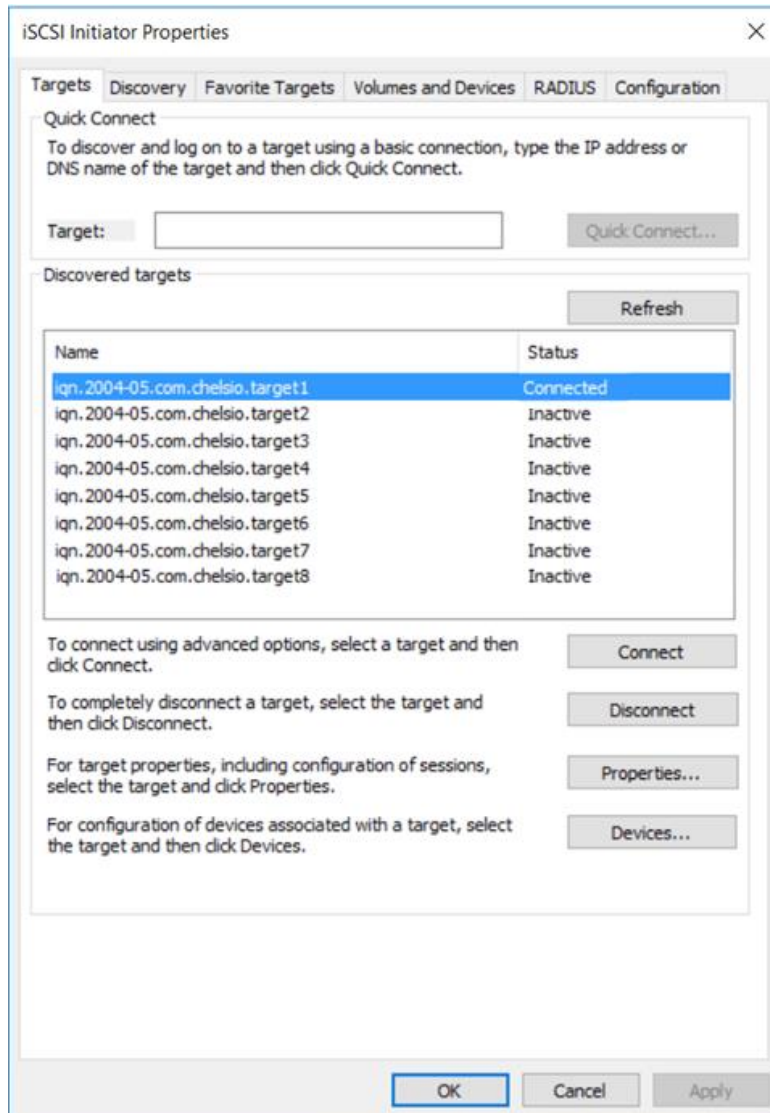


Figure 102 - iSCSI target connected

11. After successful login, go to **Disk Management** and make the respective volume online.

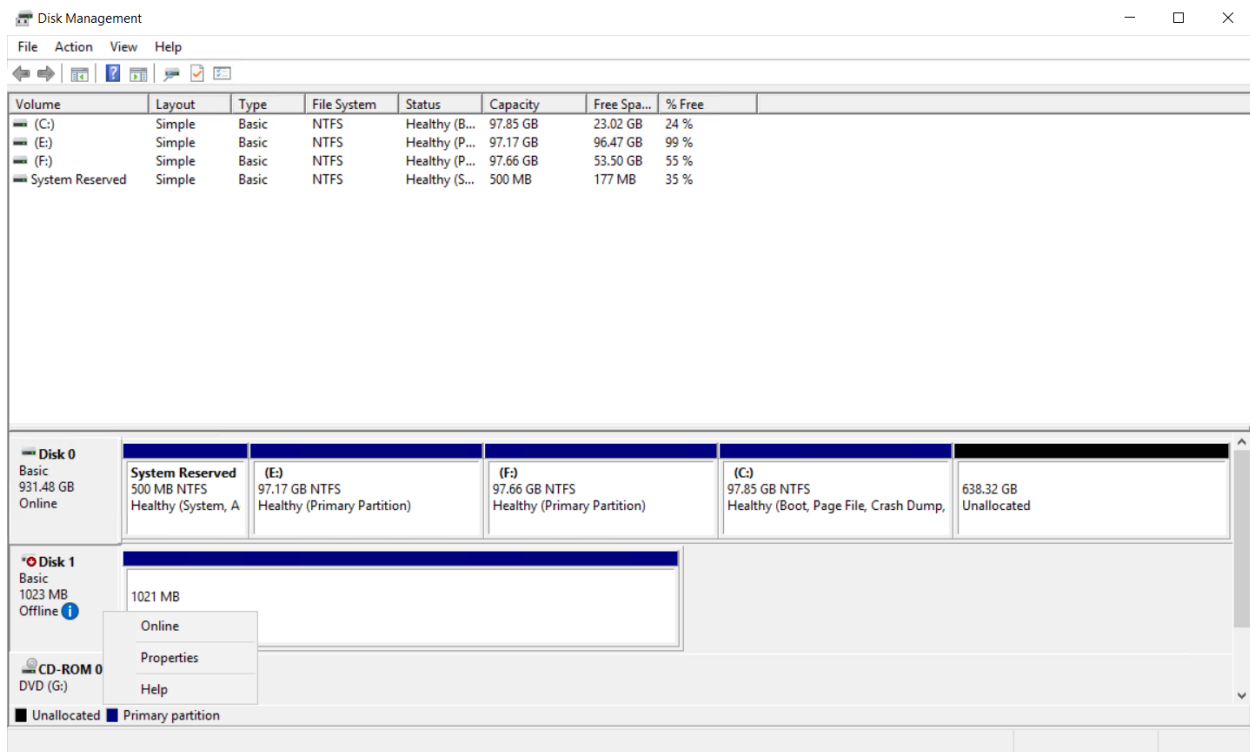


Figure 103 - Disk Management: making volume online

VII. Data Center Bridging (DCB)

1. Introduction

Data Center Bridging (DCB) refers to a set of bridge specification standards, aimed to create a converged Ethernet network infrastructure shared by all storage, data networking and traffic management services. An improvement to the existing specification, DCB uses priority-based flow control to provide hardware-based bandwidth allocation and enhances transport reliability.

One of DCB's many benefits includes low operational cost, due to consolidated storage, server and networking resources, reduced heat and noise, and less power consumption.

Administration is simplified since the specifications enable transport of storage and networking traffic over a single unified Ethernet network.

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio adapters that are compatible with Chelsio's DCB feature:

- T62100-LP-CR
- T6225-CR
- T580-CR
- T580-LP-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-BT

1.2. Software Requirements

1.2.1. Windows Requirements

Currently Chelsio's DCB feature is available for the following Windows versions:

- Server 2016
- Nano Server 2016
- 10 AU Client
- Server 2012 R2

Other versions have not been tested and are not guaranteed to work.

2. Software/Driver Configuration and Fine-tuning

Chelsio network adapters work seamlessly with any legacy switches and do not require the complexity of configuring Data Center Bridging (DCB) protocols either on adapter or network switch. In case DCB is already configured on the switch, the adapter will automatically negotiate the PFC settings configured on the switch.

2.1. Network QoS (optional)

Network Quality of Service (QoS) is an advanced Windows feature that can be used to distribute bandwidth between different kinds of outgoing traffic. This feature ensures efficient usage of resources and minimizes the impact of bandwidth congestion. The bandwidth percentage can be configured either on switch or the host.

2.1.1. Enabling QoS on Host

Network QoS is enabled by default.

Note *Chelsio QoS requires a minimum of 8 cores to work. In case of multiple sockets, where the number of cores per socket is less than 8, Chelsio adapters must be configured to utilize all the available cores before enabling QoS.*

Run the following command on all Chelsio ports:

```
PS C:\Users\Administrator> Set-NetAdapterRss -Name <interface name> -
MaxProcessorGroup 3
```

2.1.2. Configuring Bandwidth Allocation

- **Switch**

Here is an example of setting bandwidth allocation on a Dell Force10 switch:

- i. Log in to the switch and enter the configuration mode:

```
Login: admin
Password:
Force10#enable
Force10#configure
```

ii. Enable DCB and LLDP:

```
Force10(conf)#enable dcb
Force10(conf)#protocol lldp
Force10(conf-lldp)#no disable
```

iii. Set DCBx version to *auto*:

```
Force10(conf-lldp)#dcbx version auto
```

iv. Specify the intervals between hello packets:

```
Force10(conf-lldp)#hello 5
```

v. Create a DCB map. For example, here we are configuring 2 groups/classes:

- Group 0 has BW of 80% with *pfc* enabled.
- Group 1 had BW of 20% with *pfc* disabled.
- Assigning priority groups: Priority 5-7 are under group 0 and 0-4 are under group 1.

```
Force10(conf)#dcb-map win_dcb
Force10(conf-dcbmap-win_dcb)# priority-group 0 bandwidth 80 pfc on
Force10(conf-dcbmap-win_dcb)# priority-group 1 bandwidth 20 pfc off
Force10(conf-dcbmap-win_dcb)# priority-pgid 1 1 1 1 1 0 0 0
```

vi. Enter interface configuration mode and configure protocol LLDP:

```
Force10(conf)#interface tengigabitethernet 0/17
Force10(conf-if-te-0/17)#protocol lldp
Force10(conf-if-te-0/17-lldp)#no disable
```

vii. Set DCBx version to *auto*:

```
Force10(conf-if-te-0/17-lldp)#dcbx version auto
```

viii. Apply the DCB-MAP created:

```
Force10(conf-if-te-0/17)#dcb-map win_dcb
```

Now the host adapter will honor the bandwidth allocation settings configured on the switch.

- **Host**

Here is an example of setting bandwidth allocation on the host:

i. Open PowerShell with administrative privileges and run the following command:

```
PS C:\Users\Administrator> Install-WindowsFeature -Name "Data-Center-Bridging" -IncludeAllSubFeature -IncludeManagementTools
```

ii. Create new policy:

```
PS C:\Users\Administrator> New-NetQosPolicy -Name rdma -PriorityValue 5 -NetDirectPortMatchCondition 445
```

iii. Create new rule with bandwidth percentage:

```
PS C:\Users\Administrator> New-NetQosTrafficClass -Name rdma -Priority 5 -Algorithm ETS -BandwidthPercentage 80 -Verbose
```

The above command allocates 80% of the bandwidth to the policy named 'rdma'.

To change the percentage of an existing ETS rule:

```
PS C:\Users\Administrator> Set-NetQosTrafficClass -Name rdma -Priority 5 -Algorithm ETS -BandwidthPercentage 10 -Verbose
```


VIII. Unified Wire Manager (UM)

1. Introduction

Chelsio's Unified Wire Manager is a powerful management software tool, allowing you to view and configure different aspects of the system, including Chelsio hardware installed in the system. The software includes a command line interface (CLI) tool and a web management interface (Web GUI) to help you manage all Chelsio network adapter cards on the network across multiple operating systems.

Unified Wire Manager enables the management of all aspects of the client side of the iSCSI SAN in two main areas. The ability to configure Chelsio adapter's boot option ROM without entering each individual adapter's configuration screen and manage group of iSCSI initiators remotely from a common user interface saves administrator's time considerably. Unified Wire Manager fully supports Microsoft iSCSI initiator. All supported Chelsio FCoE initiators available on Linux can be managed.

Users can manage Option ROM (PXE and FCoE) capability for Chelsio cards using various tools available in the software.

Additionally, Unified Wire Manager allows for Chelsio adapter NIC and TOE parameters to be centrally managed through the same easy-to-use user interface. It can bring interfaces up or down, tune parameters for optimal performance, and any number of administrative tasks normally done at each individual machine.

Chelsio's Unified Wire Manager is an indispensable tool for saving administrator's time for managing the network and SAN. Chelsio's high performance network adapters with its Unified Wire approach to networking can now be managed centrally in a simple and fast way!

1.1. Features

Chelsio's Unified Wire Manager is designed to provide the following features to the end-user:

- Remotely manage Chelsio adapters and various related tasks like driver installation from a single application.
- Single tool with CLI and Web interface that works across Storage, Networking and Hardware.
- Manage all Chelsio adapters installed on the system.
- Tool for FAE to debug issues on the Customer front.
- Freedom to choose various modes of management i.e. CLI or Web GUI.

1.2. Reference Architecture

Chelsio's Web GUI is a web-based management interface that lets you remotely manage several Chelsio CNAs from anywhere, at any time on the network using a web browser. The Web GUI provides a great amount of flexibility, efficiency and accessibility to system administrators in managing the Network and SAN. The users have the freedom to access the interface using any of the major browsers available, based on individual preferences and corporate policy.

System performance degradation issues will not be observed when using the Web GUI, since it's lightweight and utilizes very less system resources.

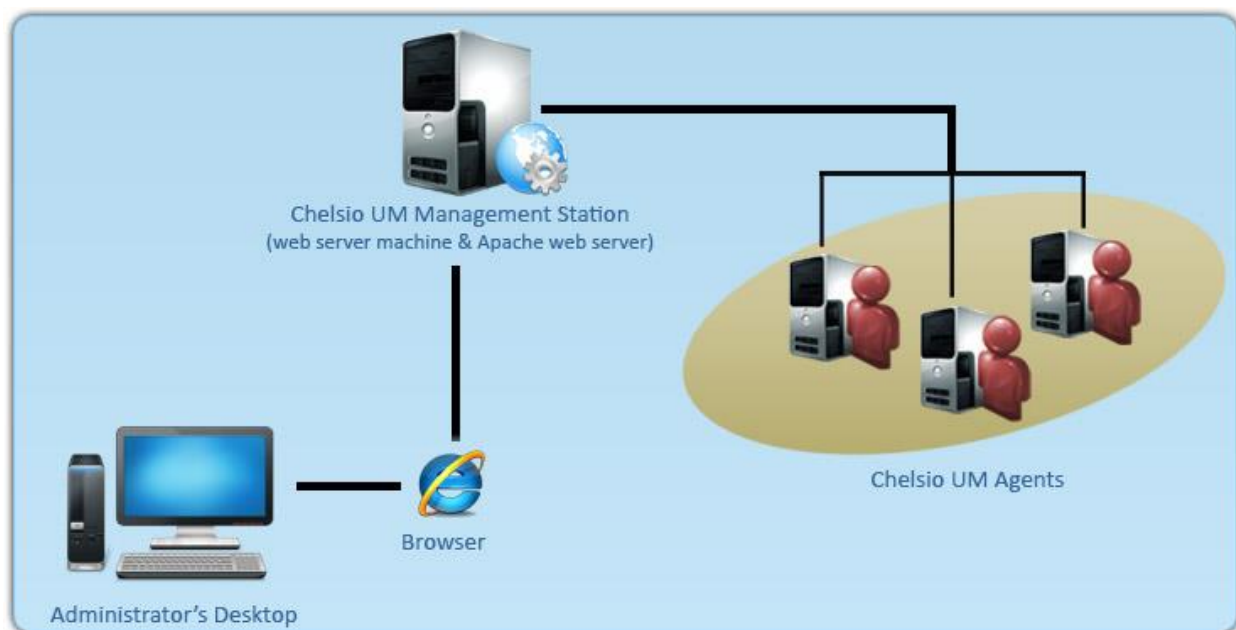


Figure 104 - Chelsio Unified Wire Manager with web interface (Web GUI)

1.3. Unified Wire Manager Components

1.3.1. Management Agent

The Management Agent is a binary executable, which runs as a service on the system that has at least one Chelsio card installed. It is installed along with libraries that can manage various components of the system and enabled during system startup.

1.3.2. Management Client

The Management Client can be used to connect to agents and manage them. Once connected you can view and configure Chelsio CNAs and related networking, storage and hardware properties. You can use either the CLI or Web GUI client to manage agents based on your preference. It makes service requests based on the command issued by the user and returns the appropriate information.

- **CLI Client**

The **CLI Client** (*chelsio_uwcli*) is an executable binary which allows you to manage and configure agents using the command-line interface. It is not a command shell with a prompt; it accepts all command parameters as arguments when launching it, making it script-friendly.

- **Web GUI Client**

The **Web Management Interface** (Web GUI) client is a web-based management interface which allows you to securely manage agents from anywhere using a web browser. The management interface uses a secure 256-bit encrypted HTTP connection, ensuring that authentication and configuration data are protected during transmission from the web browser to the system and vice versa. Many agents can be accessed on single interface making it very efficient & user-friendly.

Currently supported browsers are **Internet Explorer 9+**, **Mozilla Firefox 3.6.9+**, **Google Chrome 5+** and **Apple Safari 5+**.

1.4. Authentication and encryption

The Unified Wire Manager requires user authentication to manage a system. A user must have administrative privileges to manage a system. The authentication credentials, as well as all data exchanged between the CLI client or the Web GUI and the agent, are encrypted using SSL. This ensures that the data cannot be accessed when it is being transmitted over the network.

2. Hardware and Software

2.1. Supported Adapters

Following are the currently shipping Chelsio adapters that are compatible with Chelsio Unified Wire Manager:

- T580-CR
- T580-LP-CR
- T580-SO-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-SO-CR

2.2. Platform/Component Matrix

The table below lists the Windows versions and the supported UM components.

Table 2 - Supported UM components

Version/Distribution	Supported UM Components
Windows Server 2012 R2	Management Agent, Management Client, Management Station

2.3. Platform/Driver Matrix

The table below lists the Chelsio driver(s) and their supported versions:

Table 3 - Supported NIC version

Chelsio driver	Version
NIC	6.5.8.0

3. Installation (Zip Package)

This section describes the procedure to install UM. This is applicable only for zip package since the Unified Wire installer will install UM by default. If an older version of the software exists, the installer will upgrade it to the version provided in the package.

- i. Run the **UnifiedWireManager-x.x.xx-x64** installer application located in *ChelsioUwire-x.x.x.xx/UM* folder.
- ii. Click the **Next** button for the Chelsio End User License Agreement Window.

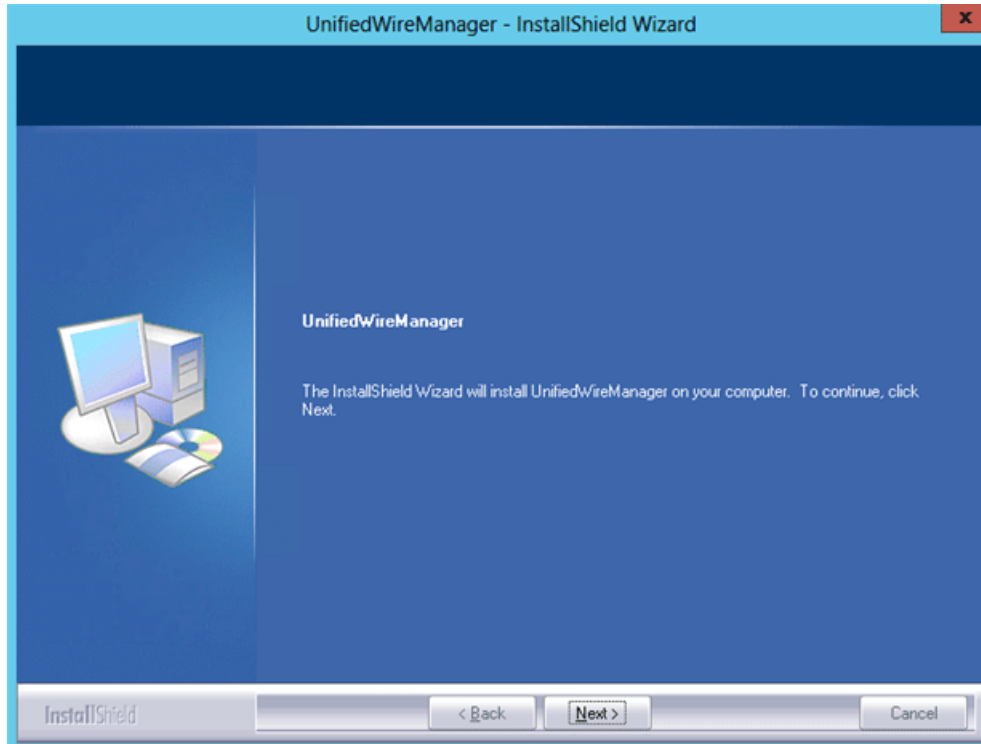


Figure 105 - UM installer welcome window

- iii. Select the radio button **I accept the terms of the license agreement** and click **Next**.

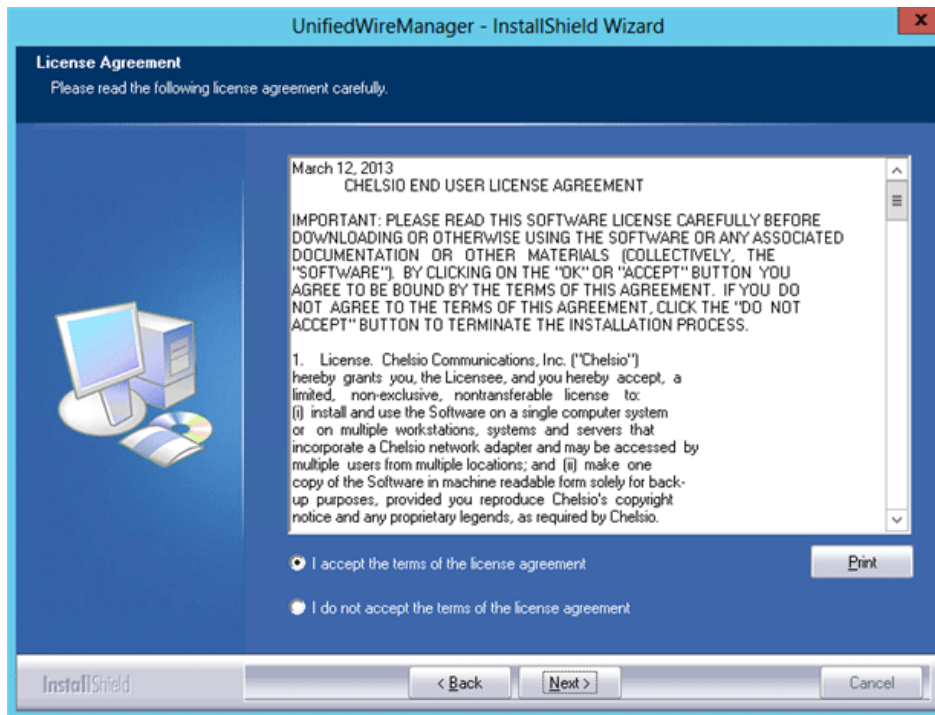


Figure 106 - Chelsio EULA window

- iv. The next window will display the pre-requisites for various UM components. Ensure that they are met before proceeding. Click **Next**.

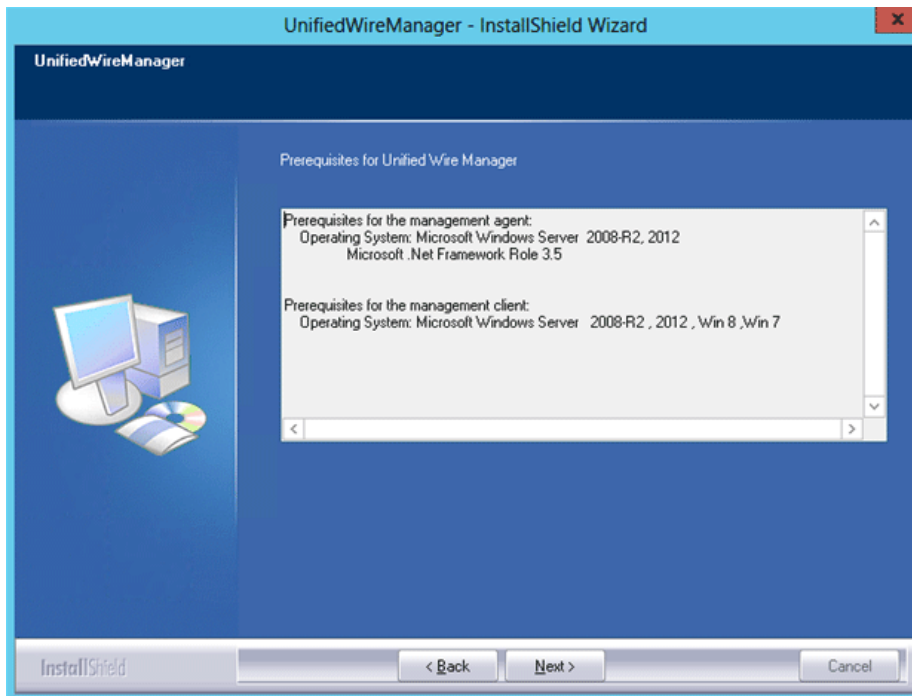


Figure 107 - UM prerequisites window

- v. Now, either select **Complete** for complete package installation or else select **Custom** radio button to customize the installation. Click **Next**.

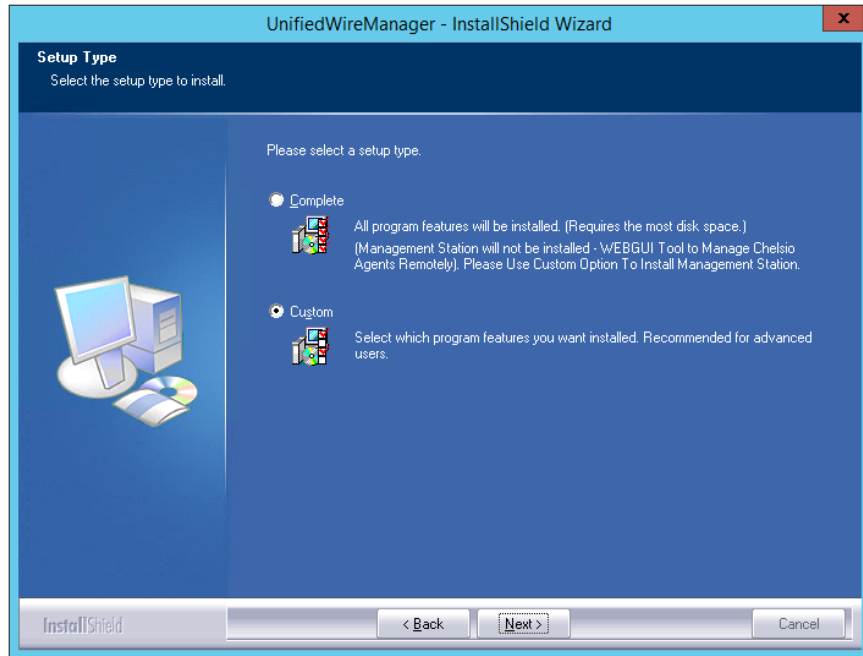


Figure 108 - Select setup (installation) type

- a. If you selected **Custom**, the next window will display the location where UM will be installed by default. You can change the location by using the **Change** button or click **Next** to continue with the default path.

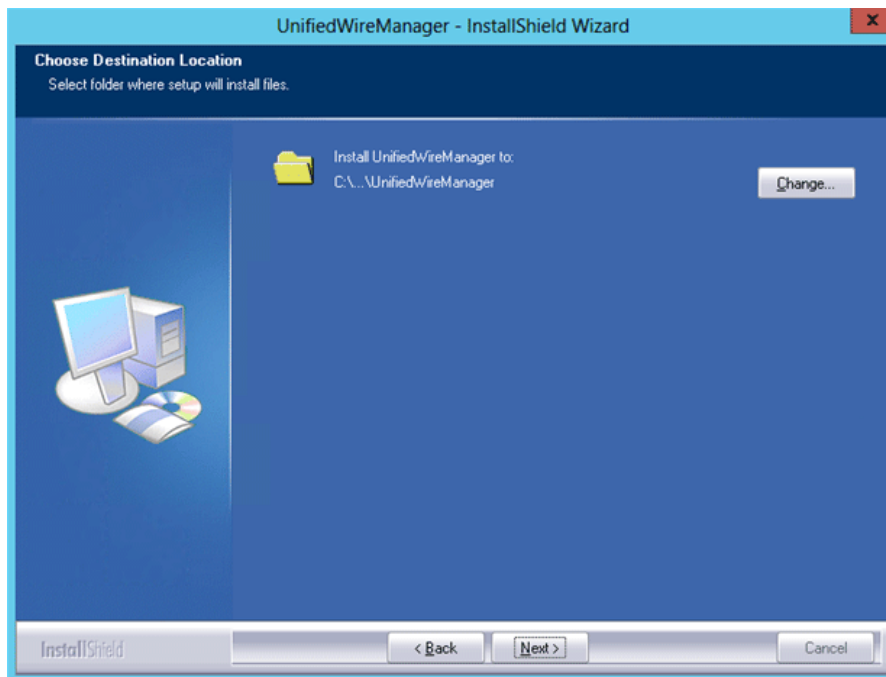


Figure 109 - Changing UM installation path

- b. Next, you can choose the UM components you wish to install. Deselect the components you don't wish to install and click **Next**.

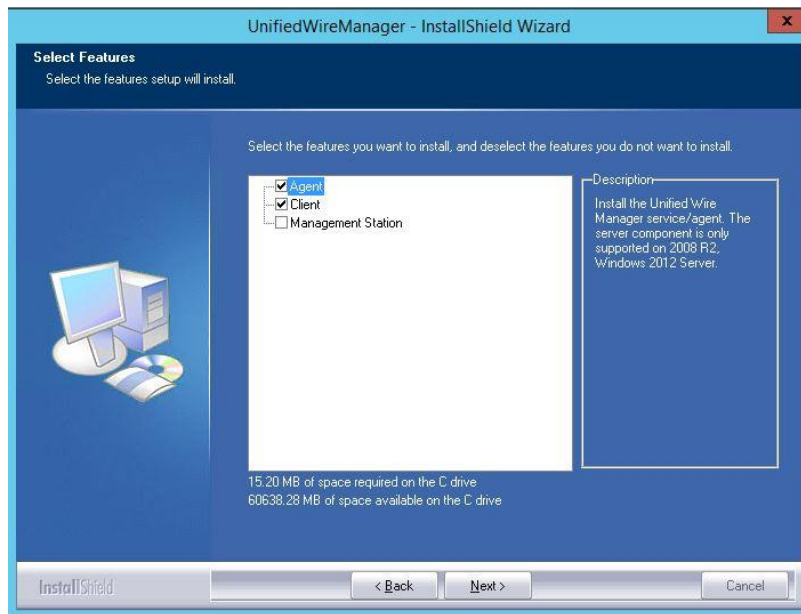


Figure 110 - Selecting UM components to install

Note If Management Station is selected, please make sure that all related prerequisites are met before proceeding (See [Pre-requisites](#)) or else the component will be skipped during installation.

- vi. Click **Install** to start the installation. Unified Wire Manager will now be installed with the selected options.

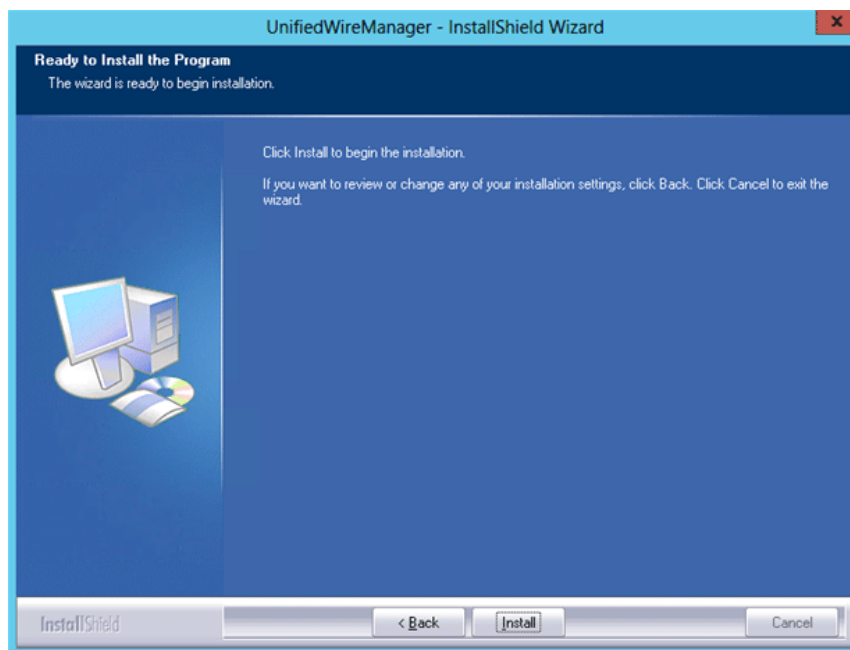


Figure 111 - Starting UM installation

vii. Select **Finish** to exit the UM Installer.

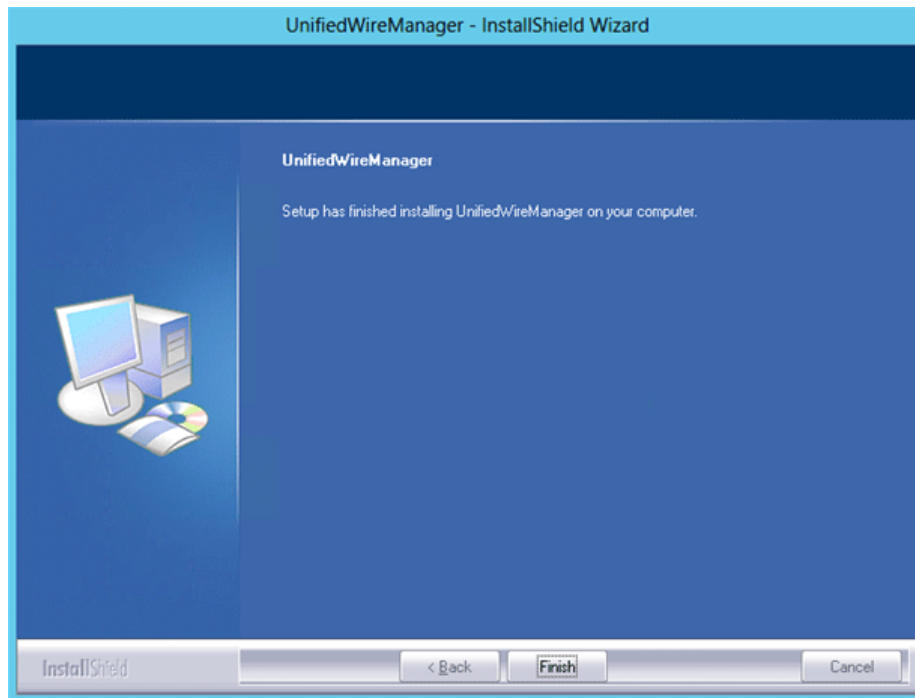


Figure 112 - Finishing UM installation

4. Configuration

4.1. Configuring Management Station

Follow the steps mentioned below to configure Apache Server and SSL certificate.

4.1.1. Apache HTTP Server

- i. Assuming that Apache HTTP Server 2.2 is installed at the default location, append the following lines in *C:\Program Files (x86)\Apache Software Foundation\Apache2.2\Conf\httpd.conf*

```
ScriptAlias /python/ "C:/Program Files (x86)/Apache Software
Foundation/Apache2.2/htdocs/chelsio/python/"

<Directory "C:/Program Files (x86)/Apache Software
Foundation/Apache2.2/htdocs/chelsio/python/">
    PythonPath ["'C:/Program Files (x86)/Apache
Software Foundation/Apache2.2/htdocs/chelsio/python'+sys.path"

    SetHandler mod_python
    PythonHandler mod_python.publisher
    PythonDebug on
</Directory>

LoadModule python_module modules/mod_python.so
ThreadStackSize 8388608
```

- ii. Perform the following tasks in *C:\Program Files (x86)\Apache Software Foundation\Apache2.2\Conf\httpd.conf* file
 - a. Change "DocumentRoot" to "C:\Program Files (x86)\Apache Software Foundation\Apache2.2\htdocs\chelsio"
 - b. Uncomment "LoadModule rewrite_module modules/mod_rewrite.so"
 - c. Uncomment "Include conf\extra\httpd-ssl.conf"
 - d. Uncomment "LoadModule ssl_module modules/mod_ssl.so"
 - e. Add the following lines:


```
RewriteEngine On
RewriteCond %{HTTPS} !=on
RewriteRule ^/?(.*) https://%{SERVER_NAME}/$1 [R,L]
```

4.1.2. SSL Certificate

- i. Execute the following lines in command prompt and provide info to generate OpenSSL certificate and keys:

```
cd "C:\Program Files (x86)\Apache Software Foundation\Apache2.2\conf"
..\bin\openssl req -config openssl.cnf -new -out blarg.csr -keyout blarg.pem
..\bin\openssl rsa -in blarg.pem -out blarg.key
..\bin\openssl x509 -in blarg.csr -out blarg.crt -req -signkey blarg.key -
days 365
```

ii. Browse to the following location:

C:\Program Files (x86)\Apache Software Foundation\Apache2.2\conf\extra

iii. Open the file *httpd-ssl.conf* and make the following modifications:

iv. Modify "SSLCertificateFile" to "C:\Program Files (x86)\Apache Software Foundation\Apache2.2\conf\blarg.crt"

v. Modify "SSLCertificateKeyFile" to "C:\Program Files (x86)\Apache Software Foundation\Apache2.2\conf\blarg.key"



Note On some installation, Apache is seen to report problems regarding SSL cache. In such a case, do the following in *C:\Program Files (x86)\Apache Software Foundation\Apache2.2\conf\extra\httpd-ssl.conf*

a. Uncomment the following line

```
SSLSessionCache      "dbm:C:/Program Files (x86)/Apache Software
Foundation/Apache2.2/logs/ssl_scache"
```

b. Comment the following line

```
SSLSessionCache      "shmcb:C:/Program Files (x86)/Apache Software
Foundation/Apache2.2/logs/ssl_scache(512000)"
```



Note Use the Windows Event Log (Event Viewer) for troubleshooting any installation related issues.

5. Verifying UM components status

The following section explains how to verify status of various UM components.

5.1. Verifying Management Agent

- i. On the system running Management Agent, launch **Services** from the Control Panel. You can also type `services.msc` in the **Run** command. This will open the **Services** window.

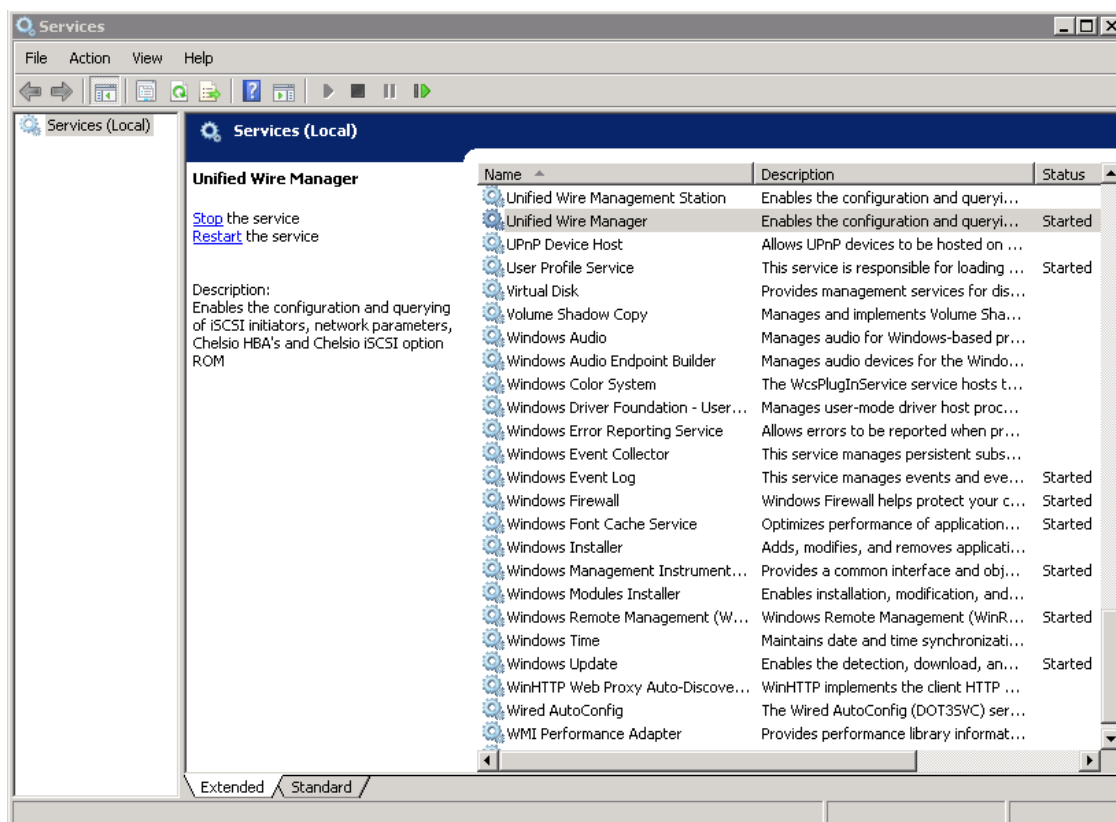


Figure 113 - Windows Services

- ii. Search for *Unified Wire Manager* in the list of services. You should get the options to stop and restart in the *Actions* menu on the left side, indicating that Management Agent is already running.

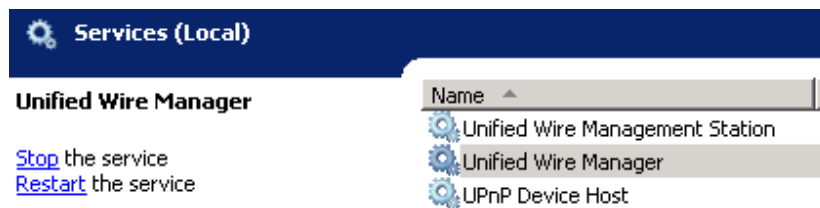


Figure 114 - Actions available for Unified Wire Manager service

5.2. Verifying Management Client

Execute the following query command to determine if Management Client is installed:


```
C:\Users Administrator>chelsio_uwcli.exe -V
```

The above query should confirm that Management Client is installed by displaying a similar result:

```
Unified Manager client CLI version : 2.x.yy
```

5.3. Verifying Management Station

- i. Launch **Services** from the Control Panel. You can also type `services.msc` in the **Run** command. This will open the **Services** window.
- ii. Search for *Unified Wire Management Station* in the list of services. You should get the options to stop, start and restart the service in the *Actions* menu on the left side.

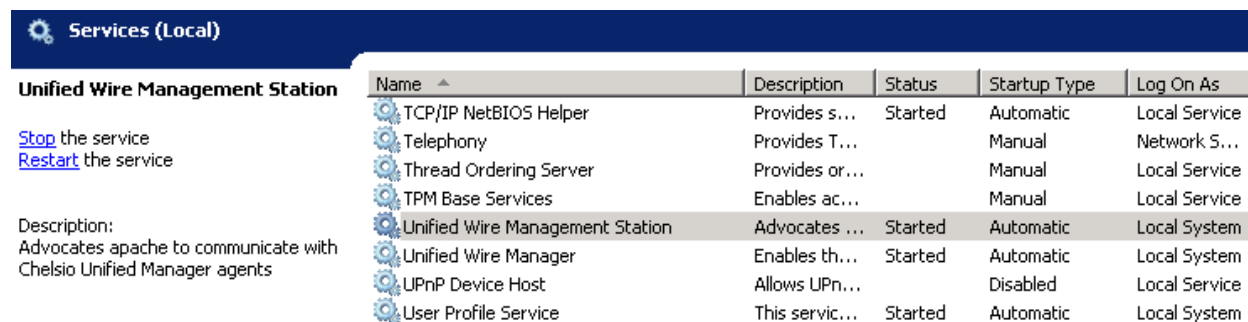

The screenshot shows the Windows Services console with the 'Unified Wire Management Station' service selected. The service is running and has an automatic startup type. The table below summarizes the visible service information.

Name	Description	Status	Startup Type	Log On As
TCP/IP NetBIOS Helper	Provides s...	Started	Automatic	Local Service
Telephony	Provides T...		Manual	Network S...
Thread Ordering Server	Provides or...		Manual	Local Service
TPM Base Services	Enables ac...		Manual	Local Service
Unified Wire Management Station	Advocates ...	Started	Automatic	Local System
Unified Wire Manager	Enables th...	Started	Automatic	Local System
UPnP Device Host	Allows UPn...		Disabled	Local Service
User Profile Service	This servic...	Started	Automatic	Local System

Figure 115 - Verifying Management Station service status

Note While accessing the Web Management Interface, if an error “Management Station is not running” is displayed at the log-in page, follow the above steps to restart Management Station and try again.

6. Management Agent

6.1. Communication

The agent uses a TCP connection over IP to communicate with the client. After the connection is established, SSL (Secure Sockets Layer) encryption is enabled using the Open SSL libraries. The agent listens on a TCP port for new incoming connections from clients. This port is set to 35001 by default.

6.2. Service configuration

The agent is installed as a service on the system, and enabled to start on boot. The following sections will describe the procedure to configure service startup manually:

6.2.1. Service startup configuration

The service name on Windows is *Unified Wire Manager* and the service startup configuration can be changed by following these steps:

- i. Launch **Services** from the Control Panel. You can also type `services.msc` in the **Run** command. This will open the **Services** window.
- ii. Scroll and highlight the "Unified Wire Manager" service, and double-click on it.
- iii. Select the startup type, either "Automatic (Delayed Start)", "Automatic", "Manual", or "Disabled".

6.2.2. Service start/stop/restart

- i. Launch **Services** from the Control Panel. You can also type `services.msc` in the **Run** command. This will open the **Services** window.
- ii. Scroll and highlight the "Unified Wire Manager" service.
- iii. Click on **Start/Stop/Restart** to carry out the respective tasks in the Description section on the left.

6.3. Firewall

If the system has a firewall configured, it should be configured to allow traffic to the management agent's default TCP port configured i.e. 35001. Review the firewall documentation and configure it appropriately. If there is a firewall appliance / software protecting the network that the system is on, and you wish to connect to the system from a different network, using the client, the firewall appliance also needs to be configured appropriately.

7. CLI client

7.1. CLI Help system

A detailed help and usage documentation is built into the CLI, and is accessible through its help system. The help can be invoked by the usual argument of `/?` or `--help`.

7.1.1. Viewing help

- i. Open command prompt by typing `cmd` in the **Run** command.
- ii. Type `chelsio_uwcli.exe --help`. Press enter to view the built-in help.

7.2. Client conflict resolution

The CLI and Web GUI cannot manage the same system at the same time by default. This is to ensure that configuration changes being applied by one client are not interrupted by another client. Also, two different Web GUI or CLI clients cannot connect to a management agent at the same time. There is no mechanism to allow this scenario.

8. Web GUI client

8.1. Management Station

In order to access the Web Management Interface, start the Apache HTTP server, if it's not running already. Also, Cookies and Javascript must be enabled in the browser.

8.1.1. Running Management Station

- i. Launch **Services** from the Control Panel. You can also type `services.msc` in the **Run** command. This will open the **Services** window.
- ii. Search for “*Apachex.x*” in the list of services and click **Start** in the **Action** menu on the left.

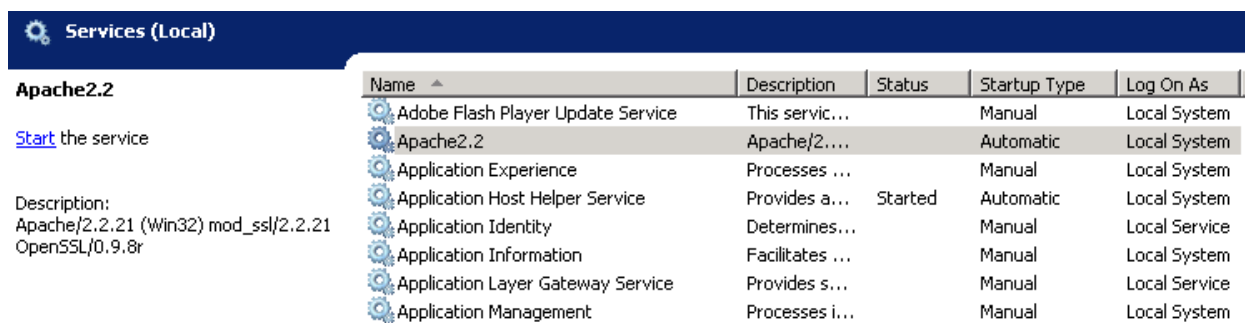


Figure 116 - Starting Apache HTTP server

- iii. Search for “*Unified Wire Management Station*” and click **Start** in the **Action** menu on the left.

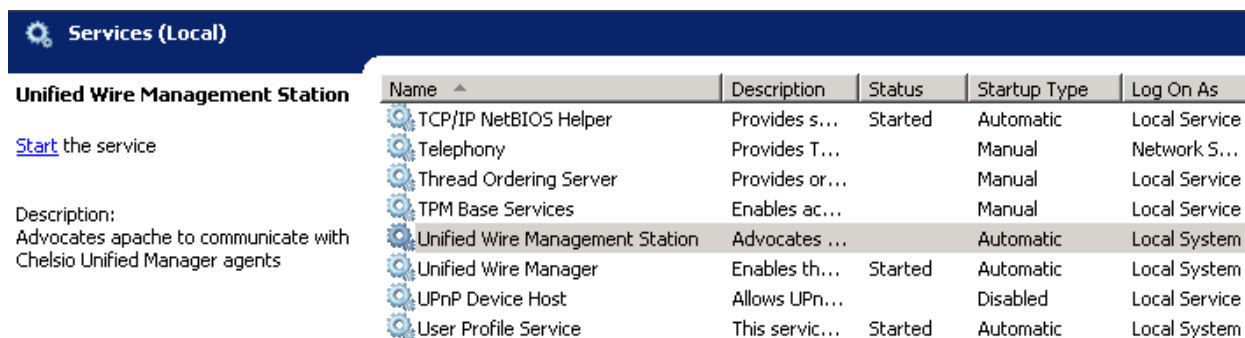


Figure 117 - Starting Management Station service

8.2. Accessing Web Management Interface

- i. To access the Web GUI, type in the URL https://<management station IP address> in a web browser.
- ii. The security certificate used by the web server is a generic one. It may cause the following types of prompts in different browsers. You will need to select the correct option to continue.

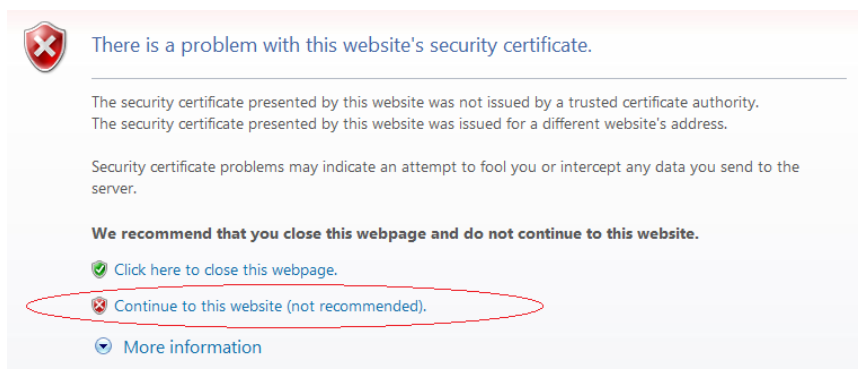


Figure 118 - Security Certificate prompt in Internet Explorer

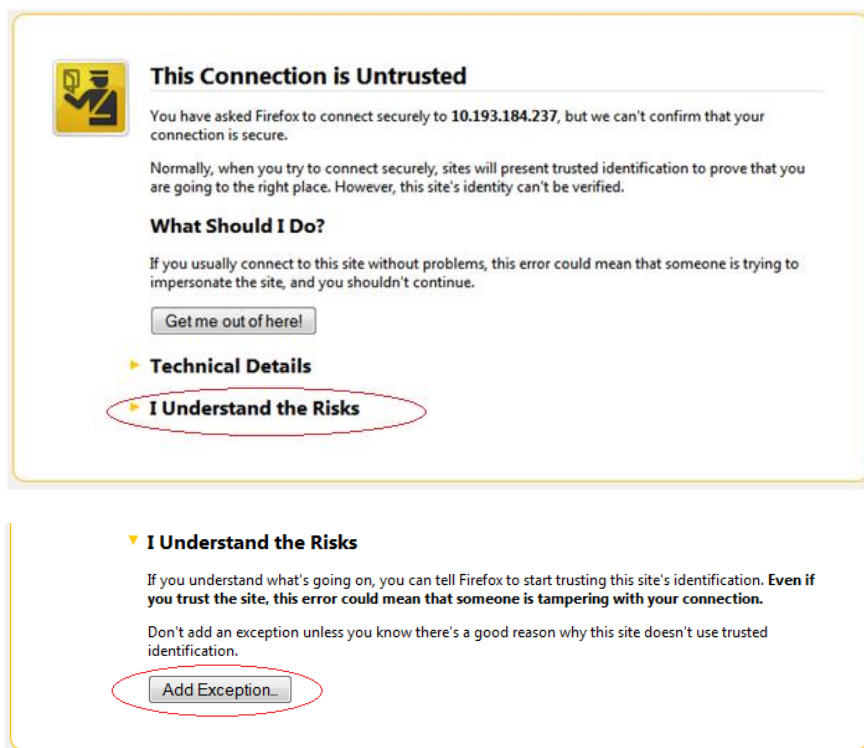


Figure 119 - Security Certificate prompt in Mozilla Firefox

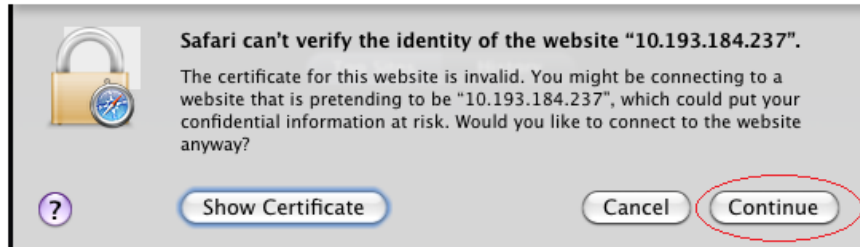


Figure 120 - Security Certificate prompt in Apple Safari



Figure 121 - Security Certificate prompt in Google Chrome

- iii. The web interface requires password authorization to be accessed. Enter the administrator/root credentials that were set up on the management station system and click on the *Login* button.

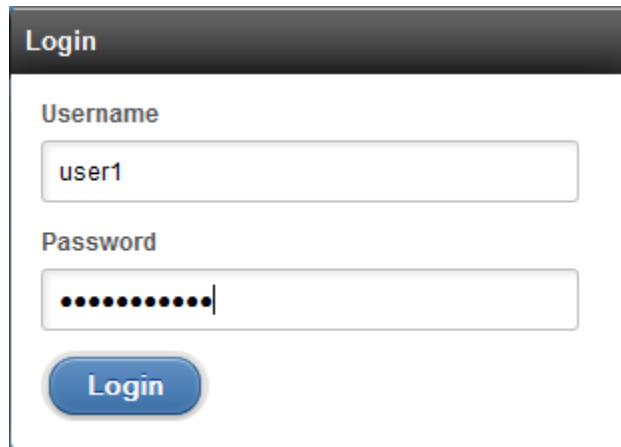


Figure 122 - Web GUI Login page

Note *Not performing any operation/action for 5 minutes will result in session timeout. You will have to re-login and connect to the Agents again.*

8.3. Layout and Navigation

The Web Management Interface consists of the following:

- **Title bar** displaying the username on the left, Unified Wire Manager logo and name in the centre; and a Logout button on the right.
- **Menu Bar** consisting of the **Home**, **Add System**, **Remove System**, **Refresh**, **Subscribe** and **Bulk Configuration** buttons.
- The **Navigation Pane** with a cascading tree of links to various configuration modules for a UM Agent. You can navigate between connected agents and various sections of the managed agent's interface. You can view and hide the configuration modules for each Agent by clicking on the "+" and "-" links respectively
- The **Details Pane** on the right displaying panels associated with the tree menu item selected in the **Navigation Pane**. The panels can be expanded and collapsed by clicking on the panel heading.
- The **Bottom bar** has the **About** link on the right and copyright details on the left.

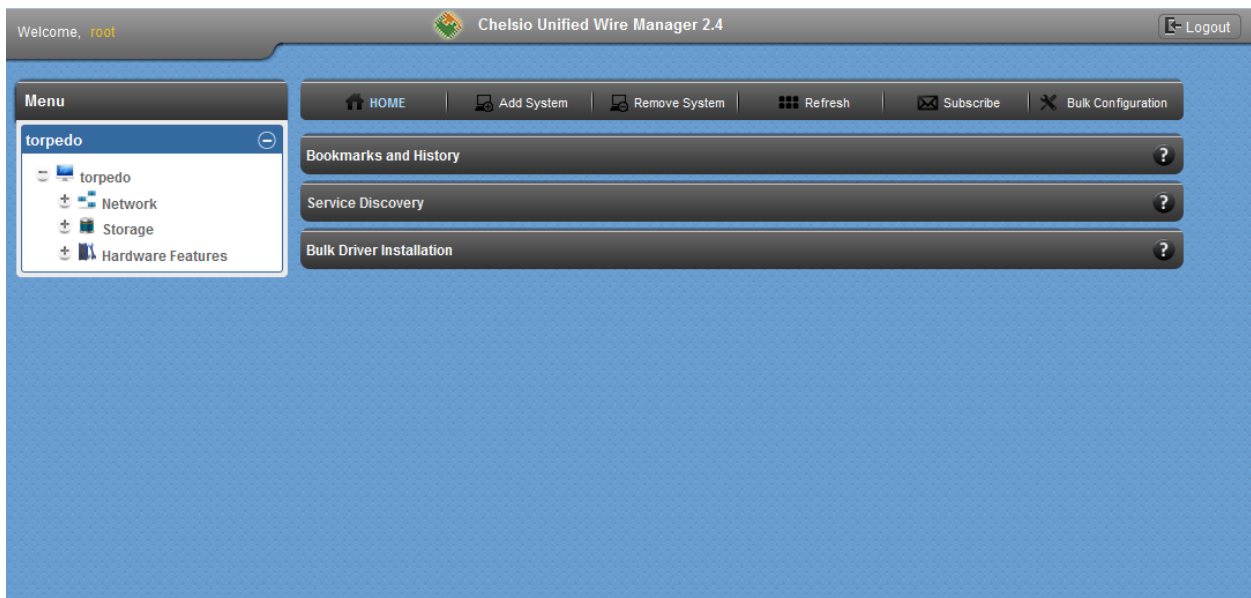


Figure 123 - Web Management Interface

8.4. Home page

The home page is displayed by default on launching the Web GUI. It displays **Bookmarks and History**, **Service Discovery** and **Bulk Driver Installation** modules. Options to go back to home page, add/remove system, refresh and configure email alerts are also available.

8.4.1. Home

This option will display the home page.

- **Bookmarks and History**

A history of the last 128 systems that were managed from this system, by the current user, will be shown here in a list. Each system's management IP address, TCP port, and Login details are also stored. This may be edited and saved. Any systems that are not required in the list may be deleted.

Important

Storing login passwords for the managed systems is inherently insecure.
The passwords are encrypted, but it is still advisable to store passwords only if the system you are running the GUI client on, is secure.

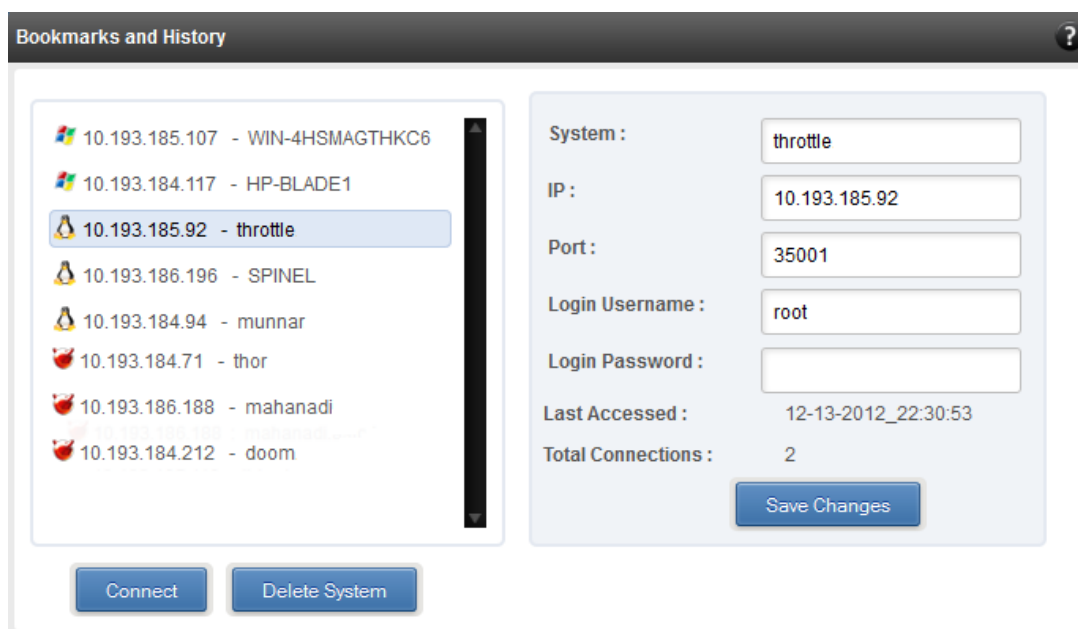


Figure 124 - Bookmarks and history module

- **Connecting to a system**

Select the system from the Bookmark list and click *Connect*. Once successfully connected, the system will appear on the left pane with different related modules on the right to view and manage.

- **Deleting a system**

Select the system from the Bookmark list and click *Delete system* to remove it.

Note *Once removed, the system will no longer appear in the Bookmarks and History module. If you wish to manage that system again, you will have to use the “Add system” option.*

- **Service Discovery**

Using this module, all the Unified Wire Manager agents connected in the same or different subnet can be discovered. One can choose to discover agents based on OS type or search for a particular agent if the agent's IP or hostname is known. Select the appropriate discovery method and provide the relevant information. For example, to search using hostname, select *Hostname* as the **Input Type** and provide the agent's hostname in the **Search for Hostname/IP** field. Finally click **Discover Agents**.

The **Add Agents** button adds the selected system to the list of discovered agents in the **Bookmarks and History** module. The **Clear Agents** button resets the list of discovered agents.

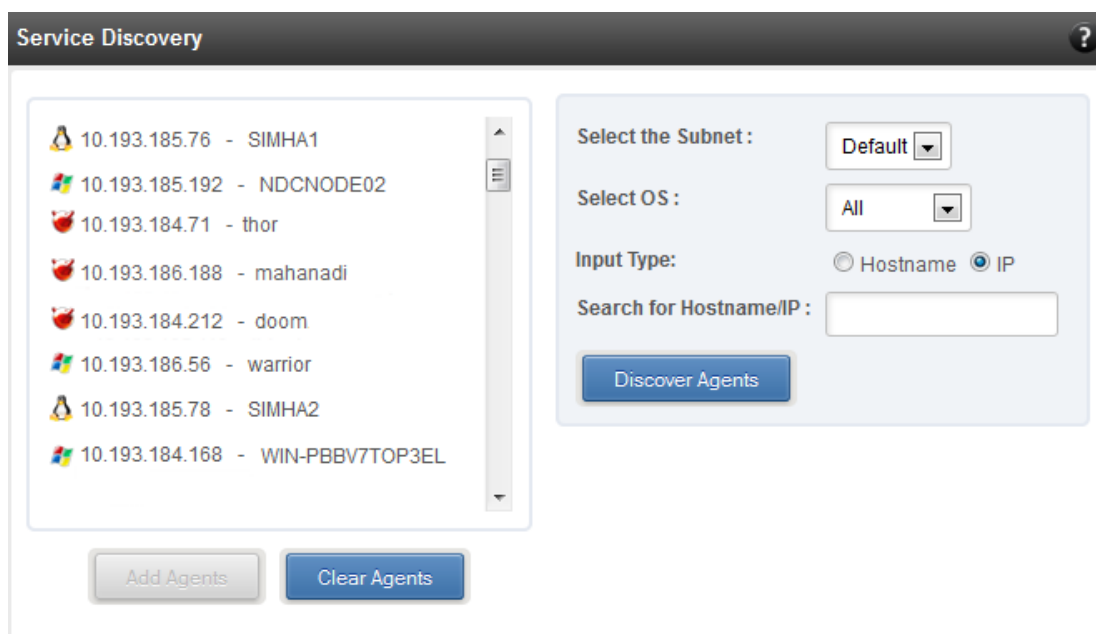


Figure 125 - Services Discovery module

• Bulk Driver Installation

This module allows you to install drivers for multiple systems simultaneously. Drivers available for installation for a particular system may differ depending on the network adapter (T5, T4 or T3) and operating system selected.

• Installing Driver

- i. In the **Choose the card** fields, select T3 or T4/T5 depending on the chip revision of the network card.
- ii. Select the operating system for which drivers are to be installed in the **Choose the OS Type** field. All the systems with the selected operating system will be displayed in the list below.
- iii. Select a system or systems from the list and choose the driver to be installed in the **Driver Installation** section.
- iv. Download the appropriate driver from Chelsio's Download Center, service.chelsio.com.
- v. Locate the driver package.
- vi. Click **Install** button to install the driver.

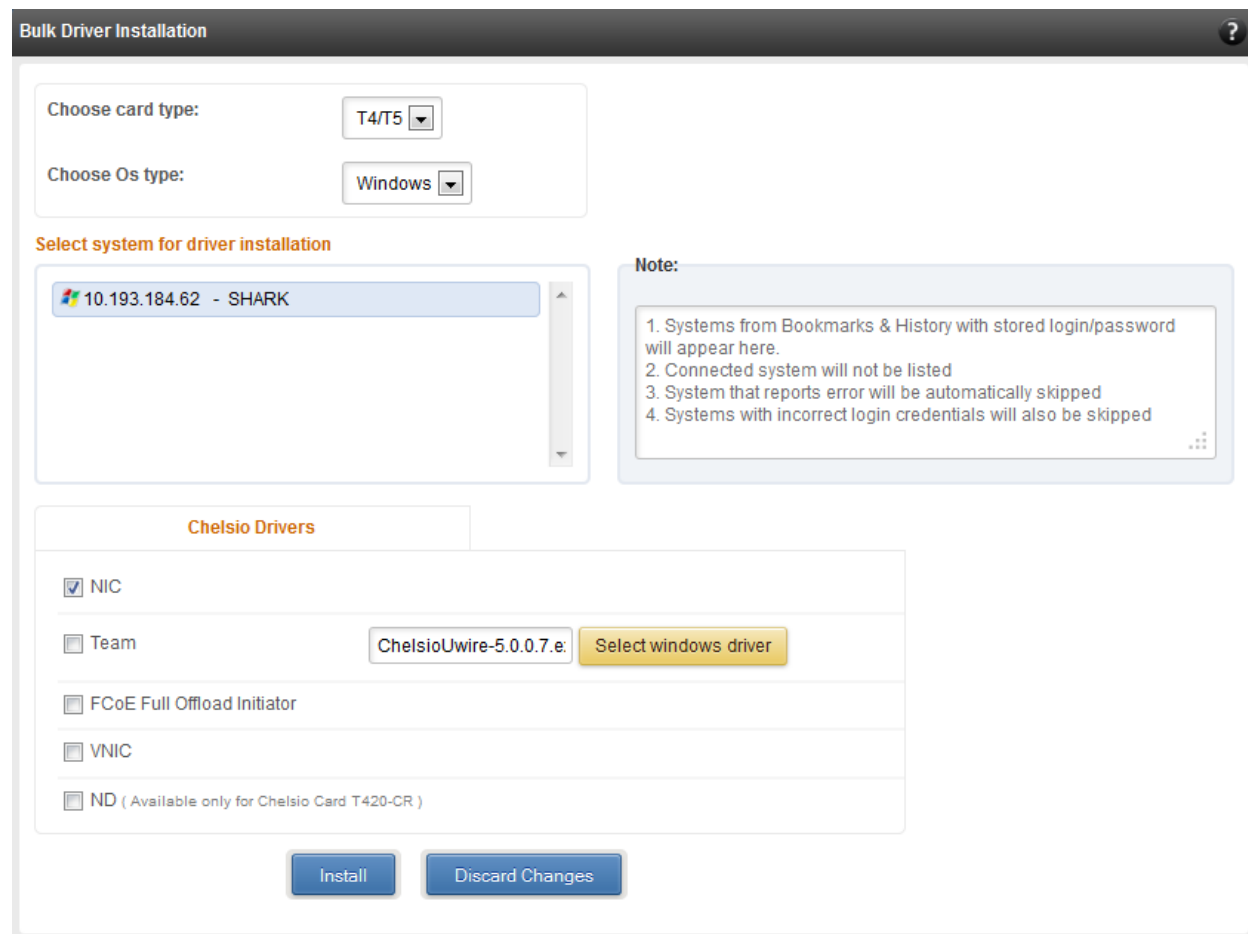


Figure 126 - Bulk Driver Installation module

Note Agents that report errors or whose passwords are not stored, will be automatically skipped during the driver installation.

8.4.2. Add System

Use this option to connect to new Agents using their IP or Hostname. The TCP port for connection is by default 35001. You will have to provide correct user credentials for the agent in order to connect successfully.

After connecting to the Agent, the menu bar on the left will display the connected system and its related modules.

If you deselect the 'Remember Password' option, you will be asked to enter the password every time you try to connect to the system.

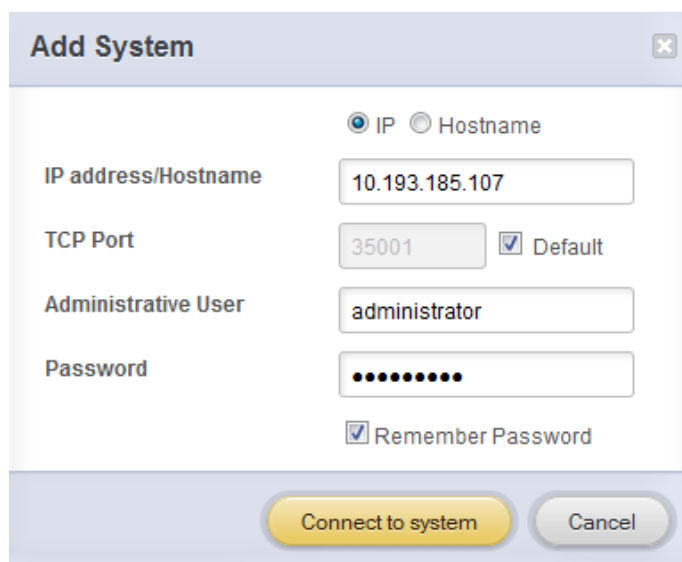


Figure 127 - Adding a UM Agent

8.4.3. Remove System

Use this option to disconnect an Agent. To remove an agent, click on the name of the system in the tree menu in the left and click *Remove System*. Then click *Yes* to confirm.

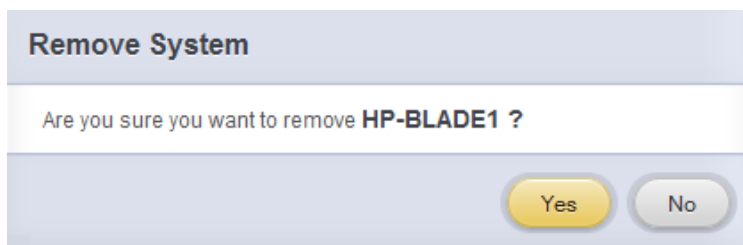


Figure 128 - Removing a UM Agent

8.4.4. Refresh

This option can be used to reload the Web GUI or UM Agent.

To reload the Web GUI, navigate to the Home page (by clicking on the “Home” button and click Refresh. You can use this option to refresh Home page panes (Bookmarks and History, Service Discovery and Bulk Driver Installation).

To reload an Agent, click on the name of the system in the tree menu in the left and click “Refresh”. You can use this option to update any changes made to system settings like load/unload drivers.

8.4.5. Subscribe (Email Alerts)

This feature is available only on the Web Management Interface.

Using this option, you can receive email alerts regarding the link status of a Chelsio Network Interface Card. This feature sends email notifications regarding the port and the card, on which the link up/down event has occurred. Not only can you configure multiple email addresses to receive notifications, but also customize the email id of the sender for troubleshooting purposes.

To subscribe to **Email Alerts**, enter the sender’s email address in the *Email address* field. It should be in the format of <name>@<domain>.<extension>. You can enter multiple email addresses for the *Recipients* field separated a comma. Enter Mail server details and ensure that the “Enable email Alerts” field is enabled. Select the Agent(s), for which you want to receive alerts and Click on **Save**.

The screenshot shows the 'Email Alert' configuration window. It includes the following fields and options:

- Email address:** email_id@abc.com
- Recipients:** administrator1@chelsio.com,administrat
- Mail Server:** mailserver.abc.com
- SMTP Port:** 25
- Services:** Network Services
- Enable email alerts:** Enable
- Select Systems:** A scrollable list containing:
 - 10.193.185.107 - WIN-4HSMAGTHKC6
 - 10.193.184.117 - HP-BLADE1
 - 10.193.185.92 - throttle
 - 10.193.186.196 - SPINEL
 - 10.193.184.94 - munnar
 - 10.193.184.211 - eastend
 - 10.193.184.71 - thor

Buttons: Save, Close

Figure 129 - Subscribing to Email Alerts

8.4.6. Bulk Configuration

The **Bulk Configuration** page allows you to execute common configuration changes to multiple agents and their network adapters simultaneously. You can conveniently perform bulk operations like installing option ROM, setting MTU and VLAN ID, changing adapter and port parameters on various devices, without having to access multiple modules and thus saving considerable amount of administration time.

Various configurable parameters have been categorized into several modules like **Boot Configuration** module to install and erase option ROM, **Network Configuration** module to set MTU and VLAN ID, **Card Configuration** module to change driver parameters, etc.

Before accessing these modules, you will have to create **groups** and then add **members** to that group. Once done, you can select the group in the modules and the new setting will be applied to all members of that particular group.

- **Manage Groups**

This is where you can add, delete and manage groups. Use the **Create a Group** section to create a group by specifying agent's platform and group type. There are various types of groups to choose from depending on the type of configuration setting you want to change. For example, to change the MTU size of a network interface (in the Network Configuration module), create a group with group type *Network*. To install or erase option ROM on a Chelsio T4 adapter (in the Boot Configuration module), create a group with group type *t4adapter*.

Here is a list of available configuration modules and corresponding group type:

- **Boot Configuration:** t3adapter, t4adapter, t5adapter
- **Network Configuration:** Network
- **Card Configuration:** t3adapter, t4adapter, t5adapter
- **Port Configuration:** t3port, t4port, t5port
- **Bypass Configuration:** Network

After the group has been created, add members to that group using the **Add a member row** button. Depending on the group type selected, you may be asked to provide additional details for the new member. Use the **Fetch Details** button to do so and finally click **Save a member** button to add the member to the group.

To delete a group, select it from the **Select a Group** drop-down list, and click **Delete Group**. To delete a member from a group, select the group to which the member belongs, select the radio button corresponding to the member to be deleted in the **SNO** field and finally click **Delete Member(s)**.

Create a Group

Group Name:

Os Type :

Group Type :

Figure 130 - Creating a group

Manage Group

Select a Group:

OS Type: WINDOWS

Group Type: t4adapter

SNO	HOSTNAME / IP	USERNAME	USERNAME	DETAILS
<input type="radio"/> 1	10.193.185.107	administrator	*****	Adpater Idx : 0 [T422;CR ; PCI Location: 01:00:04]
<input type="radio"/> 2	10.193.185.86	administrator	*****	Adpater Idx : 0 [T422;CR ; PCI Location: 02:00:04]

Figure 131 - Managing a group

- Boot Configuration**

Using this module, you can install option ROM or erase option ROM on Chelsio network devices. The **Set Default Boot Settings** button will reset the adapter to factory boot settings.

Boot Configuration ?

Boot Configuration

Select a group:

Figure 132 - Boot Configuration module

• Network Configuration

In the **Network Configuration** module, you can set Maximum Transfer Unit (MTU), Virtual LAN (VLAN) ID and change the IP address type for the members (network interfaces) of the *Network* group. MTU can be set between 1500-9000 bytes. VLAN id can be set for an adapter within the range 0-4094 (enter 0 to disable it). The IP type can be static or DHCP.

Figure 133 - Network Configuration module

• Card Configuration

The **Card Configuration** module allows you to set various adapter settings including TCP Offload. Offload settings are only available when using the TOE capable drivers (*t3_tom* and *toecore* for T3 cards; *t4_tom* and *toecore* for T4 cards).

DESCRIPTION	RANGE	VALUE
Max VM	[0,16]	4

Figure 134 - Card Configuration module

• **Port Configuration**

In the **Port Configuration** module, you can set various port settings like enabling Tx checksum and TCP segmentation offload, setting Link speed and link duplex mode, etc. The settings depend on the device driver installed.

Port Configuration
?

Select a Group:

Group Type: t4port

OS Type: WINDOWS

Refresh

Note:

MIN = Minimun value a variable of type int can assume

MAX = Maximun value a variable of type int can assume

DESCRIPTION	RANGE	VALUE
Link speed and link duplex	auto 100-full 1000-full	<input type="text" value="auto"/>
Enable Disable LSO IP v4	0 1	<input type="text" value="1"/>
Enable Disable LSO Ip v6	0 1	<input type="text" value="0"/>
FlowControl	[0,3]	<input type="text" value="1"/>
IP CheckSum Offload	[0,3]	<input type="text" value="2"/>
Enable Disable Virtual Machine Queue	0 1	<input type="text"/>
Enable Disable VMQLookAheadSplit	0 1	<input type="text"/>
Enable Disable VMQVLanFilter	0 1	<input type="text"/>
TCP CheckSum Offload v4	[0,3]	<input type="text"/>
TCP CheckSum Offload v6	[0,3]	<input type="text"/>
UDP CheckSum Offload v4	[0,3]	<input type="text"/>
UDP CheckSum Offload v6	[0,3]	<input type="text"/>
Max Number of Response Queue	[1,8]	<input type="text"/>
RSS load balancing profile	[0,4]	<input type="text"/>

Figure 135 - Port Configuration module

- **Bypass Configuration**

Use the **Bypass Configuration** module to configure Chelsio's bypass adapters like B420-SR and B404-BT.

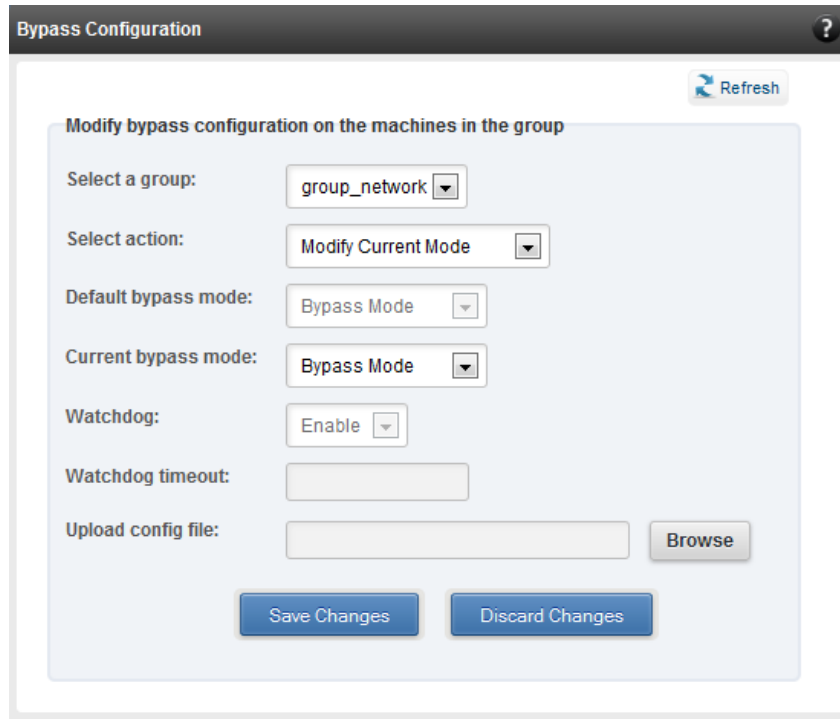


Figure 136 - Bypass Configuration module

8.5. System page

The system page is displayed, when the system hostname / IP address is selected in the tree menu on the left. On adding a system, this item is automatically selected, and this page is displayed. The system page contains generic system and support modules which are discussed below:

8.5.1. System summary

This module lists the system Hostname, Operating System, platform and also gives the count of the Chelsio cards found.

System Summary	
PROPERTY	VALUE
Hostname	shambu-dc
Connected IP:Port	10.193.184.168:35001
Chelsio Cards	1
Operating system	Windows Server 2012
Platform	x86_64 (amd64 / x64)

Figure 137 - System Summary module


8.5.2. Drivers Installation

Using this module, one can install various Chelsio drivers for different operating systems.

Figure 138 - Drivers Installation module connected to Windows Agent

8.5.3. Driver Details

A list of Chelsio device drivers with related information like driver description, version, current load status and installation date is shown in this module. To load or unload a particular driver, select the appropriate option (Yes to load, No to unload) in the corresponding cell of the *Loaded* column and click **Load/Unload Driver** button. Click **Refresh** if changes are not reflected immediately. To reject the load/unload option selected, click **Discard Changes**.

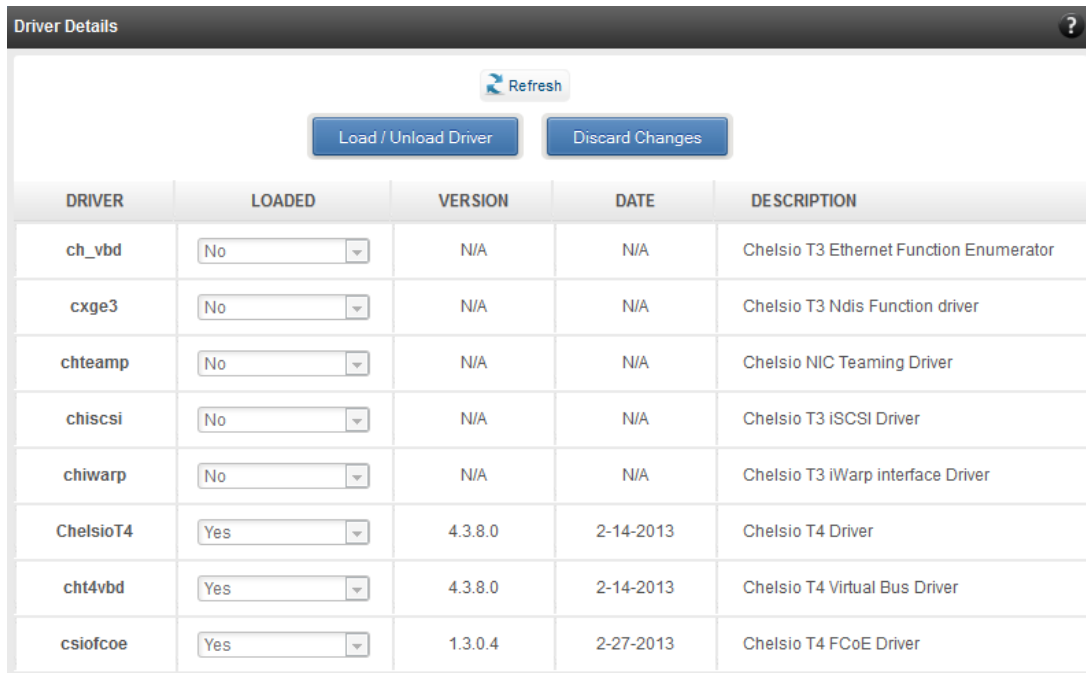


DRIVER	LOADED	VERSION	DATE	DESCRIPTION
ch_vbd	No	N/A	N/A	Chelsio T3 Ethernet Function Enumerator
cxge3	No	N/A	N/A	Chelsio T3 Ndis Function driver
chteamp	No	N/A	N/A	Chelsio NIC Teaming Driver
chiscsi	No	N/A	N/A	Chelsio T3 iSCSI Driver
chiwarp	No	N/A	N/A	Chelsio T3 iWarp interface Driver
ChelsioT4	Yes	4.3.8.0	2-14-2013	Chelsio T4 Driver
cht4vbd	Yes	4.3.8.0	2-14-2013	Chelsio T4 Virtual Bus Driver
csiofcoe	Yes	1.3.0.4	2-27-2013	Chelsio T4 FCoE Driver

Figure 139 - Driver Details module

8.5.4. System Diagnostics

Using this module, you can run various diagnostic tests on Chelsio adapters to troubleshoot adapter related issues. Select the adapter(s) from the list for which you want to run the test, select the operation (type of test; you can run more than one test at a time) and click **Run Test**. After the tests are completed, the results will be displayed in a tabular format.

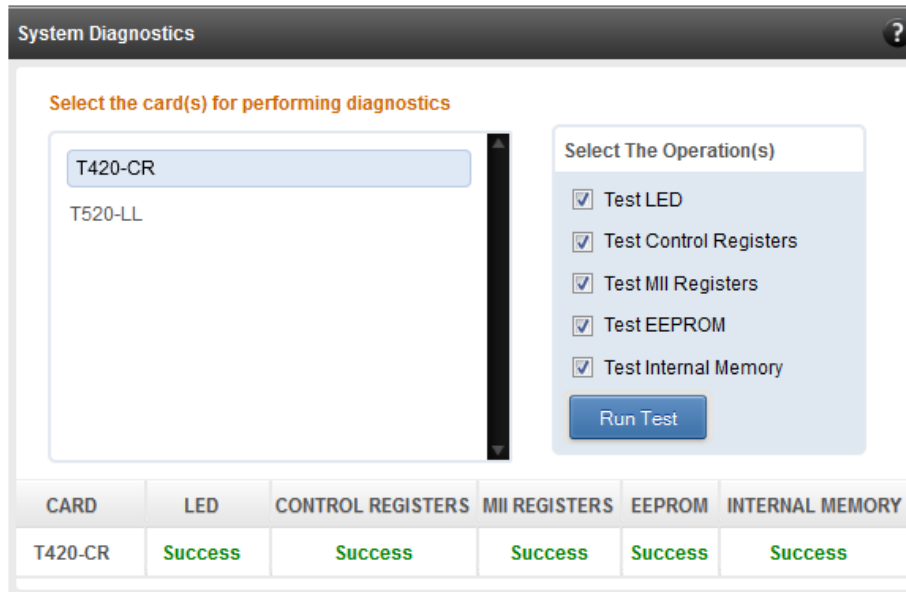

CARD	LED	CONTROL REGISTERS	MI I REGISTERS	EEPROM	INTERNAL MEMORY
T420-CR	Success	Success	Success	Success	Success

Figure 140 - System Diagnostics module for a T4 CNA

8.5.5. Unified Wire Manager Component Versions

A list of the Unified Wire Manager agent components installed on the managed system is shown in this module. The versions of the components are useful in case of reporting an issue to support.

Unified Wire Manager Component Versions	
COMPONENT	VERSIONS
Server	2.4.29
msiscsi	1.1.6
winchiscsi	2.0.0
win_net	2.0.0
winteam	2.0.0
winhwlib	2.0.3
winosapi	2.0.0

Figure 141 - Unified Wire Manager Component Versions module

8.5.6. VM Configurations

The VM Configurations module allows you to view UUID and Power and Health state of Virtual Machines. You can perform various system power options like enable (start VM), disable (stop VM), reboot (restart VM), pause and suspend (save VM state).

You can perform similar actions on multiple virtual machines. To do so, click on the machine names in the list. The properties box will display the domain state of the machines selected. Now, click on any of the system power actions provided at the bottom.

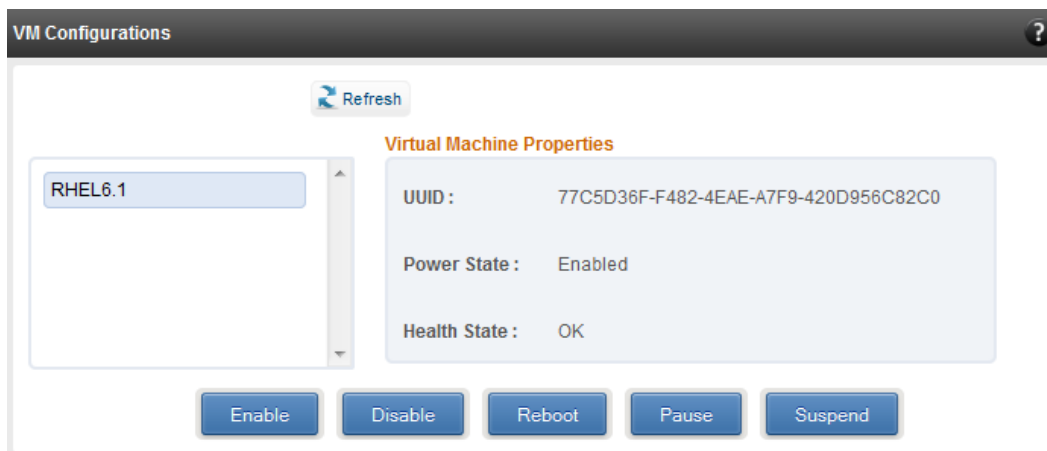


Figure 142 - VM Configurations module

8.5.7. Managed system application logs

The management agent logs its activities and any errors that occur, in `/var/log/chelsio` in *Linux* and *FreeBSD* and in the Event log, in *Windows*. This log can be obtained in this module. Only 20 entries can be obtained and viewed at a time. Logs can be viewed by either choosing from a list of fixed range or by specifying a custom starting point.

Use the **Get Logs** button to retrieve, and **Hide Logs** button to clear the log entries. The **Delete Logs** button will remove the logs permanently from the agent.

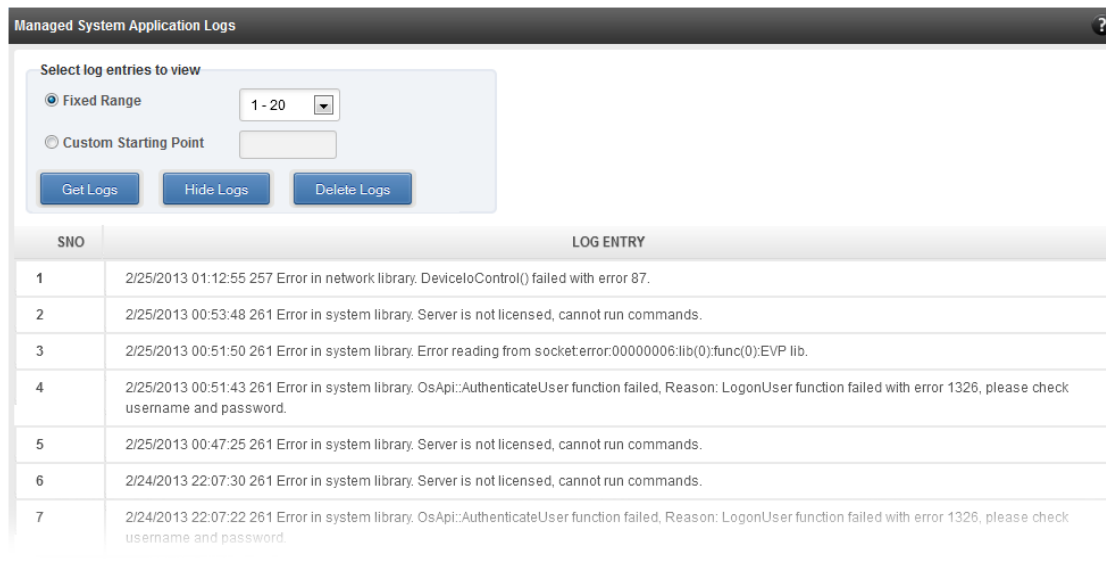


Figure 143 - Managed System Application Logs module for Windows Agent

8.6. Network page

8.6.1. Network summary

The **Network Summary** module provides the total number of Chelsio adapters present, including the number of T5, T4 and T3 adapters. It also provides the total number of Network interfaces including corporate and Chelsio interfaces and VLANs.

Network	
PROPERTY	VALUE
No. Of Chelsio Cards	2
No. Of T4 Cards	1
No. Of T3 Cards	1
No. Of Network Interfaces	7


Figure 144 - Network Summary module

8.6.2. Chelsio card page

When a Chelsio card is selected in the tree menu on the left, this page is displayed. It provides details of the card and associated settings. It also displays any card specific statistics that the hardware provides. The modules available on this page are as below:

- **Card summary**

This module provides PCI, firmware and other details of the card. The card's serial number and factory MAC address are also provided for inventory purposes.

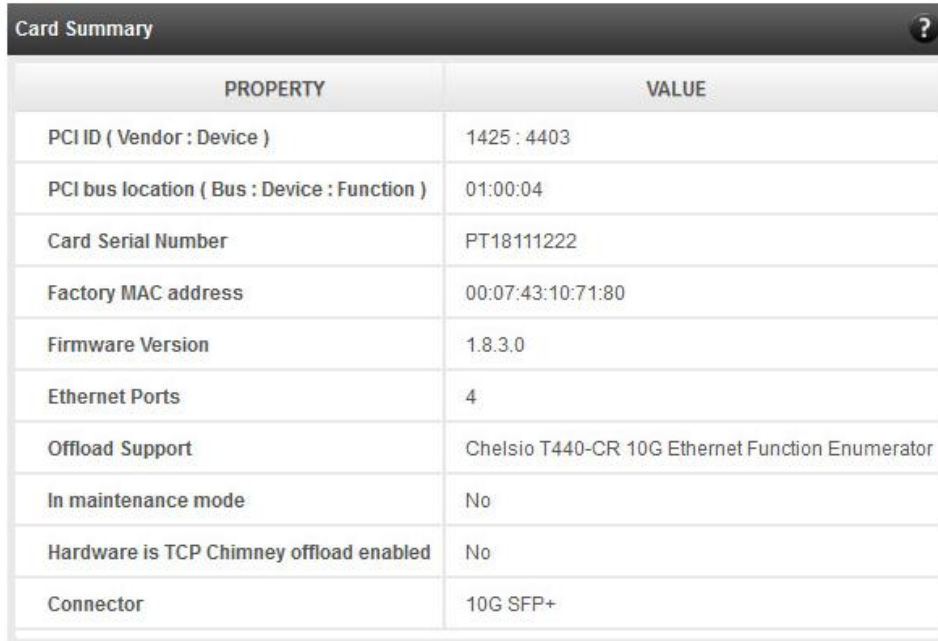

PROPERTY	VALUE
PCI ID (Vendor : Device)	1425 : 4403
PCI bus location (Bus : Device : Function)	01:00:04
Card Serial Number	PT18111222
Factory MAC address	00:07:43:10:71:80
Firmware Version	1.8.3.0
Ethernet Ports	4
Offload Support	Chelsio T440-CR 10G Ethernet Function Enumerator
In maintenance mode	No
Hardware is TCP Chimney offload enabled	No
Connector	10G SFP+

Figure 145 - Card Summary module for a Windows Agent

- **TCP Offload settings (Linux & FreeBSD)**

The TCP offload settings applicable to the card are shown here. These settings are only available when using the TOE capable drivers (*t3_tom* and *toecore* for T3 cards; *t4_tom* and *toecore* for T4 cards). On changing the settings, the changed settings may not reflect immediately on refreshing the data. Highlight the system item in the tree menu on the left, and click "Refresh", to refresh data from the system, in case the updated settings are not being shown.

TCP Offload Settings (Offload Card and Offload Summary Only) ?

Save or Discard Driver Settings Changes: Save Changes Discard Changes

DESCRIPTION	VALUE
TCP offload engine enabled (activated):	Yes <input type="checkbox"/>
Direct data placement (ddp):	Yes <input type="checkbox"/>
Soft listen backlog limit (soft_backlog_limit):	Yes <input type="checkbox"/>
Max offloaded connections (max_conn):	40960 <input type="text"/>
Delayed ACK (delack):	0 <input type="text"/>
Max Tx payload size (mss):	-1 <input type="text"/>
Max host send buffer per socket (max_host_sndbuf):	1 <input type="text"/>
Threshold payload size in bytes for Tx (tx_hold_thres):	1048576 <input type="text"/>
Min Rx credits for RX_DATA_ACK (rx_credit_thres):	0 <input type="text"/>
Min Rx payload size in bytes for DDP activation (ddp_thres):	15360 <input type="text"/>
DDP wait for push flag (ddp_push_wait):	Yes <input type="checkbox"/>
DDP receive coalescing (ddp_rcvcoalesce):	No <input type="checkbox"/>

Figure 146 - TCP Offload Settings module for a FreeBSD Agent

- **Device Driver settings (Windows)**

The device driver settings applicable to the card are shown here. For Chelsio T5 and T4 adapters, only the *MaxVMQueues* field will be displayed. On changing the settings, the changed settings may not reflect immediately on refreshing the data. Highlight the system item in the tree menu on the left, and click **Refresh**, to refresh data from the system, in case the updated settings are not being shown.

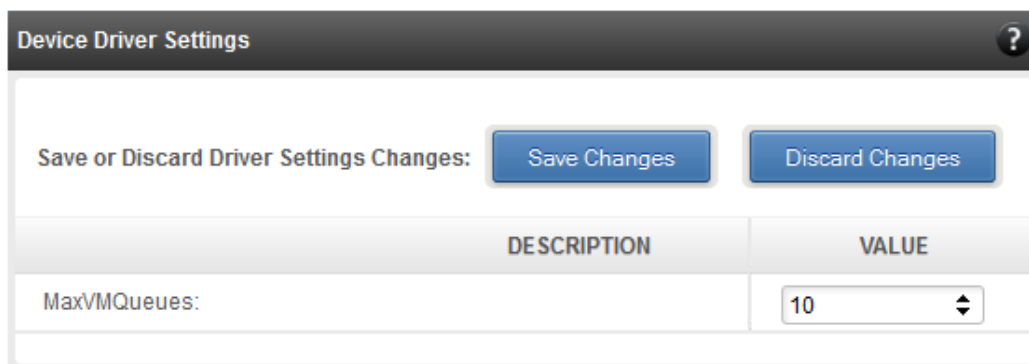


Figure 147 - Device Driver Settings module for a Windows Agent

- **Card statistics**

Certain statistics are maintained on a per card basis (instead of a per port basis), since the card has a TCP/IP offload capability. The statistics are for TCP and IP protocol processing done in the card's hardware. These statistics may only be applicable if the card is TOE enabled.

STATISTIC	VALUE
OutRsts	0
InSegs	44
OutSegs	57
RetransSegs	0

Figure 148 - Card Statistics module

8.6.2.1. Chelsio card's port

The port page is displayed on selecting a port of a Chelsio card listed in the tree menu on the left. It provides details of the port and port settings. It also displays any port specific statistics that the hardware provides. The modules available on this page are as below:

- **Port summary**

The port details such as the Ethernet adapter name and link details are shown in this module.




PROPERTY	VALUE
Port Name	Local Area Connection 89
Link	Link up

Figure 149 - Port Summary of T4 CNA

- **Port settings**

Port settings such as MTU, Link speed and others can be set in this module. The settings depend on the device driver installed.

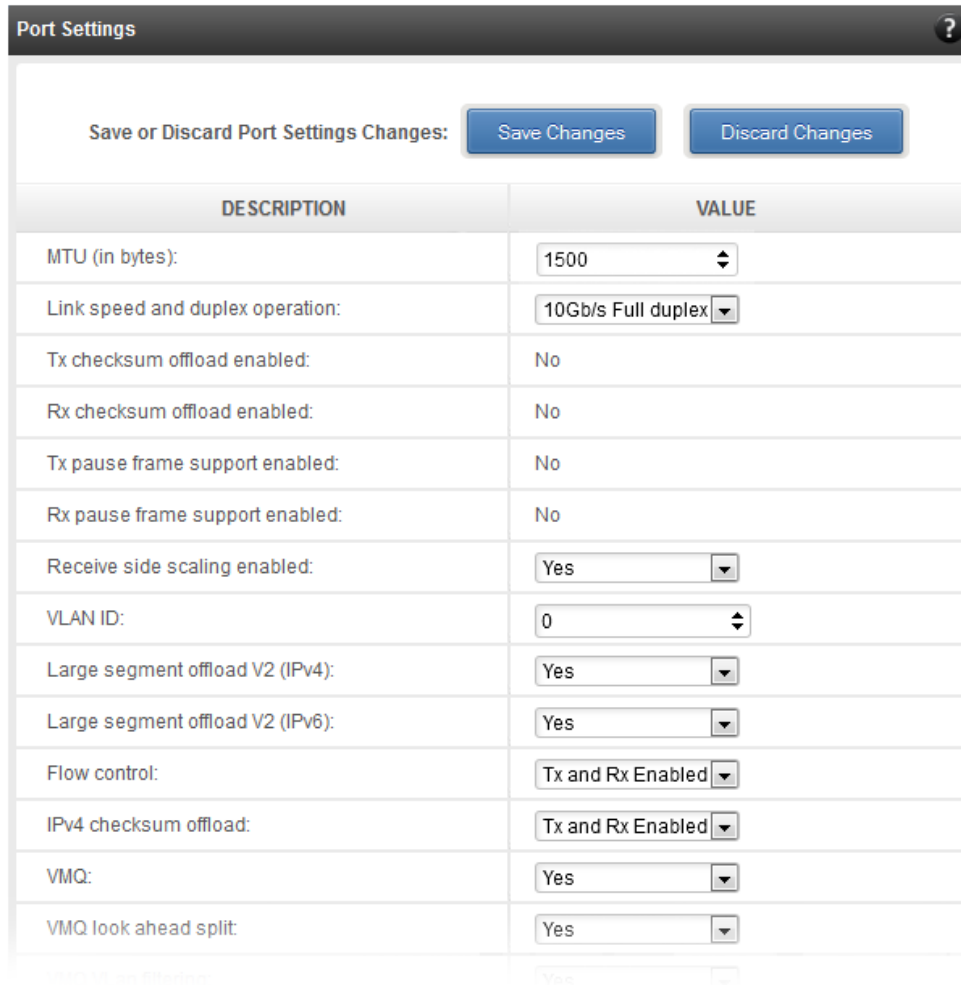


DESCRIPTION	VALUE
MTU (in bytes):	1500
Link speed and duplex operation:	10Gb/s Full duplex
Tx checksum offload enabled:	No
Rx checksum offload enabled:	No
Tx pause frame support enabled:	No
Rx pause frame support enabled:	No
Receive side scaling enabled:	Yes
VLAN ID:	0
Large segment offload V2 (IPv4):	Yes
Large segment offload V2 (IPv6):	Yes
Flow control:	Tx and Rx Enabled
IPv4 checksum offload:	Tx and Rx Enabled
VMQ:	Yes
VMQ look ahead split:	Yes

Figure 150 - Port Settings of T4 CNA

- **Port statistics**

Ethernet statistics and additional hardware statistics for the port are displayed in this module.

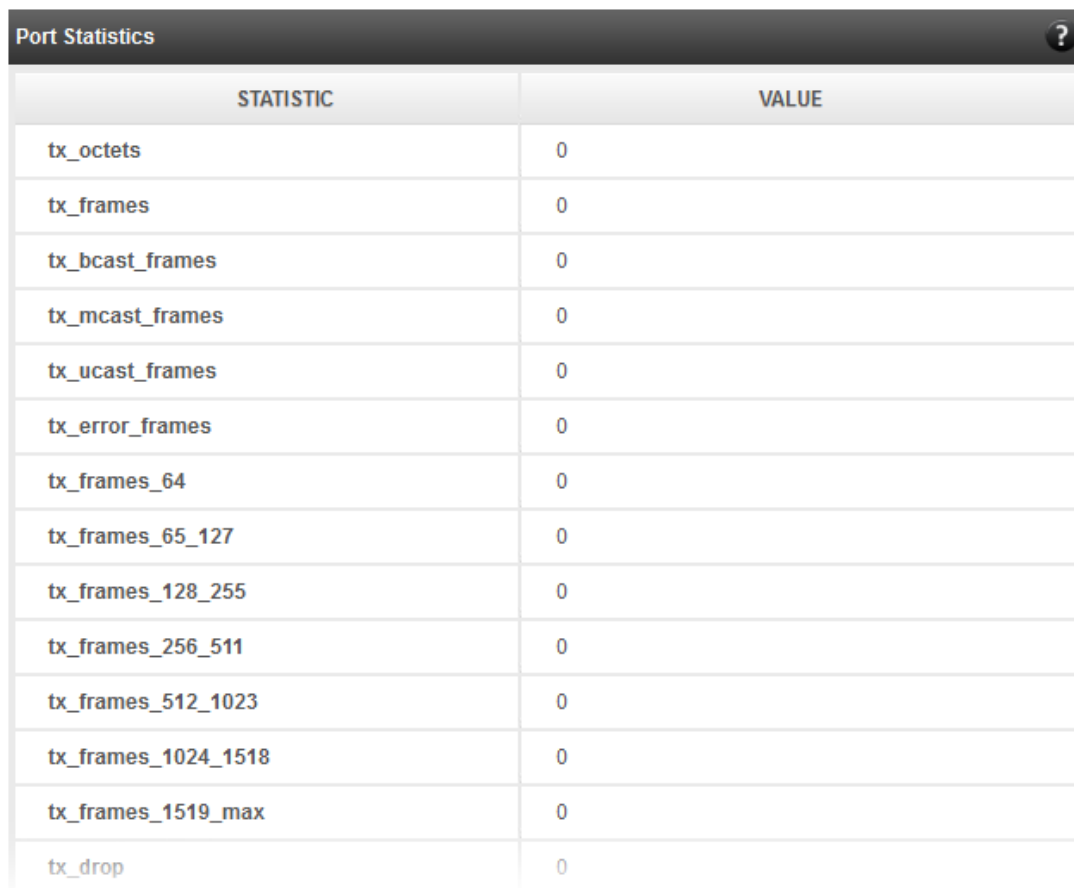

STATISTIC	VALUE
tx_octets	0
tx_frames	0
tx_bcast_frames	0
tx_mcast_frames	0
tx_ucast_frames	0
tx_error_frames	0
tx_frames_64	0
tx_frames_65_127	0
tx_frames_128_255	0
tx_frames_256_511	0
tx_frames_512_1023	0
tx_frames_1024_1518	0
tx_frames_1519_max	0
tx_drop	0

Figure 151 - Port Statistics of T4 CNA on Windows Agent

8.6.3. Networking Management page

The system networking configurations are shown on this page. IP addresses, MTU, VLAN Ids, DNS and default gateway settings can be viewed and modified here. Network adapters can also be enabled or disabled as required. The modules available on this page are as below:

- **System Network configuration**

The list of network adapters on the system is displayed in a list on the left. The icon for the adapter indicates whether it is administratively enabled and if it is connected to the network. The primary IP address (IPv4) can be set for the adapter, when it is selected. There is an option to add/modify/delete additional IP addresses or aliases for the specified adapter. Use the option to add additional IP addresses with caution, since multiple IP addresses configured on the same adapter, for the same network, may result in unpredictable behavior of the system's networking

stack. Maximum Transfer Unit (MTU) can be set between 1500-9000 bytes. VLAN id can also be set for an adapter within the range 0-4094 (enter 0 to disable it).

You can use the View/Set IP addresses option to add, modify or delete IP aliases.

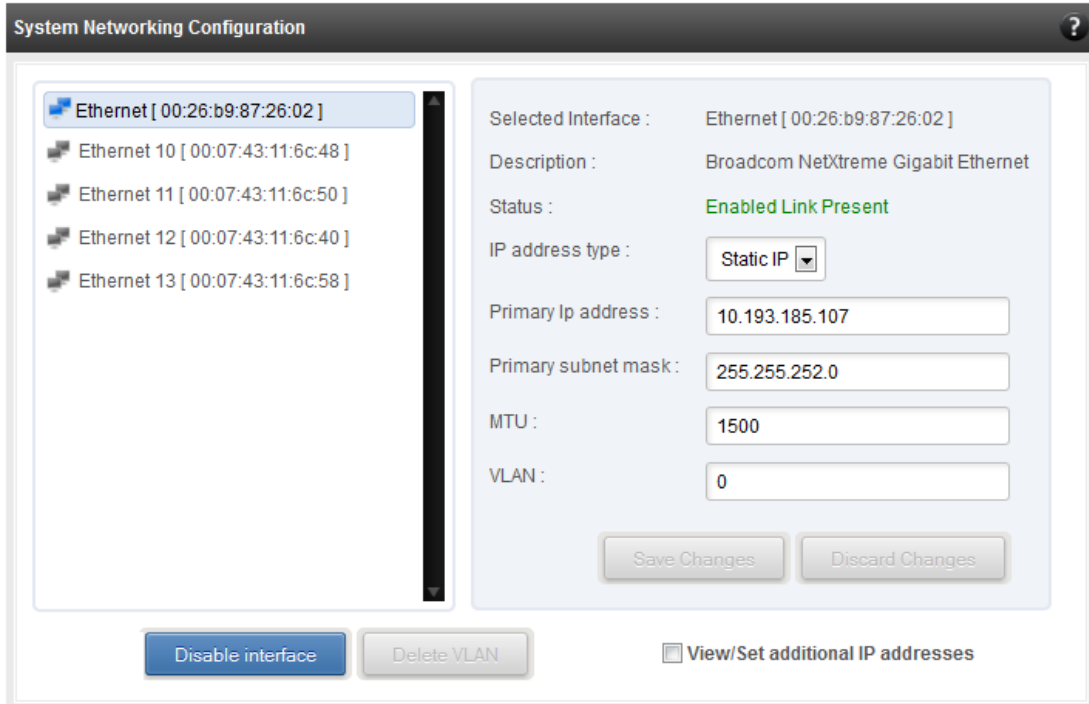


Figure 152 - System network configuration module

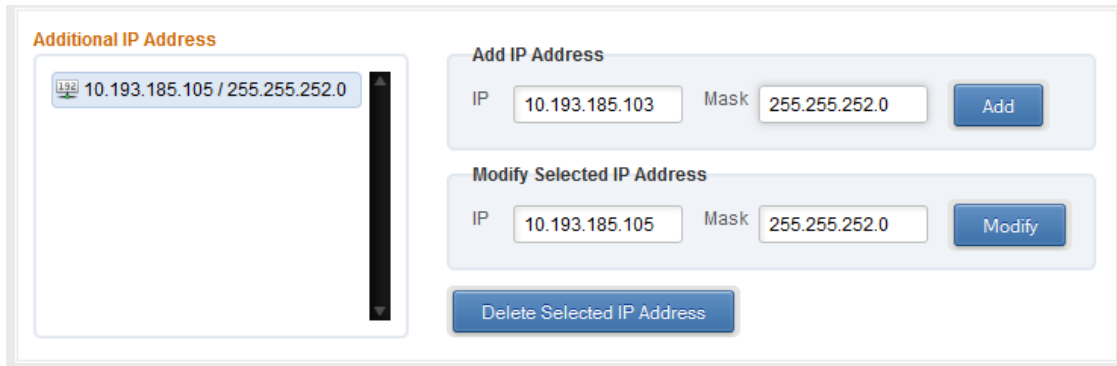


Figure 153 - Managing IP aliases

- **System network statistics**

Using this module, one can generate reports based on Throughput pkts/sec and Throughput Mbs (Receive, Transmit, Bi-direction) in Table and Graph format for a network adapter. A report for hardware statistics can be generated based on different parameters, only in the Table view in the **Advanced NIC characteristics**. The **polling time** field sets the average time (in seconds) based on which the table/graph updates the report.

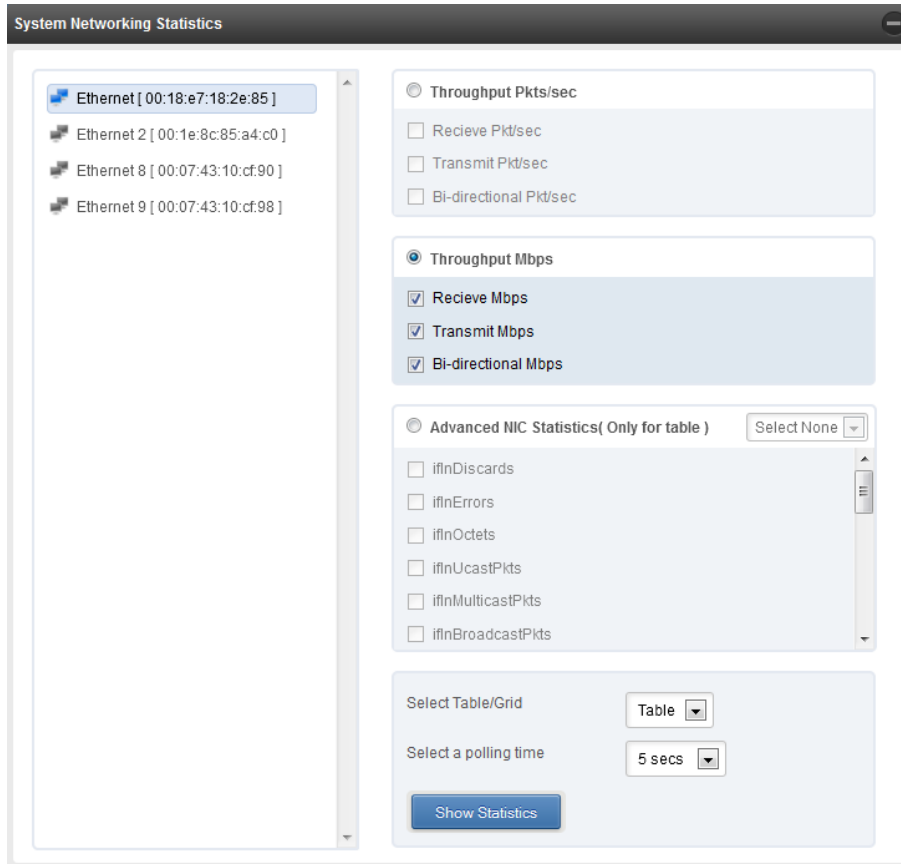


Figure 154 - System network statistics module


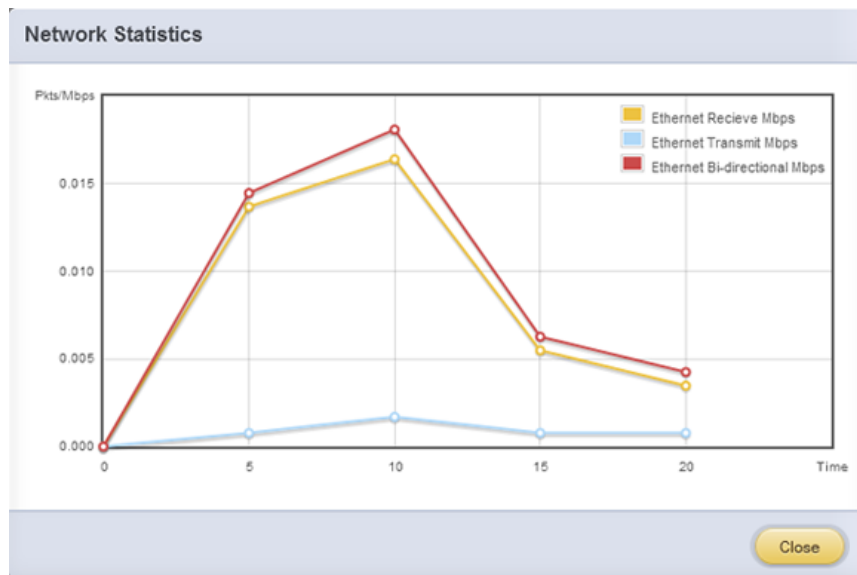


Figure 155 - Network Throughput Vs Time instant Graph

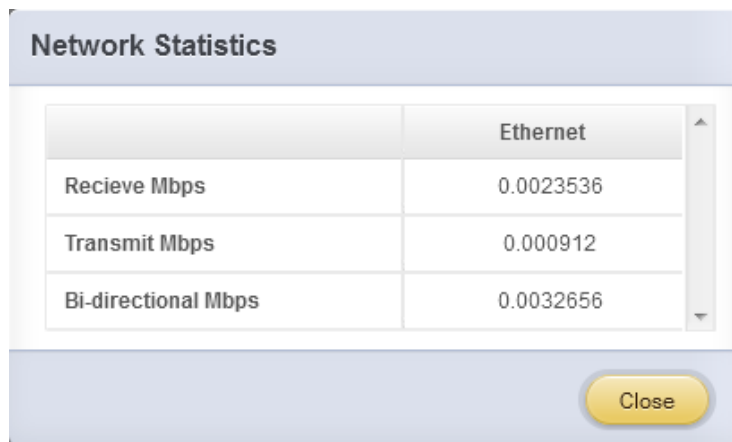

Network Statistics	
	Ethernet
Recieve Mbps	0.0023536
Transmit Mbps	0.000912
Bi-directional Mbps	0.0032656

Close

Figure 156 - Network Throughput Vs Time instant Table

- **Default Gateway and DNS configuration**

The DNS servers list can be set here. The default gateway for remote networks and the Internet can also be set here. On Linux and FreeBSD, only one default gateway is allowed. On Windows, you may set multiple default gateways. Use the option to set multiple default gateways with caution, since it may cause the system to stop communicating with external networks.

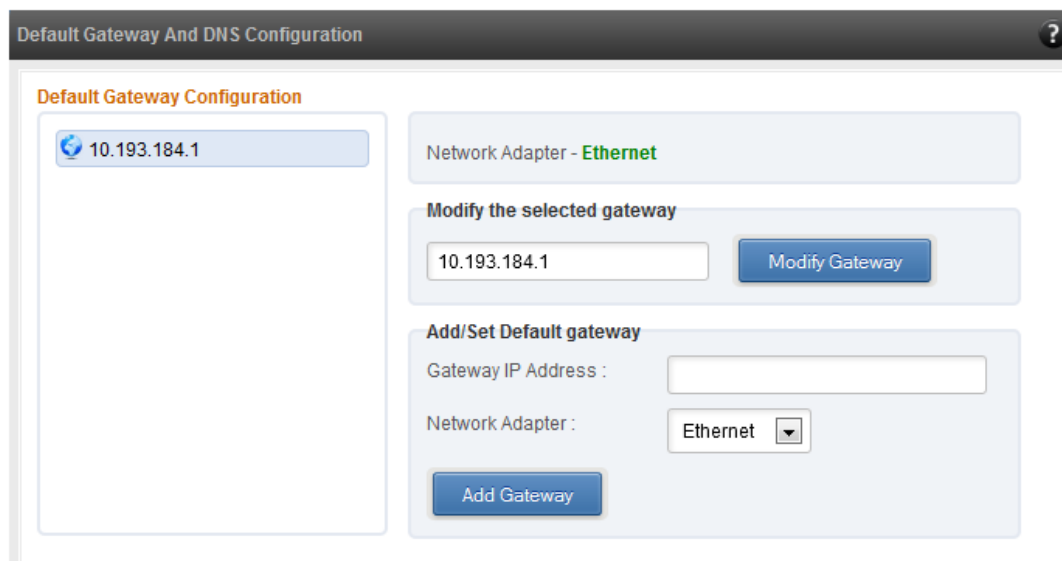


Figure 157 - Default gateway and DNS configuration module for a Windows Agent

- **Create a network team/bond device (Linux and FreeBSD)**

A list of regular network adapters is provided here, to create a Network Team / Bond device. The available modes for the team depend on the OS teaming / bonding driver in use. On Linux the

team may be created with a DHCP or Static IP address. Please check with the driver documentation for the supported modes for creating a team / bond, with offload enabled Chelsio cards. All modes may not be available with all configurations / combinations. Also, the team members can only be 2 ports of a single offload-enabled card, and not across Chelsio cards. Do not mix third party cards and offload-enabled Chelsio cards in a single team.

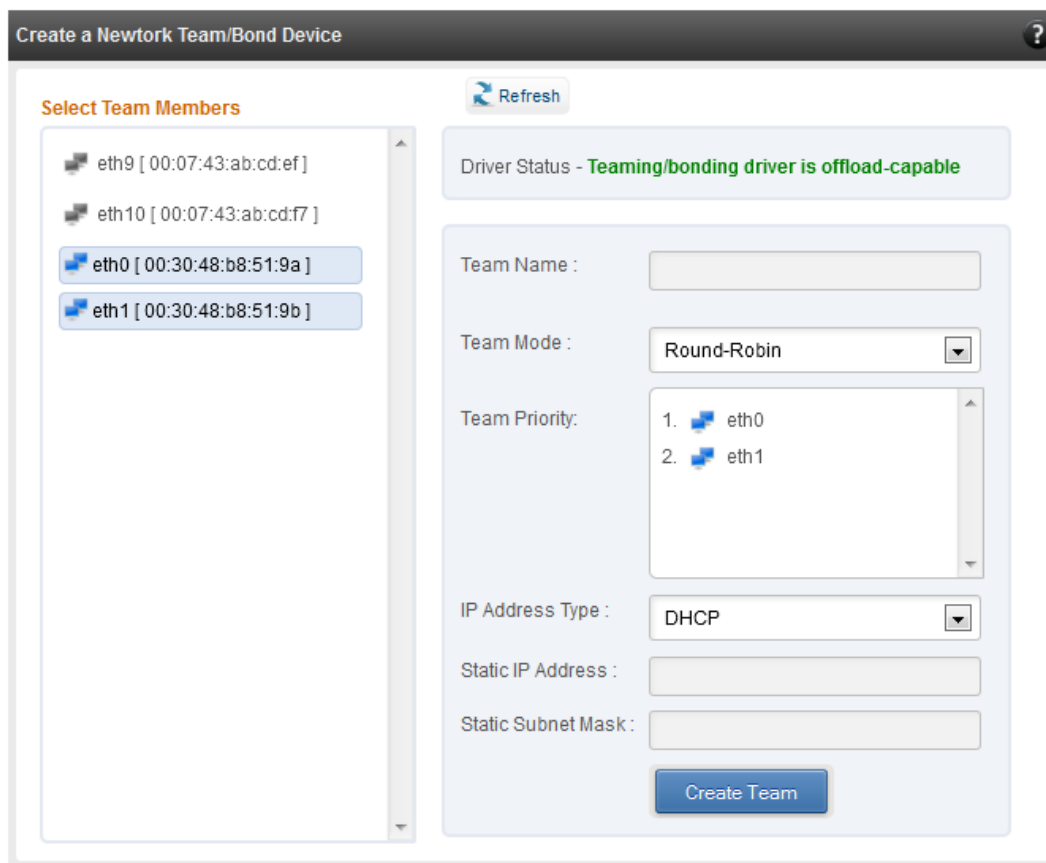


Figure 158 - Create a network team/bond device module for Linux Agent

- **Network troubleshooting**

This module allows detecting and troubleshooting various network connectivity issues. The Ping utility helps to contact a system by specifying IP address, Number of ICMP packets to send and packet timeout. The result of the ping can be viewed by clicking on the **Ping Result** button.

Using **TraceRoute** one can determine the route taken by packets across an IP network.

Use the **GetConnections** utility to view currently active TCP/UDP connections. Offload status for each connection is also displayed if protocol offload hardware is available. This is useful for troubleshooting any connectivity issues for clients to various services.

Ping

Destination :

No. Of ICMP Packets to send :

ICMP Packet timeout in seconds :

Pkts Send: 4 , Pkts Recvd: 4 , AVgRtt: 5 ms [Clear](#)

Figure 159 - Ping Utility

TraceRoute

Destination :

Hop Count	Round Trip Time	Ipv4 Address
1	2 ms	10.193.184.1
2	0 ms	10.193.177.3
3	5 ms	111.93.129.157
4	8 ms	121.241.196.101
5	3 ms	121.240.1.242
6	23 ms	172.29.250.33
7	24 ms	180.87.38.5
8	131 ms	80.231.217.17
9	130 ms	80.231.217.6
10	131 ms	80.231.154.17
11	132 ms	208.178.58.109
12	274 ms	208.178.63.114
13	272 ms	72.13.84.18

[Hide](#)

Figure 160 - TraceRoute Utility

GetConnections

PROTOCOL	LOCAL ADDRESS	REMOTE ADDRESS	STATE	OFFLOAD
TCP	0.0.0.0:135	0.0.0.0	Listening	In host
TCP	0.0.0.0:445	0.0.0.0	Listening	In host
TCP	0.0.0.0:3389	0.0.0.0	Listening	In host
TCP	0.0.0.0:35001	0.0.0.0	Listening	In host
TCP	0.0.0.0:47001	0.0.0.0	Listening	In host
TCP	0.0.0.0:49152	0.0.0.0	Listening	In host
TCP	0.0.0.0:49153	0.0.0.0	Listening	In host
TCP	0.0.0.0:49154	0.0.0.0	Listening	In host
TCP	0.0.0.0:49155	0.0.0.0	Listening	In host
TCP	0.0.0.0:49156	0.0.0.0	Listening	In host

Figure 161 - GetConnections Utility

8.6.3.1. Hypervisor

• Virtual Network Manager

This module allows you to view and manage virtual networks. The left pane displays a list of different virtual networks created. Clicking on a virtual network name will display related properties on the right.

If a virtual network is added to a virtual machine, a “+” link appears. Expanding the link will display the virtual machines to which the network is attached. Click on the virtual machine names to view their properties on the right.

To delete a virtual network, click on the network name and then click “Delete Switch”. If it is attached to a virtual machine, you will have to detach the virtual machine first. To do so, click on the virtual machine and click “Detach”. Similarly, detach all the virtual machines and then use the “Delete Switch” to delete the virtual network.

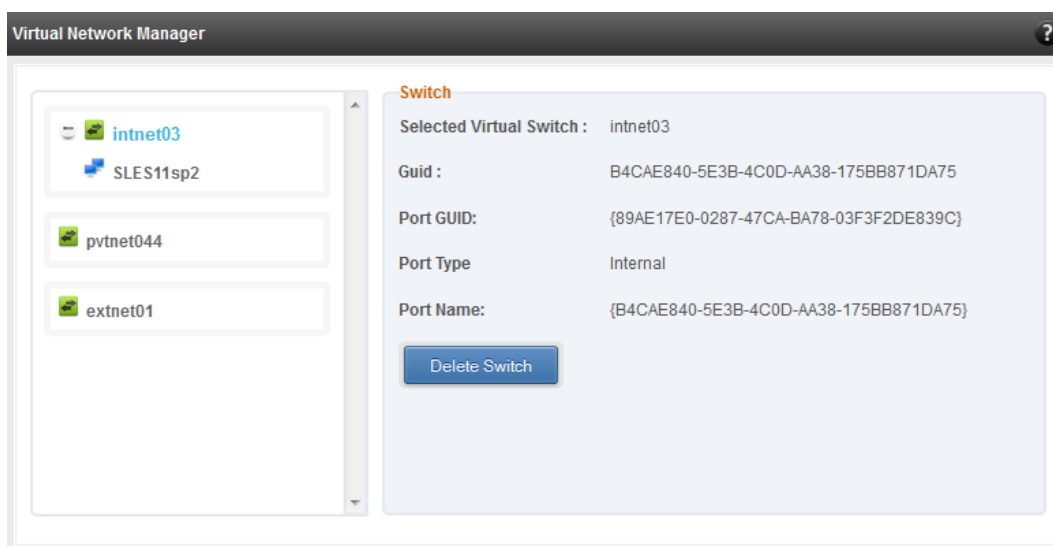


Figure 162 - Virtual Network Manager module

• Add Virtual Network Configuration

There are three kinds of virtual networks you can create using this module:

- External network: Using this type, you can provide virtual machines access to external networks and vice versa via a physical network adapter in the host system. The virtual machines can also communicate with each other on the same virtual network.
- Internal Network: This type allows communication between virtual machines in the same virtual network and also between the virtual machines and the host. This type of virtual network is not bound to any physical network adapter and no access to external networks is provided.

- **Private Network:** A Private Network is similar to Internal Network in that physical adapter is not required for setup and access to external networks is not provided. However, unlike Internal Network, guest operating systems can only communicate with guest operating systems in the same private network and not with the host. The host operating system cannot access the virtual machines on private network.

Once created, you can manage the virtual networks in the **Virtual Network Manager** module.

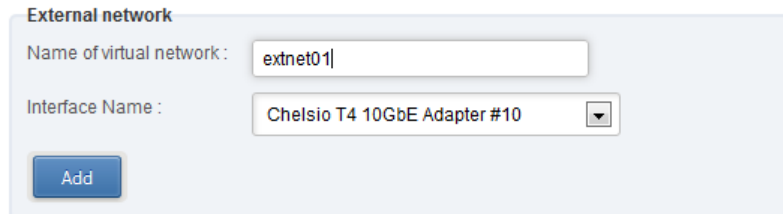


Figure 163 - Creating external virtual network

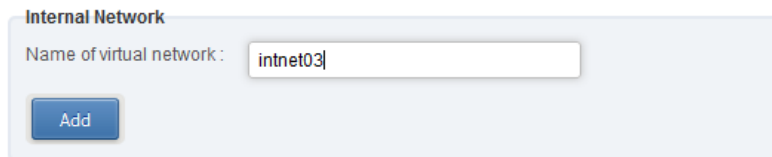


Figure 164 - Creating internal virtual network

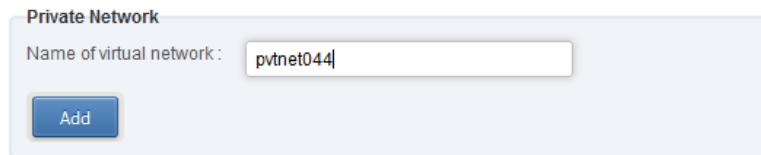


Figure 165 - Creating private virtual network

- **Virtual Network Settings**

To attach a virtual network to a virtual machine, select the virtual network from the **Virtual Network** list and the virtual machine from the **VM** list. Finally click *Attach*.

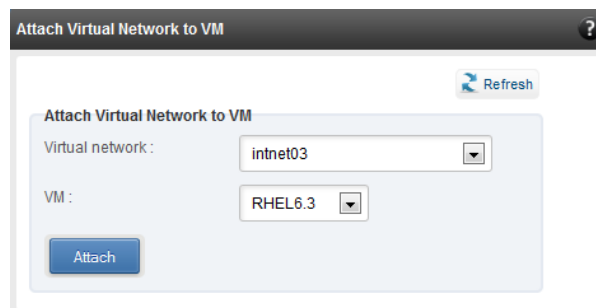


Figure 166 - Attaching Virtual Network to VM

8.6.4. iWARP

- **iWARP Settings**

On Linux Agents, iWARP parameter settings for Chelsio's RDMA capable NICs can be set using this module. These settings can be set only when iWARP driver (*iw_cxgb4* for T4 and T5; *iw_cxgb3* for T3) is loaded. If you set any parameter for a T5 adapter, it applies for all the T5 adapters present. Same applies for T4 and T3 adapters.

On Windows Agents, only T3 HBAs are supported currently. Parameters can be set per port.

On FreeBSD Agents, only T4 CNAs are supported. iWARP parameter settings can be set only when *iw_cxgbe* driver is loaded.

iWarp Settings ?

Select a Driver: iw_cxgbe ▾

Save Changes
Discard Changes

DESCRIPTION	VALUE
peer2peer	No ▾
ep_timeout_secs	60 ▾
mpa_rev	1 ▾
markers_enabled	No ▾
crc_enabled	Yes ▾
rcv_win	262144 ▾
snd_win	131072 ▾
db_delay_usecs	1 ▾
ocqp_support	Yes ▾
db_fc_threshold	2000 ▾
fastreg_support	No ▾
dack_mode	1 ▾
c4iw_max_read_depth	8 ▾
enable_tcp_timestamps	No ▾
enable_tcp_sack	No ▾
enable_tcp_window_scaling	Yes ▾
c4iw_debug	Yes ▾
p2p_type	1 ▾

Figure 167 - iWARP settings for T4 CNA for FreeBSD Agent

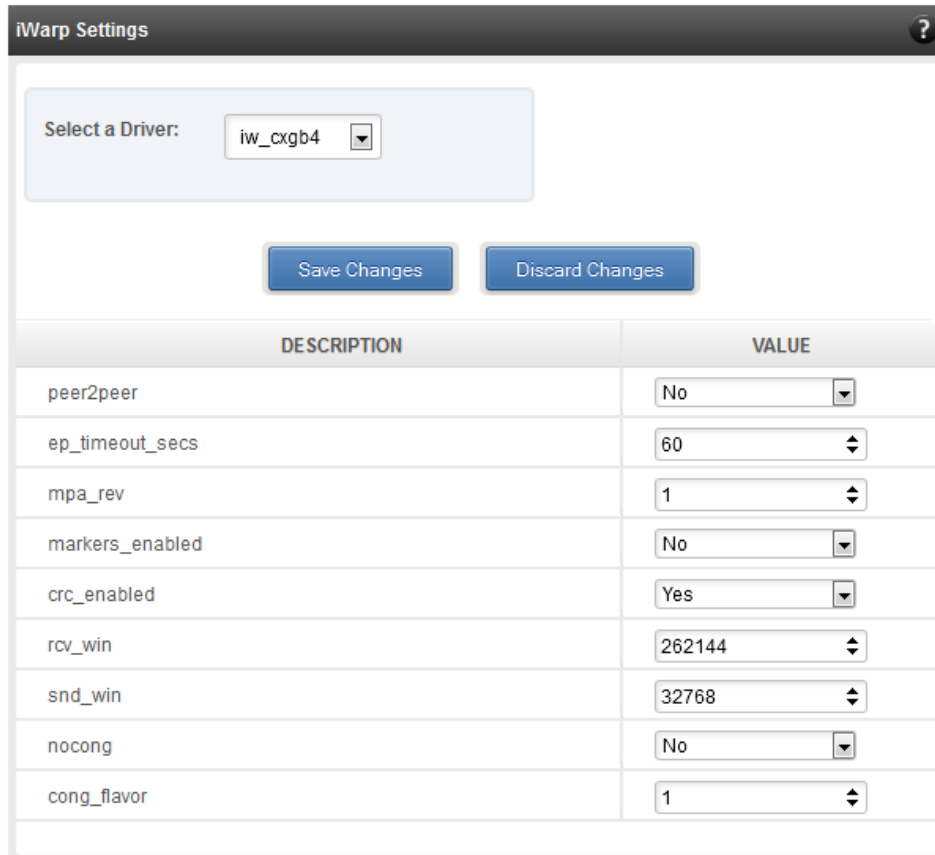


Figure 168 - iWARP settings for T4 CNA for Linux Agent

8.7. Storage

- Storage Summary

The **Storage** module lists the status of configuration modules under Storage section, running on the agent.

PROPERTY	VALUE
FCoE service on server	Enabled
iSCSI Initiator service on server	Enabled
iSCSI Target service on server	Enabled

Figure 169 - Storage Summary Module

8.7.1. FCoE Initiator (Linux, Windows, XenServer)

All supported Chelsio FCoE initiators available on the operating system can be managed from this page. FCoE support is extended on Linux, Windows and XenServer platforms. Please refer [Platform/Driver Matrix](#) section on the list of operating systems that are supported.

- **FCoE Initiator Summary**

This module provides details about the driver installed; such as driver name and its version. The module also gives information about the number of FCoE enabled cards that are present on the machine.




PROPERTY	VALUE
FCoE Driver	csiostor (1.1.0.9)
No. of FCoE enabled cards	2
No. of FCoE Ports	6

Figure 170 - FCoE Initiator Summary module for Linux Agent

8.7.1.1. FCoE Initiator Card

- **FCoE Card Summary**

Details pertaining to the card used such as model, firmware/hardware version etc, are provided in this module.

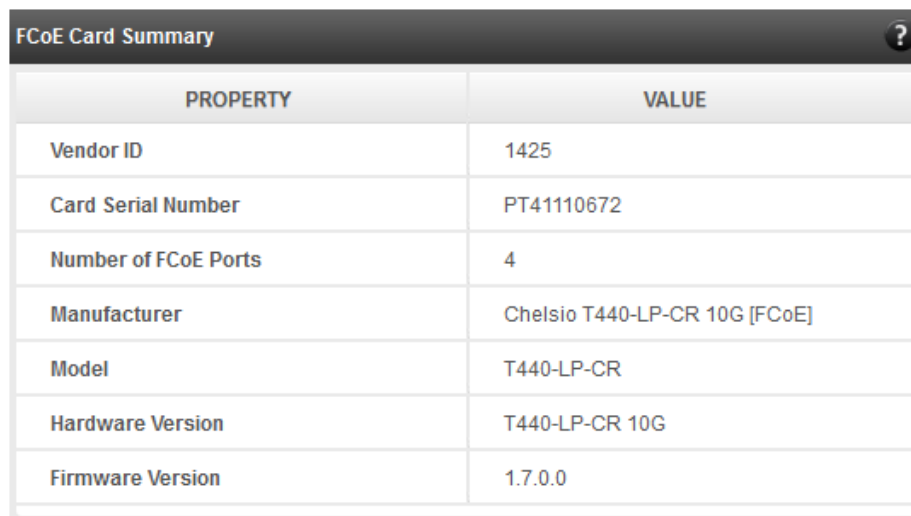


PROPERTY	VALUE
Vendor ID	1425
Card Serial Number	PT41110672
Number of FCoE Ports	4
Manufacturer	Chelsio T440-LP-CR 10G [FCoE]
Model	T440-LP-CR
Hardware Version	T440-LP-CR 10G
Firmware Version	1.7.0.0

Figure 171 - FCoE Card Summary module

- **FCoE Attributes**

Information such as Interrupt modes (MSI/MSI-X/INTx), SCSI mode and the card state are provided in this module.

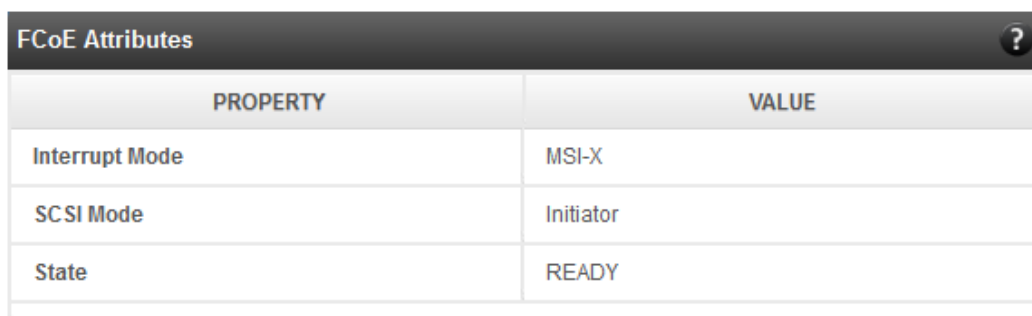

FCoE Attributes	
PROPERTY	VALUE
Interrupt Mode	MSI-X
SCSI Mode	Initiator
State	READY


Figure 172 - FCoE Attributes module

8.7.1.2. FCoE Port

This is an actual N_Port which communicates with the fabric and performs FIP and FCoE device discovery. This page lets the user to retrieve all the FCoE specific port information and also extend NPIV management support. It contains the following sections:

- **FCoE Port Summary**

The SCSI adapter name and the underlying ENODE MAC address of the physical port can be found here.

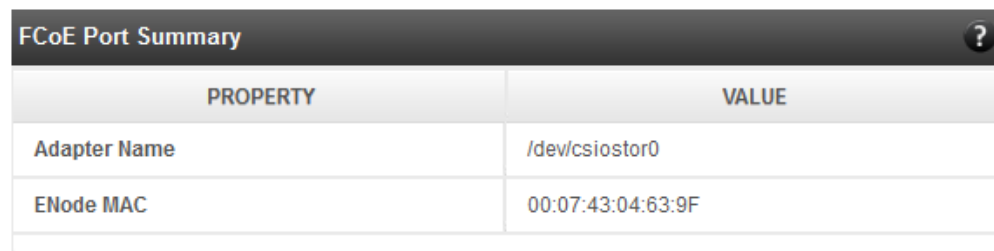

FCoE Port Summary	
PROPERTY	VALUE
Adapter Name	/dev/csiostor0
ENode MAC	00:07:43:04:63:9F

Figure 173 - FCoE Port Summary module for Linux Agent

- **FCoE Port Attributes**

This module provides details about link status and port identifiers such as WWPN, WWNN, FC ID and NPort MAC Address. The module also contains fabric information such as fabric name, VLAN on which the FCoE service is currently running and the number of SCSI targets that are being discovered by this port. Port speed being mentioned in this section varies on the card type (10G/1G) being used. Note that only class 3 service is supported by the initiator for now and the frame size is fixed to 2128 bytes as per spec.

FCoE Port Attributes	
PROPERTY	VALUE
State	Operational
NodeWWN	50:00:74:30:46:39:F0:00
PortWWN	50:00:74:30:46:39:F0:80
NPort MAC Address	0E:FC:03:53:00:23
Vlan ID	2
Fabric Name	20:02:00:05:73:D5:7A:C1
NPort ID	53:00:23
Type	NPort
Supported Class of Service	3
OS Device Name	/sys/class/fc_host/host119
Speed	10 GBPS
Maximum Frame Size	2128
No. of SCSI Targets	0

Figure 174 - FCoE Port Attributes module for Linux Agent

• FCoE NPIV management

NPIV is a fibre channel facility allowing multiple N_Port IDs to share a single physical N_Port. This module allows the user to manage virtual ports on the corresponding FCoE Port.

To create a virtual port, select the option **Create** and the GUI allows two ways of creating a virtual port.

- i. Manual: Where the user can manually create a virtual port by providing a value to the WWPN and WWNN fields.
- ii. Auto-generate: Where the FCoE function auto-generates a WWPN and WWNN for the virtual port.

To delete a virtual port, select the option **Delete** and select the virtual port WWPN which you want to delete and click on **delete**.

Figure 175 - FCoE NPIV management module

8.7.1.3. FCoE Remote Port

Remote ports are the SCSI targets that are discovered by their respective N_port/virtual ports. The GUI conveys the same via a tree structure so that the end user knows the initiator-target mapping.

- **FCoE Remote Port Attributes**

This module provides details about the discovered target such as target's FC ID, WWPN and WWNN so that the user can identify the discovered target accordingly.

PROPERTY	VALUE
FC ID	54:00:53
State	Operational
NodeWWN	20:01:00:11:0D:56:29:00
PortWWN	20:01:00:11:0D:56:29:00

Figure 176 - FCoE Remote Port Attributes module

- **FCoE Remote Port Lun Details**

This module provides the LUN information such as size of the LUN, SCSI address, and LUN address. For Linux, the SCSI address is displayed in H:C:T:L (Host:Channel:Target:Lun) format and for Windows, it is displayed in P:B:T:L(SCSI Port:Bus:Target:Lun) format.

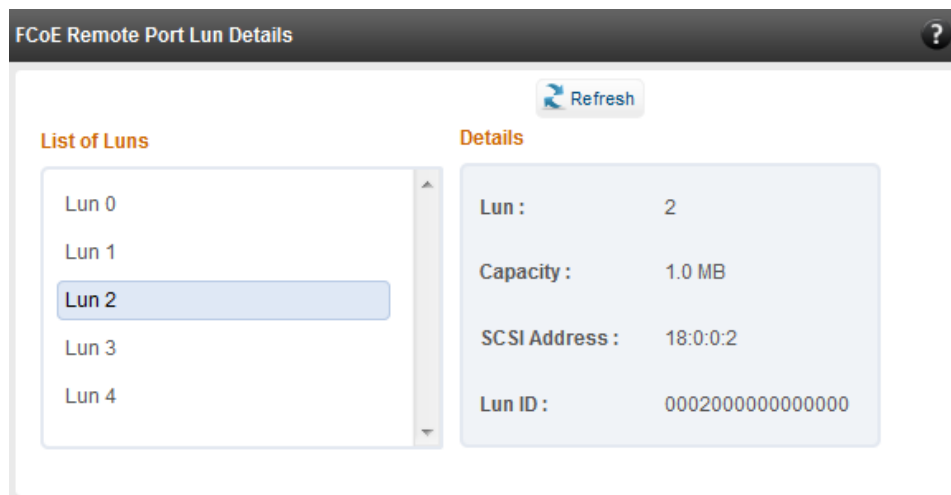


Figure 177 - FCoE Remote Port Lun Details module

8.7.1.4. FCoE Virtual Port

A virtual port allows multiple Fibre Channel initiators to occupy a single physical port, easing hardware requirements in SAN design, especially where virtual SANs are called for. The virtual ports appear under their respective N_Ports after creation and the GUI conveys it via a tree structure so that the end user knows the N_port-VN_Port mapping. It contains the following modules:

- **FCoE Virtual Port Summary**

The SCSI adapter name and the underlying ENODE MAC address of the physical port can be found here.

FCoE Virtual Port Summary	
PROPERTY	VALUE
Adapter Name	/dev/csiostor0
ENode MAC	00:07:43:04:63:A7

Figure 178 - FCoE Virtual Port Summary module for Linux Agent

- **FCoE Virtual Port Attributes**

The module provides details about link status and port identifiers such as WWPN, WWNN, FC ID and Virtual NPort MAC Address. The module also contains fabric information such as fabric name, VLAN on which the FCoE service is currently running and the number of SCSI targets that are being discovered by this virtual port. Port speed being mentioned in this section varies on the card type (10G/1G) being used. Note that only class 3 service is supported by the initiator for now and the frame size is fixed to 2128 bytes as per spec.

FCoE Virtual Port Attributes	
PROPERTY	VALUE
State	Operational
NodeWWN	50:00:74:30:46:3A:71:09
PortWWN	50:00:74:30:46:3A:71:89
NPort MAC Address	0E:FC:03:77:00:1D
Vlan Id	5
Fabric Name	20:05:00:05:73:D5:7A:C1
Nport ID	77:00:1D
Type	VN_Port
Supported Class Of Service	3
OS Device Name	/sys/class/fc_host/host127
Speed	10 GBPS
Maximum Frame Size	2128
No. of SCSI Targets	1

Figure 179 - FCoE Virtual Port Attributes module

- **FCoE Remote Port Attributes**

This module provides details about the discovered target for remote port associated with virtual port. Details such as target's FC ID, WWPN and WWNN are provided so that the user can identify the discovered target accordingly.

FCoE Remote Port Attributes	
PROPERTY	VALUE
FC ID	54:00:53
State	Operational
NodeWWN	20:01:00:11:0D:56:29:00
PortWWN	20:01:00:11:0D:56:29:00

Figure 180 - FCoE Remote Port Attributes module

- **FCoE Remote Port Lun Details**

This module provides LUN information for remote port associate with virtual port. Details such as size of the LUN, SCSI address, and LUN address are provided. For Linux, the SCSI address is displayed in H:C:T:L (Host:Channel:Target:Lun) format and for Windows, it is displayed in P:B:T:L(SCSI Port:Bus:Target:Lun) format.

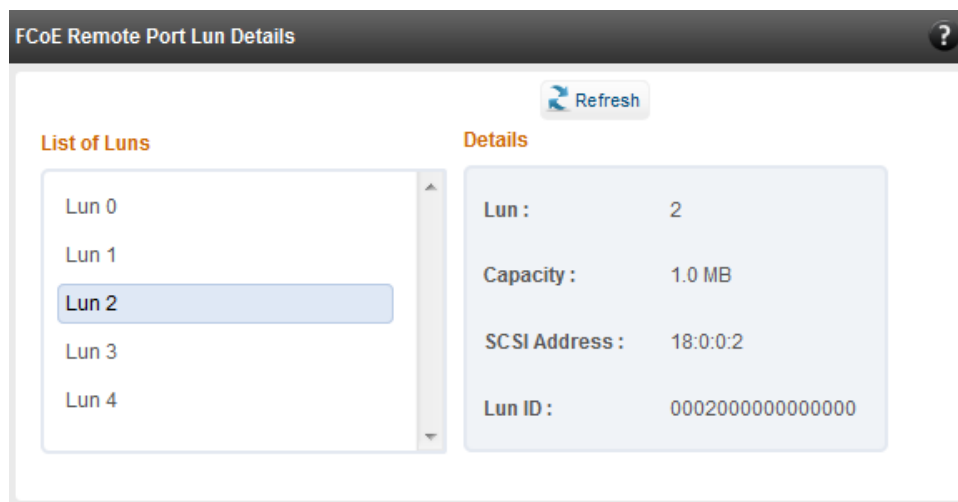


Figure 181 - FCoE Remote Port Lun Details module

8.7.2. iSCSI initiator (Linux, Windows)

All supported iSCSI initiators can be managed from this page. The supported initiators on Windows are Microsoft and Chelsio iSCSI initiator (T4 adapters). On Linux, Open iSCSI initiator is supported. The modules available on this page are:

- **Initiator nodes**

This module lists the initiator nodes / virtual adapters configured in the initiator stack. The node can be enabled or disabled (Chelsio node cannot be disabled in Windows), and its properties can be viewed and edited in this module. In the Chelsio Linux stack, new initiator nodes can be created too. Disabling the initiator causes it to log out of any iSCSI targets that it is connected to, thus removing any disks provided by the iSCSI targets that were connected. Use the **Disable** option with caution. The CHAP authentication secret should be between 12 and 16 characters in length, and the initiator's IQN name should start with "iqn.".

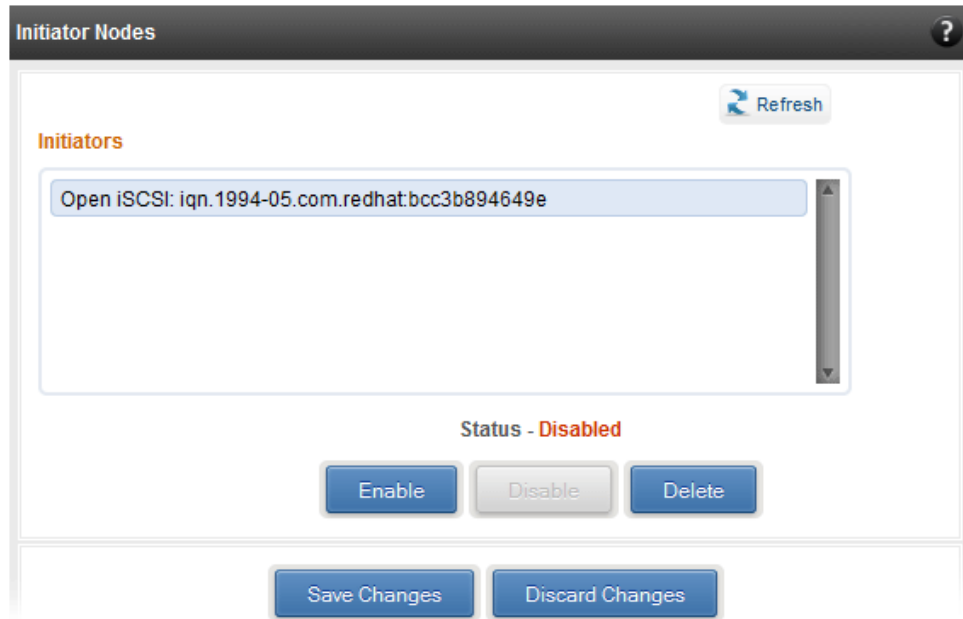


Figure 182 - Open iSCSI initiator

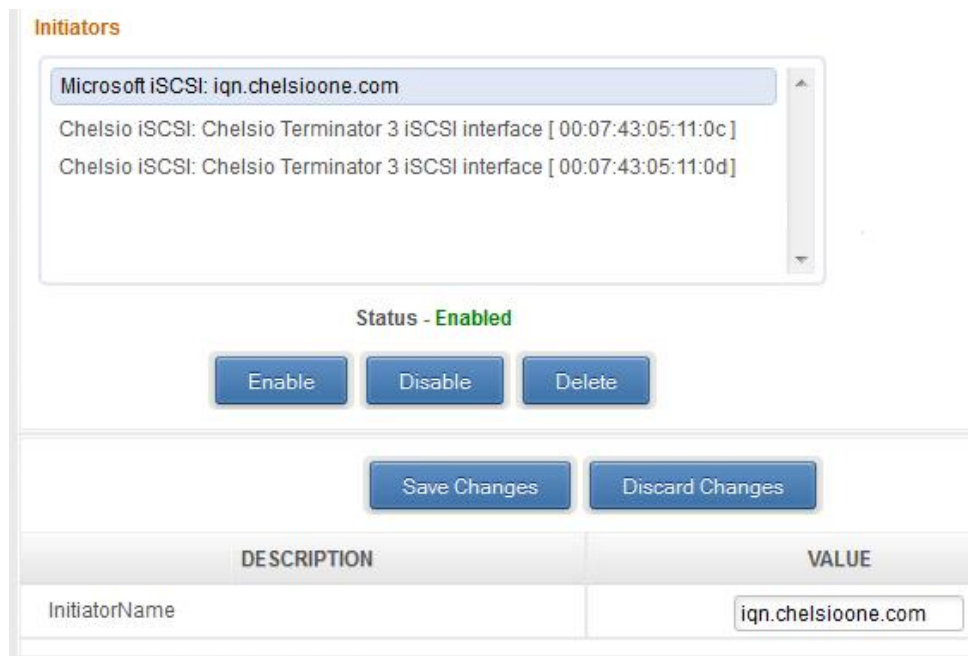


Figure 183 - Microsoft iSCSI initiator

Initiator Nodes

Refresh

Initiators

- Microsoft iSCSI: iqn.chelsioone.com
- Chelsio iSCSI: Chelsio Terminator 3 iSCSI interface [00:07:43:05:11:0c]
- Chelsio iSCSI: Chelsio Terminator 3 iSCSI interface [00:07:43:05:11:0d]

Status - Enabled

Enable Disable Delete

Save Changes Discard Changes

DESCRIPTION	VALUE
IpAddress	102.192.182.11
SubnetMask	255.255.255.0
Gateway	0.0.0.0
iBFT	Yes
VlanInsertion	No
VlanID	777
TCPAck	0

Figure 184 - Chelsio iSCSI initiator

- **Discover targets**

iSCSI targets can be discovered by providing the IP address and TCP port (usually 3260) of the target. The discovery operation fetches the targets found at that Portal (combination of IP address and TCP port). The discovery operation also fetches all the other Portals that the target(s) are listening on. The discovered target can be deleted if required. Please note that all the Portals that the target sent are listed. The delete operation will not work on all the portals, only on the original discovery portal (the IP address and TCP Port specified when discovering the target).

Note *If there are any pre-existing iSCSI sessions established to the target, deletion of the target Portal from the discovered targets list will fail.*

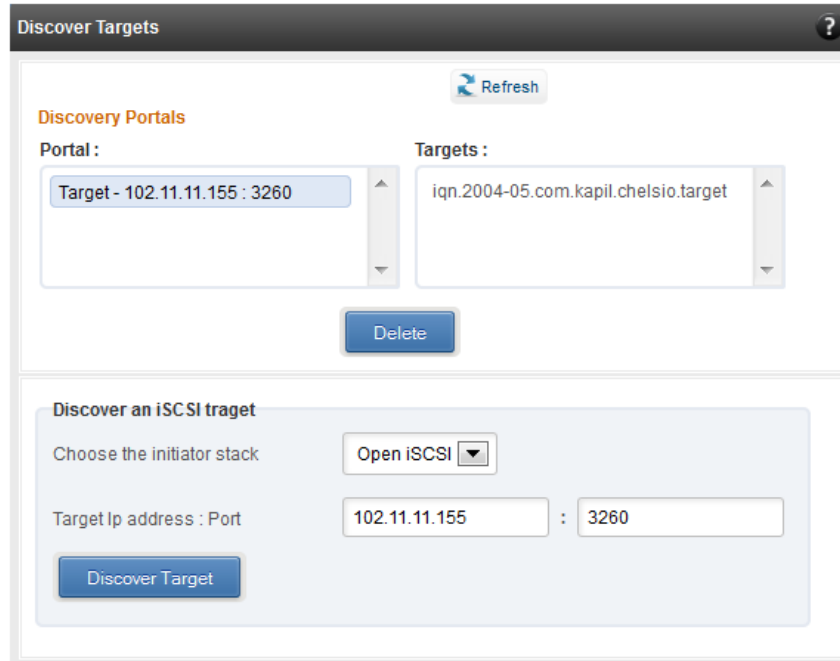


Figure 185 - Discover targets module

- **Targets**

The iSCSI targets that have been discovered, or are currently connected, are listed here. You may login, logout and delete the target from the initiator's configuration. If a target is connected, the sessions and connections to the target, and the disks provided by the target will be listed.


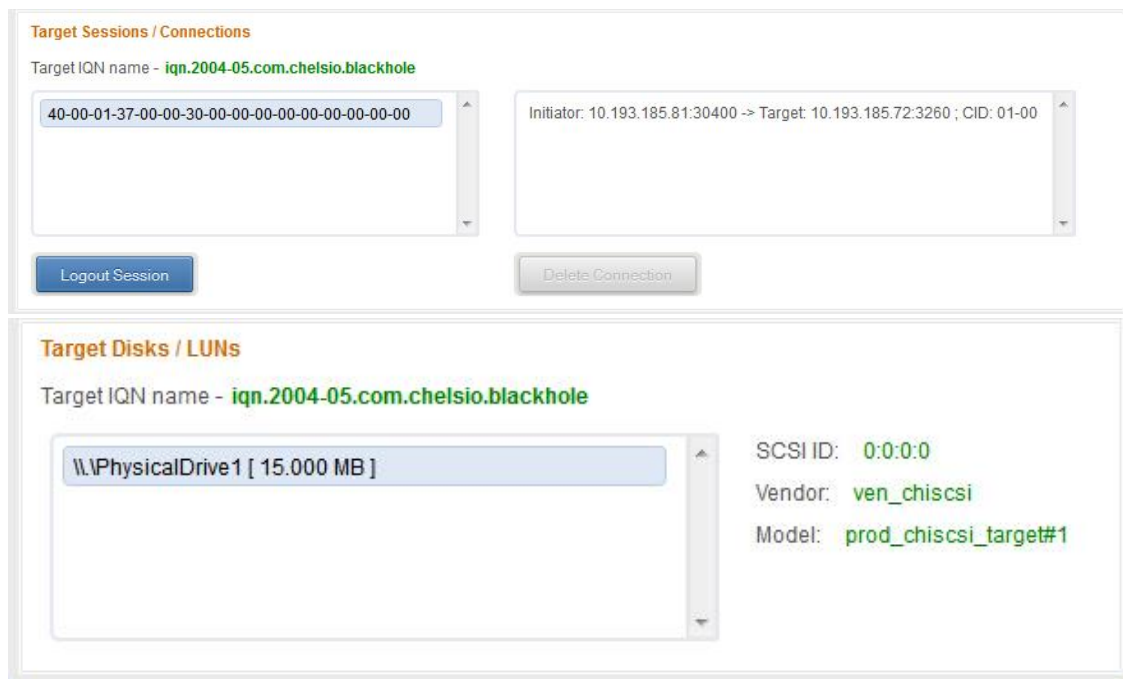


Figure 186 - Targets module after logging in

8.7.3. FO iSCSI Initiator (Linux)

- **Full Offload iSCSI Hardware Information**

PCI, firmware and other adapter related details are provided in this module. Select the Chelsio adapter for which you want to view properties from the **Select a T4 Card** drop-down list and the module will expand to display related properties. You can also view details like link id, status, enode mac, etc of all the ports of the selected adapter.

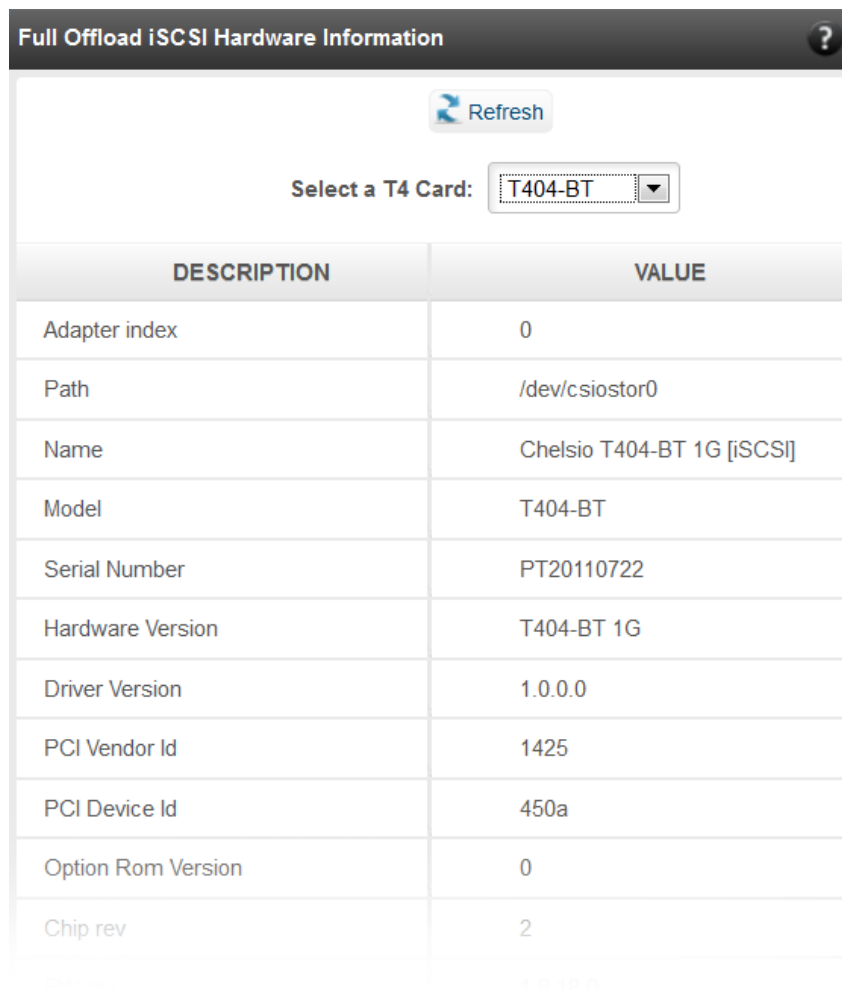


DESCRIPTION	VALUE
Adapter index	0
Path	/dev/csiostor0
Name	Chelsio T404-BT 1G [iSCSI]
Model	T404-BT
Serial Number	PT20110722
Hardware Version	T404-BT 1G
Driver Version	1.0.0.0
PCI Vendor Id	1425
PCI Device Id	450a
Option Rom Version	0
Chip rev	2

Figure 187 - Full Offload iSCSI Hardware Information module

- **FO iSCSI Manage Ports**

Here you can configure various port settings like VLAN id, Maximum Transmission Unit (MTU) and IP. Select a Chelsio adapter from **Select a T4 Card** drop-down list and then select the port for which you want set any of the aforementioned properties. MTU can be set between 1500-9000 bytes. VLAN id can be set within the range 0-4094 (enter 0 to disable it). The IP type can be *IPV4* (static) or *DHCP*.

The **Port Up** and **Port Down** buttons will enable and disable the selected port respectively. The **Clear IP** button deletes values set for the IP Type, IP, Subnet Mask and Gateway properties and resets them.

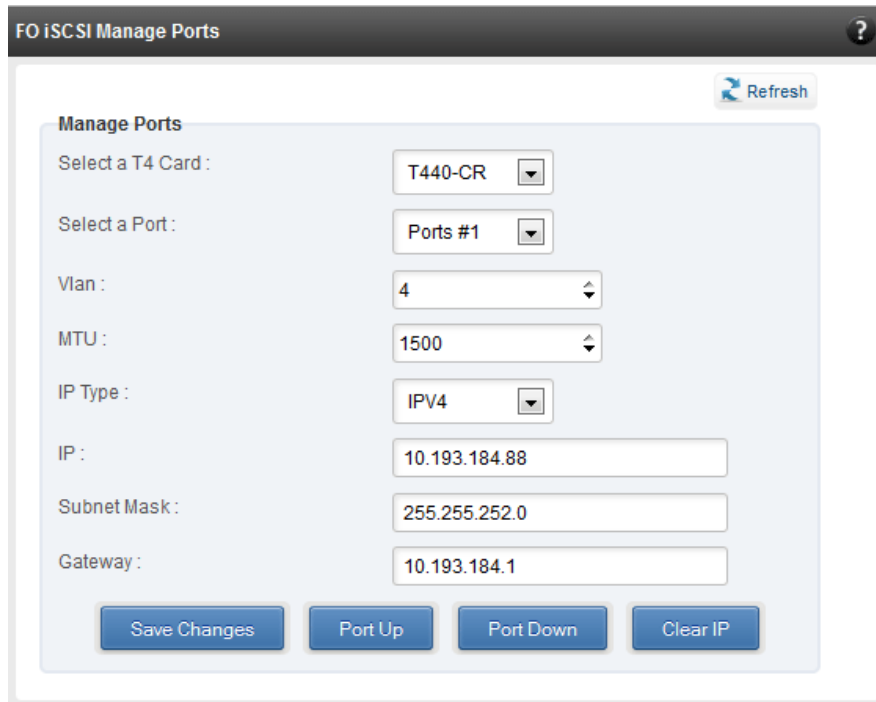

The screenshot shows the 'FO iSCSI Manage Ports' window. It features a 'Refresh' button in the top right corner. The main area is titled 'Manage Ports' and contains several configuration fields: 'Select a T4 Card' (dropdown menu with 'T440-CR' selected), 'Select a Port' (dropdown menu with 'Ports #1' selected), 'Vlan' (spin box with '4'), 'MTU' (spin box with '1500'), 'IP Type' (dropdown menu with 'IPV4' selected), 'IP' (text input with '10.193.184.88'), 'Subnet Mask' (text input with '255.255.252.0'), and 'Gateway' (text input with '10.193.184.1'). At the bottom, there are four buttons: 'Save Changes', 'Port Up', 'Port Down', and 'Clear IP'.

Figure 188 - FO iSCSI Manage Ports module

- **FO iSCSI Initiator Properties**

In the **FO iSCSI Initiator Properties** module, you can configure FO iSCSI Initiator by setting different properties like enabling/disabling CHAP authentication, setting Header and Data digest, etc.

DESCRIPTION	VALUE
DataSequenceInOrder	Yes
DataPDUInOrder	Yes
ImmediateData	No
InitialR2T	Yes
ErrorRecoveryLevel	0
MaxConnections	1
DefaultTime2Wait	20
DefaultTime2Retain	20
MaxBurstLength	8192
FirstBurstLength	8192
HeaderDigest	None,CRC32C
DataDigest	None,CRC32C
MaxRecvDataSegmentLength	8192
PingTimeout	15
AuthPolicy	Mutual
AuthMethod	None
UserName	inf_username

Figure 189 - FO iSCSI Initiator Properties

- **FO iSCSI Manage Instances**

The FO iSCSI Initiator service maintains multiple instances of a target depending on the discovery method. In this module, you can set up to 8 instances. Configurable parameters include initiator node name (IQN), alias (friendly) name, Initiator (CHAP) Username and password.

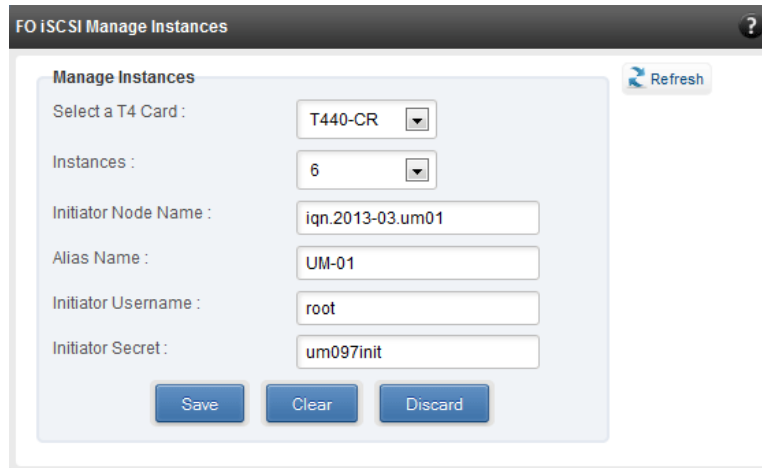


Figure 190 - FO iSCSI Manage Instances module

- **FO iSCSI Discover Details**

iSCSI Targets can be discovered using this module. Select a Chelsio adapter and initiator instance using which you want to discover targets. Next, provide the source (initiator) and destination (target) IP. Finally, click **Discover**. After successful discovery, all the discovered targets will appear in the **Discovered Targets** section. To view more details, click on the Target name.

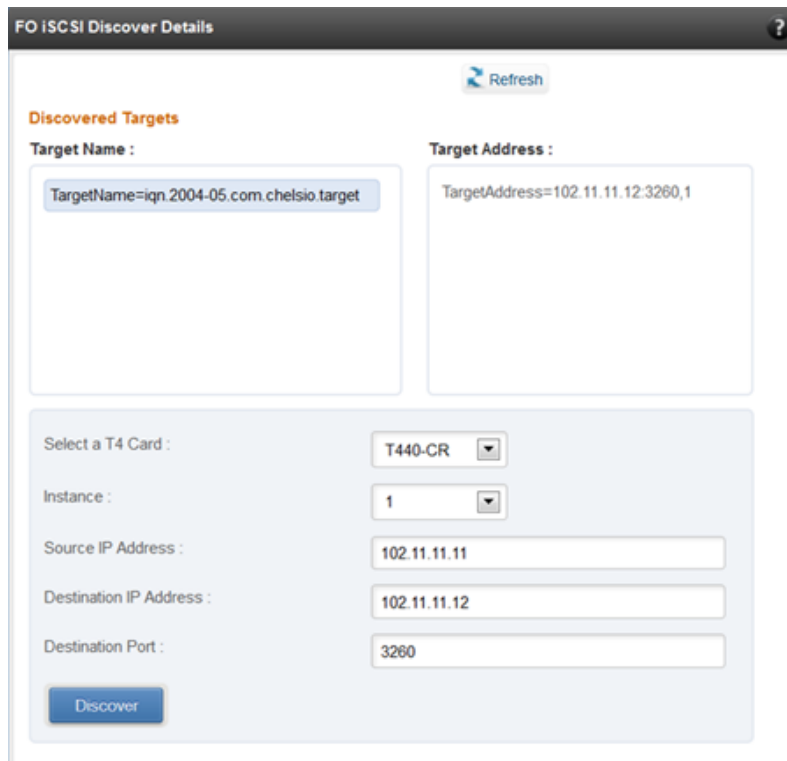


Figure 191 - FO iSCSI Discover Details module

- **FO iSCSI Session Details**

The FO iSCSI Session Details module can be used to log onto targets and view details of established iSCSI sessions. You can also logout from a target

Use the **Login** section to connect to a target. *Adapter, (initiator) instance, Target Name, Source (Initiator) IP, Destination (Target) IP and Destination Port* are mandatory. After providing values for these fields, click **Login**.

By default, no authentication mechanism is used while connecting to a target. You can however configure CHAP for a secure iSCSI connection. **One-way** (target authenticates the initiator) and **Mutual** (target and initiator authenticate each other) authentication methods are supported.

Login

Select a T4 Card :	T440-CR ▼
Instances :	1 ▼
Target Name :	2004-05.com.chelsio.target
Source IP :	102.11.11.11
Destination IP :	102.11.11.12
Destination Port :	3260
Auth Type :	None ▼
Policy :	Select One.. ▼
Target Username :	
Target Secret :	

Login

Figure 192 - FO iSCSI Session Details module: Login

After successful login, details of the established iSCSI session will be displayed under the **Established sessions** section. Select the adapter and session id. Details of the selected session will be displayed. To end the session, click **Logout**.

Established Sessions

Select a T4 Card :	T440-CR ▼
Session Id :	1 ▼
Node Id :	1 ▼
Source IP :	102.11.11.11
Target IP :	102.11.11.12
Target TCP Port :	3260
Target Portal Group Tag :	0
Port :	0
State :	1
Target Name :	iqn.2004-05.com.chelsio.target
Target Alias :	
<input type="button" value="Logout"/>	


Figure 193 - FO iSCSI Session Details module: Established Sessions

8.7.4. iSCSI Target page (Linux)

This page allows to create new Targets and manage them (add/delete portals, add/delete LUNs, add/delete ACLs). It also provides information on Session details. Viewing and modifying Target properties is also available. The modules available on this page are as below:

- **Target Stack Globals**

This module displays various global properties of a currently connected iSCSI target. Authentication priority between CHAP and ACL can be set here.

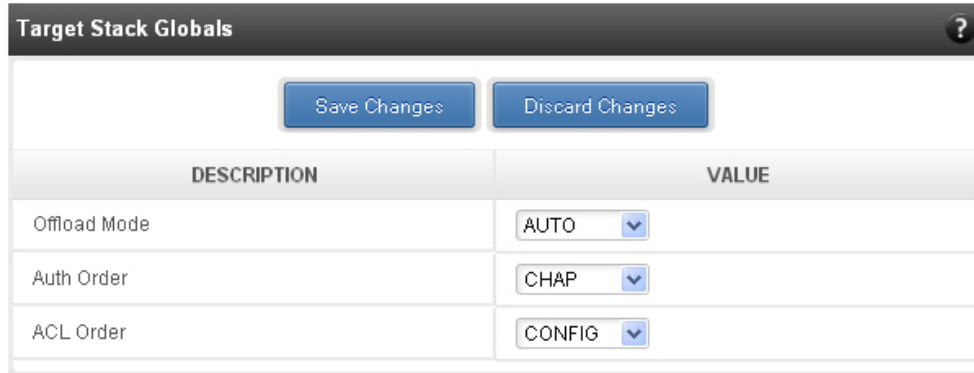

DESCRIPTION	VALUE
Offload Mode	AUTO
Auth Order	CHAP
ACL Order	CONFIG

Figure 194 - Target Stack Globals module

- **Target properties**

Properties such as Target name and Alias, Max Data Receive Length, Authentication mode related to a specific iSCSI target can be viewed and modified here. iSCSI targets can be started/stopped or deleted.

Target Properties ?

iSCSI Targets : iqn.2004-05.com.chelsio.ROTO ▼

Target Status

STARTED

Start
Stop
Delete

Actions

Save Changes
Discard Changes

PROPERTY	VALUE
Target Name	iqn.2004-05.com.chelsio.ROTO
Target Alias	iscsitarget1
Max Receive Data Segment Length (in Bytes)	8192 ▼
Header Digest/Checksum	None,CRC32C ▼
Data Digest/Checksum	None,CRC32C ▼
Send Immediate Data / Unsolicited Data	Yes ▼
Initial Ready To Transmit (InitialR2T)	No ▼
Maximum Outstanding Ready To Transmits (MaxR2T)	1 ▼
Max Connections in a session	4 ▼
Target CHAP	"target_id1":"target_secret1"
Initiator CHAP	"initiator_id1":"initiator_sec1"

Figure 195 - Target properties module

- **Session details**

Details including Session ID, Initiator IQN and Connections List of all discovered and currently connected iSCSI targets are listed here.

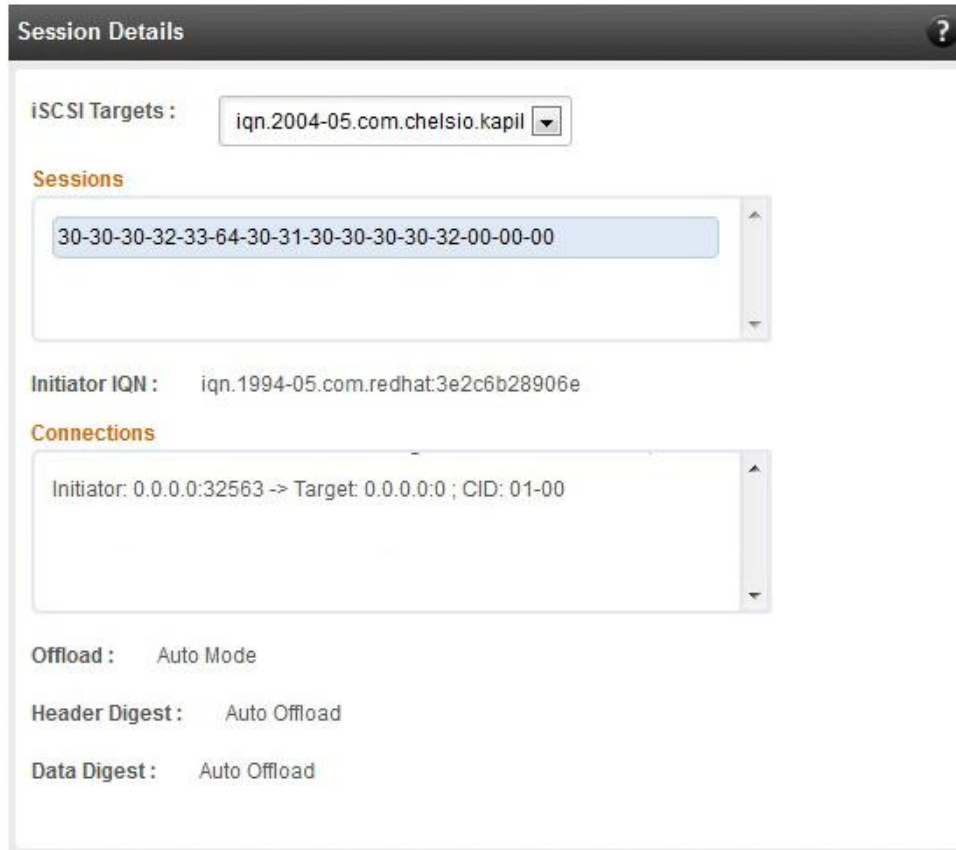


Figure 196 - Session Details module

- **New Target Creation**

New iSCSI target can be created here by specifying the Target IQN and Target Alias name.

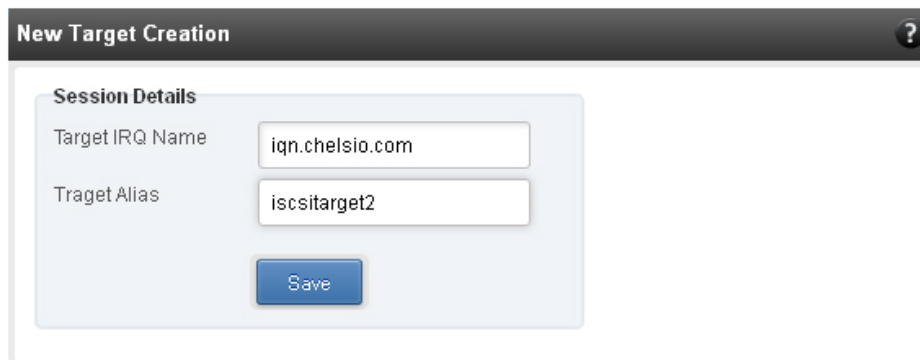


Figure 197 - New Target Creation module

8.7.5. LUNs

Various Logical Units created in an iSCSI Target can be managed here. The modules available on this page are as below:

- **View/Edit iSCSI Target LUNs**

This module displays various Logical Units created in an iSCSI Target. Selected LUNs can be deleted.

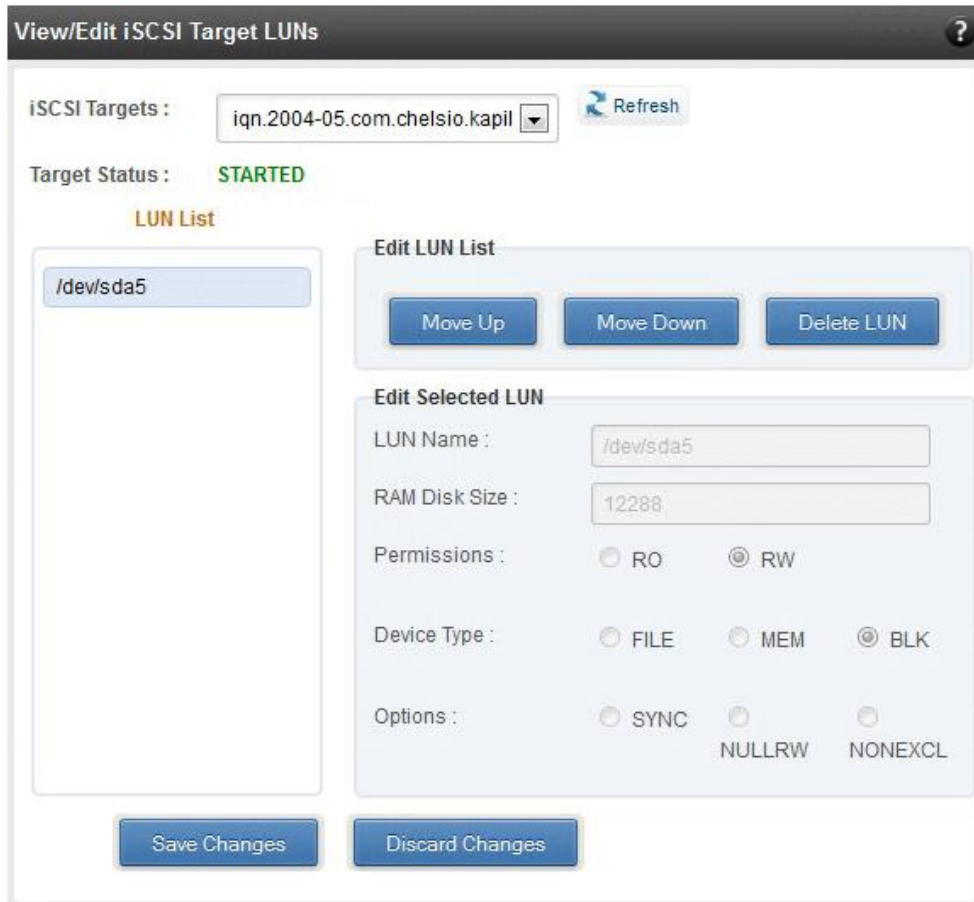


Figure 198 - View/Edit iSCSI Target LUNs module

- **Add LUN**

New LUNs can be added here by providing various parameters like Target Name, Target Device and RAM Disk Size etc. RW (Read-Write) and RO (Read Only) are the two kinds of permissions that can be set. If Ram Disk is selected, then a minimum of 16 MB should be provided.

The screenshot shows a dialog box titled "Add LUN" with a help icon in the top right corner. In the top right of the dialog area, there is a "Refresh" button. The main content area contains the following fields:

- iSCSI Targets :** A dropdown menu with the selected value "iqn.2004-05.com.chelsio.kapil".
- Devices :** A dropdown menu with the selected value "Ram Disk".
- Type :** The text "MEM".
- RAM Disk Size(in MB) :** A text input field containing the value "16".

At the bottom of the dialog, there are two buttons: "Save Lun" and "Discard Changes".

Figure 199 - Adding a new LUN

8.7.6. Portal Groups

Portal details for currently connected iSCSI Targets can be viewed and added here. The modules available on this page are as below:

- **View/Edit iSCSI Target Portals**

Portal List on the left displays details of the portal group on which an iSCSI target is listening and the related info is displayed on the right under Portal Details. Selected portals can be deleted.

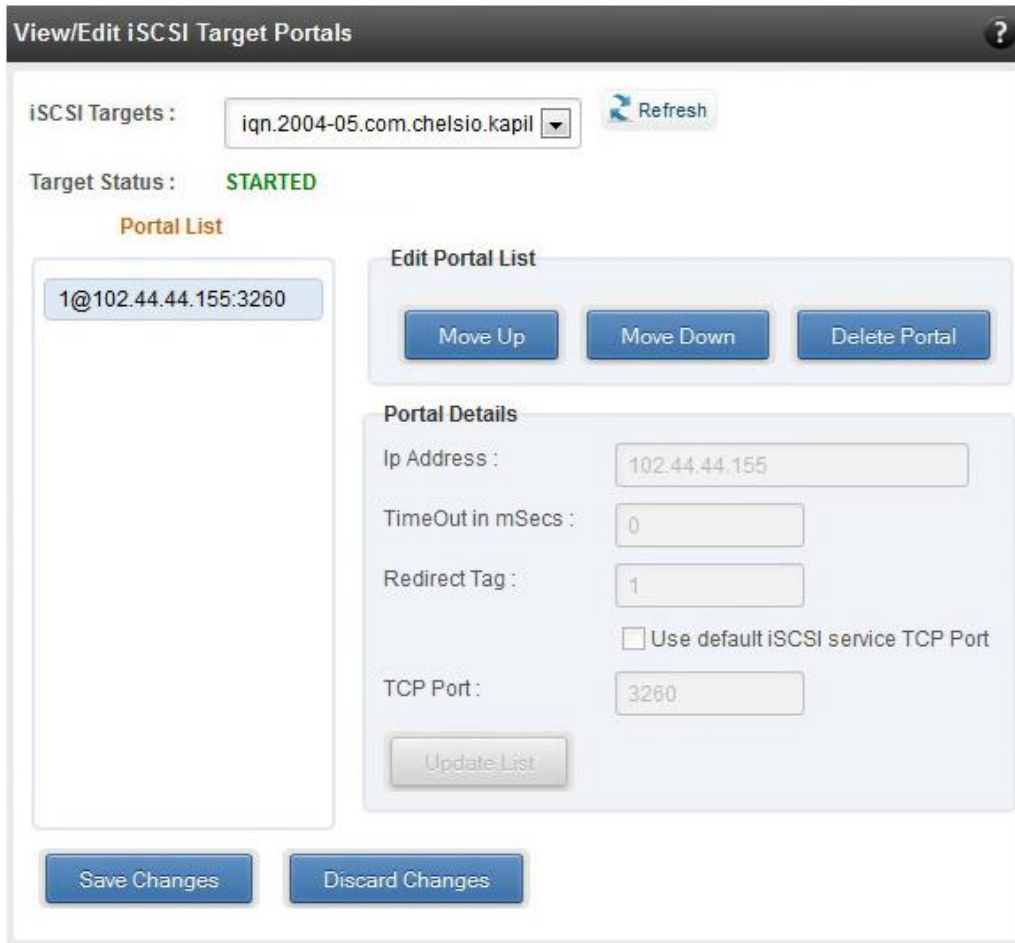


Figure 200 - View/Edit iSCSI Target Portals module

- **Add Portal**

New Portals can be added here by choosing the specific target and Portal IP address. The Port number should be 3260.



Figure 201 - Adding a new Portal

8.7.7. ACLs

ACLs configured for currently connected iSCSI Targets can be managed here. The modules available on this page are as below:

- **View/Edit iSCSI Target ACLs**

This module displays details for all the ACLs configured for an iSCSI Target. Selected ACLs can be deleted.

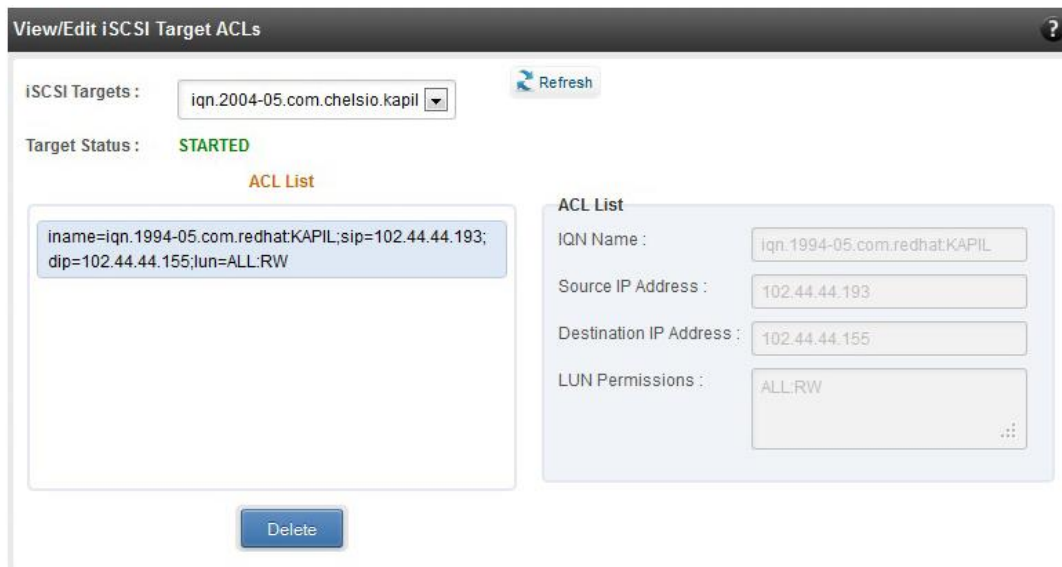


Figure 202 - Target ACL operations module

- **Add ACL**

New ACLs can be configured by specifying Target name, initiator IQN name, IP address and permission type.

The screenshot shows a window titled "Add ACL" with a "Refresh" button in the top right. The main area contains the following fields:

- ISCSI Targets :** A dropdown menu with the selected value "iqn.2004-05.com.chelsio.kapil".
- IQN Name :** A text input field containing "iqn.1994-05.com.redhatKAPIL". Below it is the instruction "Enter Initiator IQN Name".
- Source IP Address :** A text input field containing "102.44.44.193". Below it is the instruction "Enter initiator source IPs separated by commas".
- Destination IP Address :** A text input field containing "102.44.44.155". Below it is the instruction "Enter initiator destination IPs separated by commas".
- LUN Permissions :** A text input field containing "ALL:RW". Below it is the instruction "Enter access permissions for initiator. eg: ALL:RW".

At the bottom of the form are two buttons: "Save Portal" and "Discard Changes".

Figure 203 - Adding new ACL

8.8. Hardware Features

The **Hardware** module lists the status of configuration modules under Hardware Features section, running on the agent.

PROPERTY	VALUE
Boot service on server	Enabled
Filter service on server	Disabled
Traffic mgmt service on server	Disabled

Figure 204 - Hardware module

8.8.1. Filtering (Linux)

Using this page, one can control the traffic from a specific IP. The module available on this page is as below:

- **T3 Filtering configuration**

T3 Filtering options can be set only when offload driver (*t3_tom*) is not loaded.

This module lists the various parameters which can be set while determining filtering options for a system IP. You can set the maximum number of filters and also add/delete filters. A filter with default values (the **Action** field set to **pass**; the **Protocol** field set to **any**) is created at the time of configuring the filtering module. To remove the default filter, enter 0 in the **Set Maximum Filters** field and click on **Set Filters**. The fields **IfName** and **FilterId** are mandatory. The **Action** field is set to **pass** and the **Protocol** field is set to **any** by default. Other possible values for the **Protocol** field are **tcp**, **udp** and **frag**. The **Priority** field can be used to determine the priority of a filter when Vlan ids are same. **Insert at position** features allows user to add a filter at a specified position.

FILTERID	SRCIP	DESTIP	SRCPORT	DESTPORT	VLAN	PRIORITY	MACIDX	ACTION	PROTO	QUEUE
10	0.0.0.0/0	0.0.0.0	0	0	0	0	0	Pass	Any	0

Figure 205 - T3 Filtering Configuration module



Note

Results for actions like adding a new filter or setting maximum filters make some time to reflect. Highlight the system item in the tree menu on the left, and click "Refresh system", to refresh data from the system, in case the updated settings are not being shown.

• T4 Filtering configuration

T4 Filtering options can be set only when offload driver (*t4_tom*) is not loaded.

A list of pre-defined filter selection combinations is displayed. The combination *fragmentation, mpshittype, protocol, vlan, port, fcoe* is active by default. To select a different combination, highlight it in the **Combinations** list by clicking and click “Set Active Combination”.

You can create filter rules for any combination in the list. However, filter rule created only for the Active Combination will apply. To create a new rule, select a combination and click “Add a filter rule”. The **FILTERID** and **T4 CARD** fields are mandatory. After providing appropriate values for the parameters click “Save Changes”.



Note For a detailed explanation regarding different fields, please refer *cxgbtool* manual by running `man cxgbtool` command on Management Agent CLI.

T4 Filtering Configuration

Refresh

Active Combination : fragmentation, mpshittype, macmatch, vlan, port, fcoe

Combinations

- fragmentation, mpshittype, ethertype, protocol, tos
- ethertype, vlan, port
- fragmentation, mpshittype, macmatch, vlan, port, fcoe - Active Combination
- fragmentation, mpshittype, macmatch, protocol, tos, port, fcoe
- fragmentation, mpshittype, macmatch, ethertype, port, fcoe
- fragmentation, mpshittype, macmatch, vnic_id, port, fcoe
- fragmentation, mpshittype, ethertype, protocol, port, fcoe

FILTERID	T4 CARD	FRAGMENTATION	MPSHITTYPE	MACMATCH	VLAN	PORT	FCOE
7	T420-SO-CR	1	1	005	0000	0	0

Set Active Combination Save Changes Discard Changes Add a Filter row Delete a Filter

Figure 206 - T4 Filtering Configuration module

8.8.2. Traffic Management (Linux)

Using this page, one can add/delete/modify offload policies only in the presence of offload driver (*t3_tom* for T3 adapters; *t4_tom* for T4 adapters).

8.8.3. Traffic Management configuration

The **Chelsio Card** section on the left displays all the cards available in the server and their corresponding policies on the right. Policies can be added and deleted. Policy Details displays the primitives (maximum 8) and actions which can be modified. For more details on creating policies, please refer to COP man pages.

Figure 207 - Traffic Management Configuration module

8.8.4. Boot

- **T4 Save Config File (Linux)**

This module displays the current T4 configuration tuning option selected. You can also change the tuning option by selecting the config file for each option located in `/ChelsioUwire-x.x.x.xx/src/network/firmware`. For instance, to select *Low latency Networking*, locate the file, `t4-config.txt`, in `/ChelsioUwire-x.x.x.xx/src/network/firmware/low_latency_config` directory.

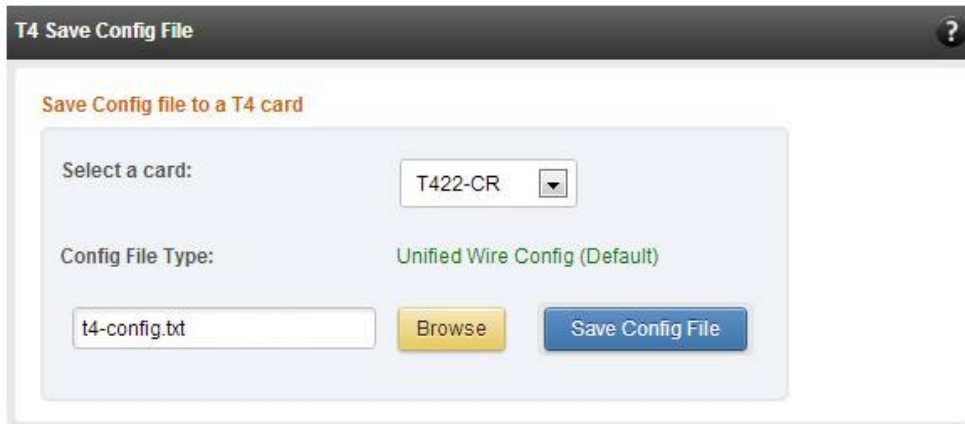


Figure 208 - T4 Save Config File module

8.8.5. T3 iSCSI / T3 PXE Boot Option Rom Management (Linux)

The Chelsio T3 card may be used for PXE or iSCSI boot. This module allows managing the boot capability. The Option ROM (PXE/iSCSI) may be installed to the card, or erased from the card. iSCSI boot Option ROM settings can be configured for the card here. Enable the iSCSI Option ROM only if you are planning to boot the system via iSCSI. Refer the iSCSI boot documentation for more details about its configuration.

T3 iSCSI / T3 PXE Boot Option Rom Management ?

Select a card: S320E-SR-X ▼

Option ROM Status - iSCSI option rom is installed [2.0 build 202] & iSCSI option rom settings are valid.

Write iSCSI or PXE Option ROM to the card

Browse

Write Option ROM

Erase iSCSI or PXE Option ROM or Settings

Erase Option ROM
Erase iSCSI boot settings

Save Changes
Discard Changes

DESCRIPTION	VALUE
Card is enabled for iSCSI boot	No ▼
Chelsio OS initiator is used for boot	No ▼
Boot initiator IQN name	<input style="width: 100%; height: 20px; border: 1px solid #ccc;" type="text"/>
Prefer header digests if available	No ▼
Prefer data digests if available	No ▼
CHAP authentication Policy	none ▼
Initiator's CHAP username	
Initiator's CHAP secret	

Figure 209 - Option ROM management module for a T3 card

8.8.6. T5/T4 Boot Option ROM management

This module allows managing the PXE and FCoE boot capability for Chelsio T5 and T4 cards. The Option ROM (PXE and FCoE) may be installed to or erased from the card. The version of Option ROM flashed can be viewed here.

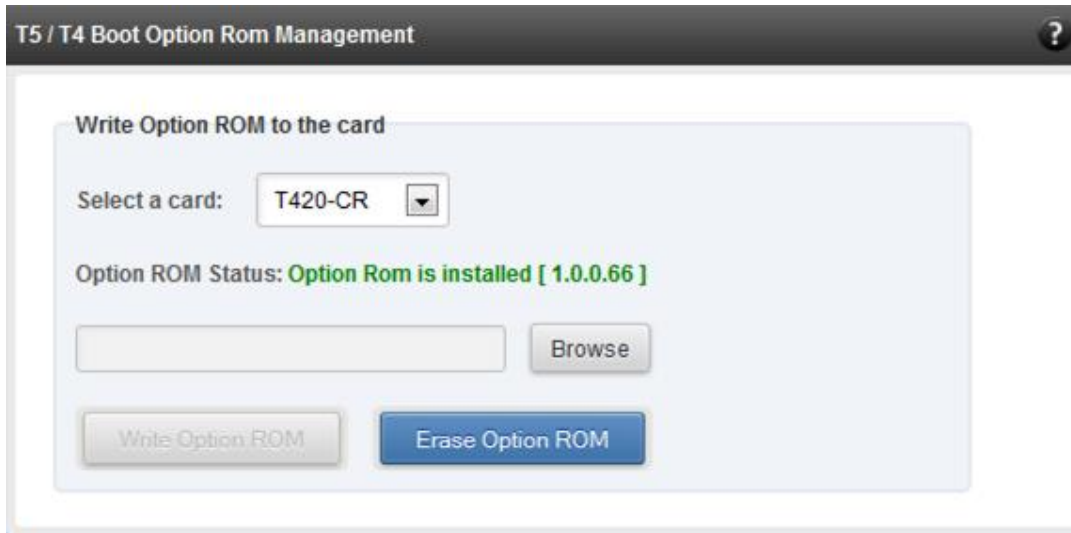



Figure 210 - T5/T4 Option ROM Management module

8.8.7. T5/T4 Boot Configuration

This module can be used to view and configure PXE and FCoE Option ROM settings for Chelsio T5 and T4 cards.

PXE physical functions and order of ports for PXE boot can be selected here. The same module can be used to configure FCoE Option ROM. Here port order for target discovery and discovery timeout can be set. Under the Boot section, LUN can be configured as boot device from the discovered FCoE targets.

Enable the Option ROM only if you are planning to boot the system via PXE or install the operating system on FCoE LUN.

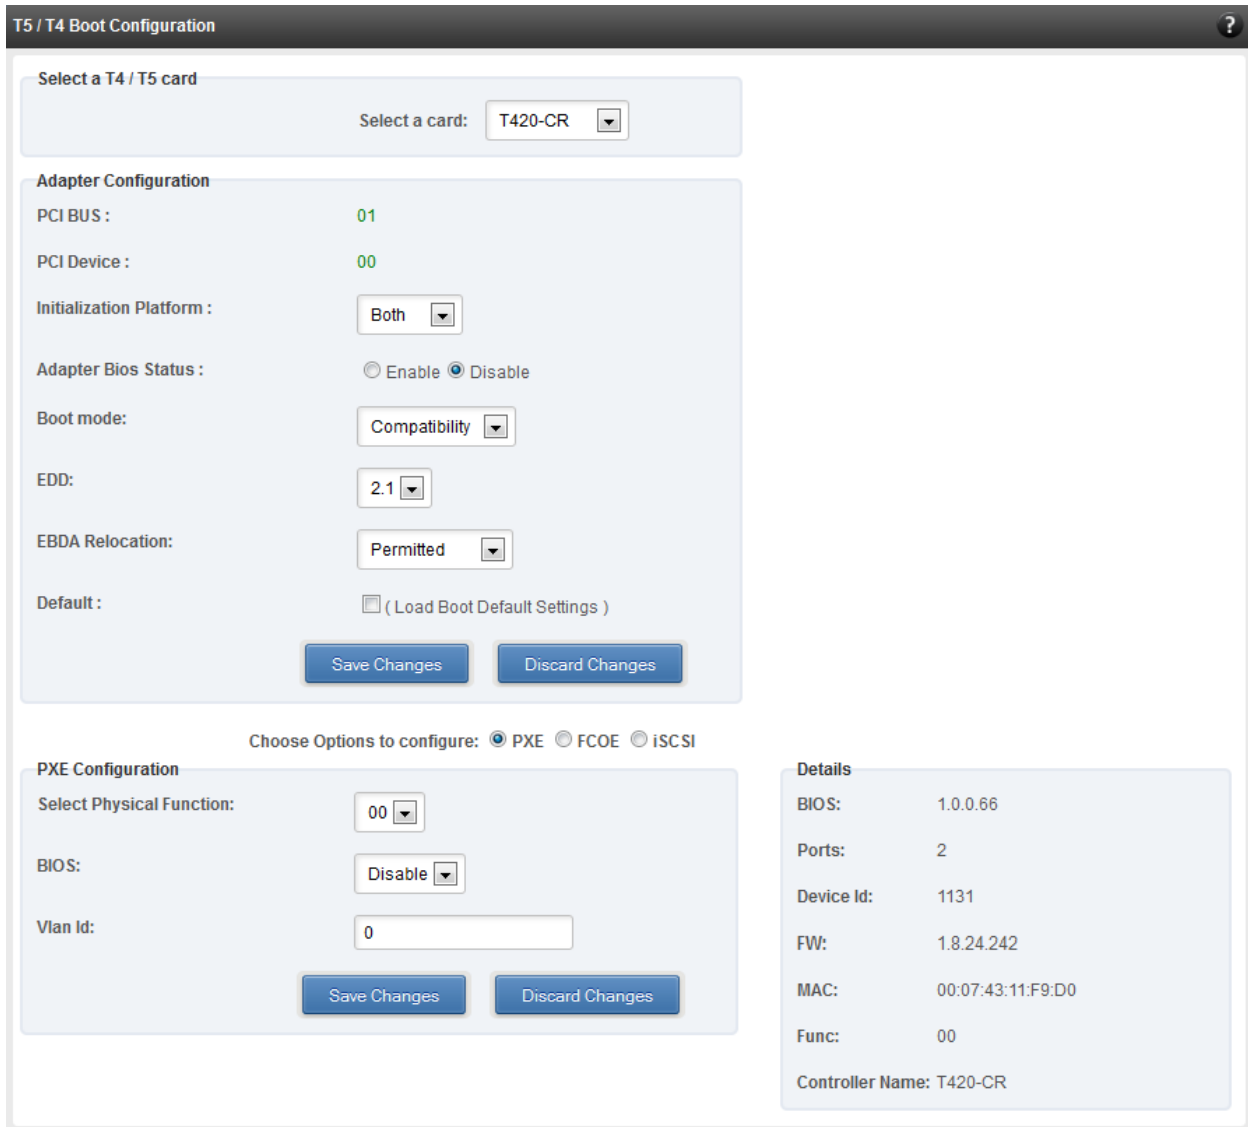

T5 / T4 Boot Configuration

Select a T4 / T5 card

Select a card: T420-CR

Adapter Configuration

PCI BUS : 01

PCI Device : 00

Initialization Platform : Both

Adapter Bios Status : Enable Disable

Boot mode: Compatibility

EDD: 2.1

EBDA Relocation: Permitted

Default : (Load Boot Default Settings)

Save Changes Discard Changes

Choose Options to configure: PXE FCOE iSCSI

PXE Configuration

Select Physical Function: 00

BIOS: Disable

Vlan Id: 0

Save Changes Discard Changes

Details

BIOS: 1.0.0.66

Ports: 2

Device Id: 1131

FW: 1.8.24.242

MAC: 00:07:43:11:F9:D0

Func: 00

Controller Name: T420-CR

Figure 211 - PXE Boot configuration for T4 CNAs

Choose Options to configure: PXE FCOE iSCSI

FCoE Configuration

Choose Paramter Type : Function Boot Show WWPN

BIOS : Enable Disable

Port Order :

Discovery Time Out :

Figure 212 - FCoE Boot configuration for T4 CNAs

Choose Options to configure: PXE FCOE iSCSI

iSCSI Configuration

Choose Paramter Type : Function Initiator Network Boot Devices

BIOS :

Port Order :

Discovery Time Out :

CHAP Method:

Figure 213 - iSCSI Boot configuration for T4 CNAs


8.8.8. Bypass (Linux)

You can use the **Bypass** page to configure various settings for Chelsio's bypass adapters like setting bypass operation mode, creating rules (filters), starting/stopping BA server, etc. There are two modules available: **Bypass Configuration** and **Redirect Configuration**.

- **Bypass Configuration**

In the **Bypass Configuration** module, you can view the status and start/stop the BA server accordingly. The adapter will redirect packets using the mode specified in the **Default bypass mode** field unless otherwise specified in the **Current bypass mode**.

The **Watchdog** timer is used to ensure that if there is a software failure, the switch will enter the default state. The **Watchdog timeout** value should be provided in milliseconds.

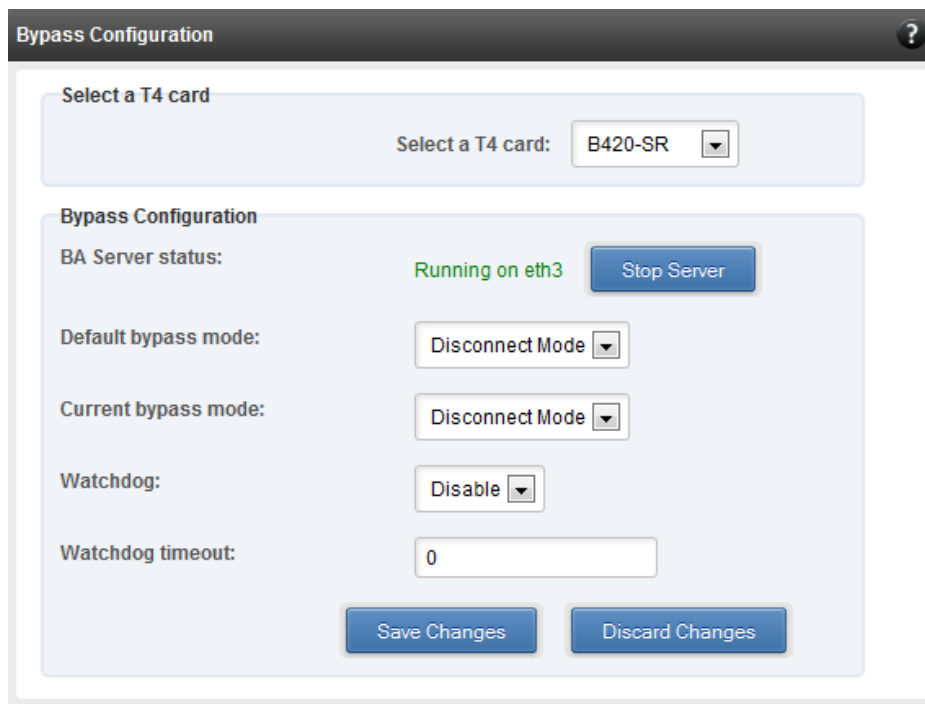

The screenshot shows the 'Bypass Configuration' window. At the top, there is a header 'Bypass Configuration' with a help icon. Below it, a section titled 'Select a T4 card' contains a dropdown menu with 'B420-SR' selected. The main configuration area is titled 'Bypass Configuration' and includes: 'BA Server status: Running on eth3' with a 'Stop Server' button; 'Default bypass mode: Disconnect Mode' with a dropdown; 'Current bypass mode: Disconnect Mode' with a dropdown; 'Watchdog: Disable' with a dropdown; and 'Watchdog timeout: 0' with a text input field. At the bottom, there are 'Save Changes' and 'Discard Changes' buttons.

Figure 214 - Bypass Configuration module

• Redirect Configuration

In the **Redirect Configuration** module, you can set **rules** (filters), based on which the bypass adapter will redirect packets. You can group **rules** into **tables**. You can save the currently configured tables and rules for a bypass adapter into a shell script using the **Download Configuration** button.

The **Table Configuration** tab displays BA server status and the number of tables created. You can create new tables or perform various actions on the existing ones.

- **Delete table:** Delete the selected table and all the rules present in it.
- **Purge table:** Delete all the rules present in the selected table. This action will not delete the table.
- **Activate table:** Enable the selected table.
- **Deactivate table:** Disable the selected table.
- **Create table:** Create a new table. The new table created will be inactive by default. Use the **Activate table** option to enable it. You can create upto 5 tables.

In the **Rules Configuration** tab, you can add, delete and configure rules. Use the **Add a Filter row** button to add a new rule by specifying the rule id in the *INDEX* field and providing the required parameters. Finally, click **Save Changes**.

To edit an existing rule, select the corresponding checkbox, change the desired parameters and click **Save Changes**.

To delete a rule, select the corresponding checkbox and click **Delete a Filter**. Finally, click **Save Changes**. You can delete multiple rules using this method.

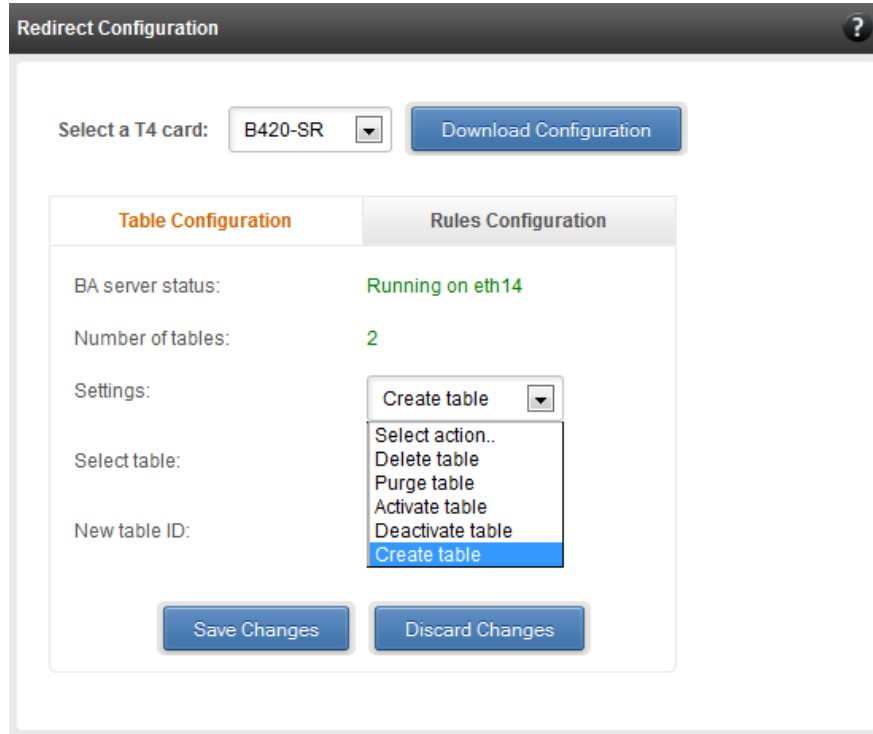


Figure 215 - Redirect Configuration module: Table configuration tab

Redirect Configuration ?

Select a T4 card: B420-SR Download Configuration

Table Configuration
Rules Configuration

Select a table: Table 1 (active)

INDEX	ACTION	PORT	IPV6	PROTOCOL	SOURCE ADDRESS	SO
<input type="checkbox"/> 1	drop	0	disable	udp	102.22.22.155	255.25
<input type="checkbox"/> 2	forward	0	disable	udp	102.22.22.155	255.25
<input type="checkbox"/> 3	input	0	disable	udp	102.22.22.155	255.25
<input type="checkbox"/> 4	drop	0	disable	tcp	102.22.22.155	255.25
<input type="checkbox"/> 5	forward	0	disable	tcp	102.22.22.155	255.25
<input type="checkbox"/> 6	input	0	disable	tcp	102.22.22.155	255.25
<input type="checkbox"/> 7	forward	0	disable	icmp		
<input type="checkbox"/> 8	drop	0	disable	icmp		
<input type="checkbox"/> 9	input	0	disable	icmp		

Save Changes
Discard Changes
Add a Filter row
Delete a Filter

Figure 216 - Redirect Configuration module: Rules configuration tab

8.8.9. T4 Egress Class Schedulers (Linux)

Schedulers can be set only when T5/T4 network driver (*cxgb4*) is loaded.

- **Egress Queue Map**

Using this module, you can bind (map) NIC (non-offloaded) Tx queues to Tx Scheduler classes.

INTERFACE NAME	CLASS ID	TX QUEUE ID	ACTION
eth13	0	0	Map

Interface Name : eth12 >> Class Id : 2 >> Tx Queue Id : 1

Figure 217 - Egress Queue Map module

- **Egress Packet Scheduler**

Using this module you can configure different scheduler hierarchy levels (i.e. Class Rate Limiting, Class Weighted Round Robin and Channel Rate Limiting). Based on the parameters specified, different scheduler levels can be configured.

SCHEDULER	CHANNEL ID	INTERFACE	MODE	RATE MODE	RATE UNIT	MIN RATE	MAX RATE	PACKET SIZE	WEIGHT
0	1	eth12	Flow	Absolute	Bits (in kbps)	0	9000	0	-

Add New Rule Save Changes Discard Changes

Figure 218 - Egress Packet Scheduler module

9. Uninstallation

This section describes the procedure to uninstall UM. For both installer and zip package, the application will have to be uninstalled manually.

- i. For Installer, open **Programs and Features** in the **Control Panel**. Double click on *UnifiedWireManager*.

For zip packages, you can use the **Control Panel** as described above or run the **UnifiedWireManager-x.x.xx-x64** installer application located in *ChelsioUwire-x.x.x.xx/UM* folder.

- ii. Select **Modify** to add or remove features or **Remove** to uninstall the application.

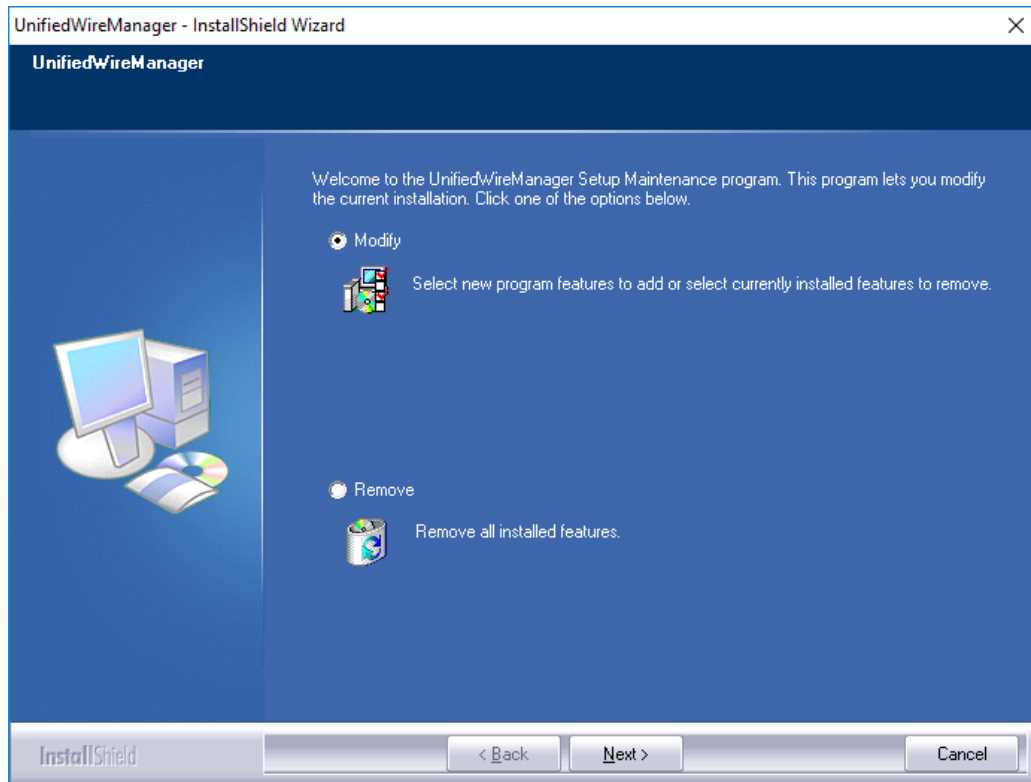


Figure 219 - Selecting maintenance option

- a. If you select **Modify**, you can select the UM component you want to uninstall by deselecting the appropriate checkbox. To install a component that was skipped during installation, select the corresponding checkbox. Click **Next**.

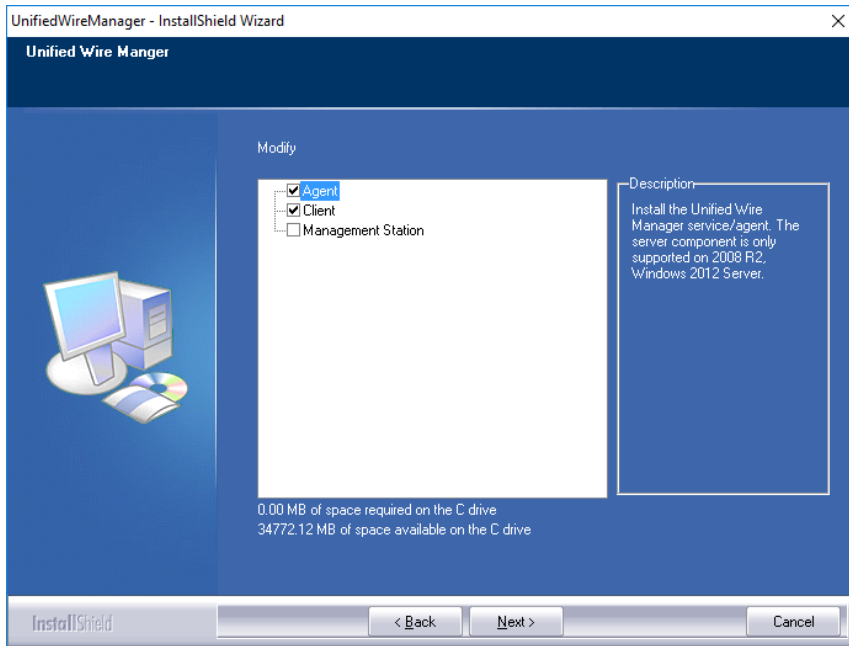


Figure 220 - Modifying UM components

- b. If you select **Remove**, you can uninstall the application completely. Click **Next** and then **Yes** to confirm.

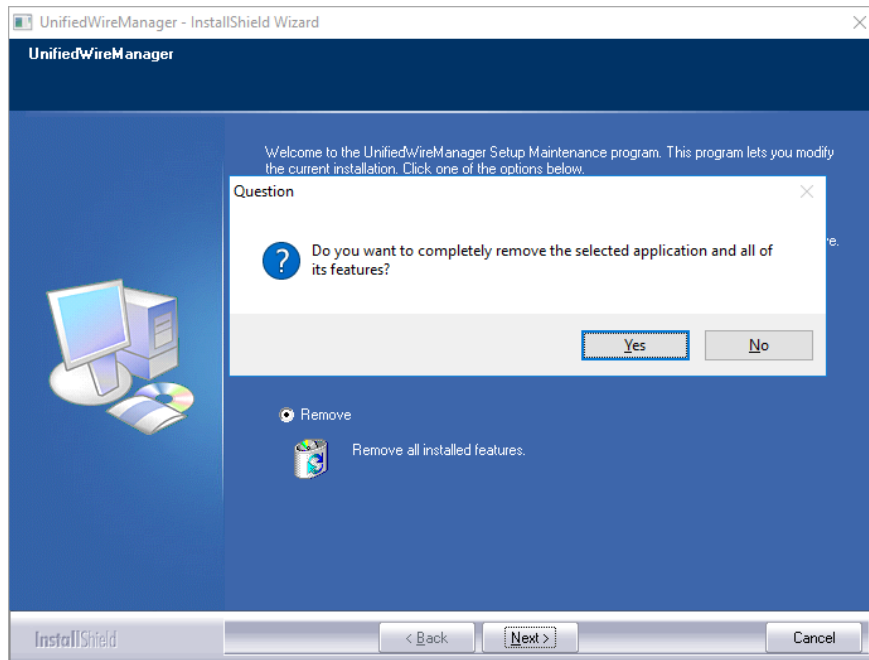


Figure 221 - Uninstalling UM

- iii. Click the **Finish** button to exit from the installer.

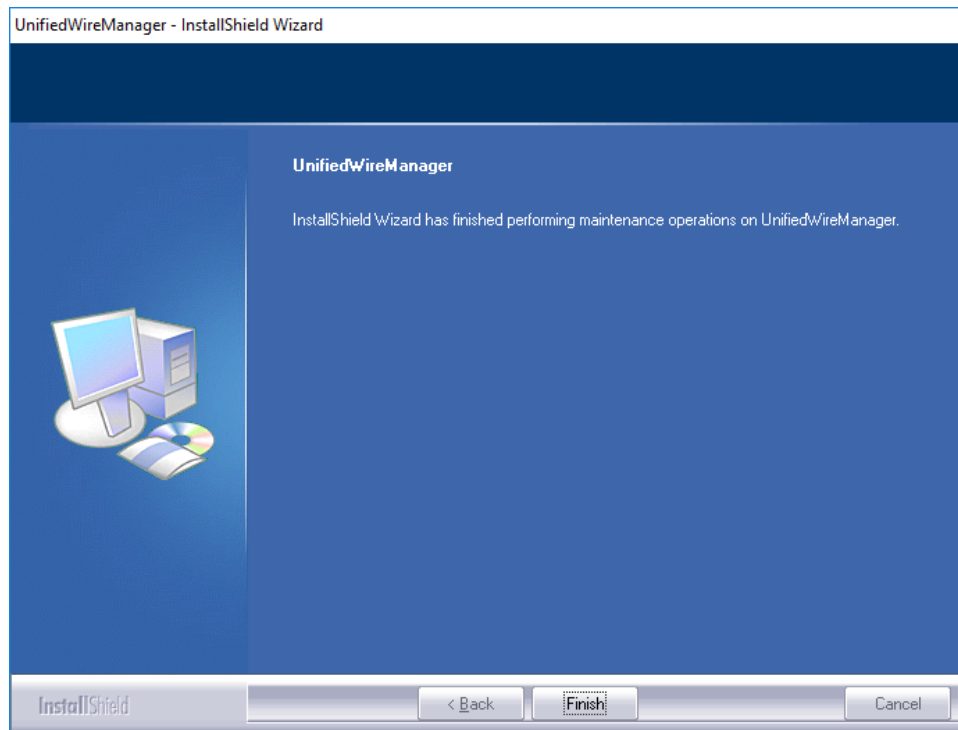


Figure 222 - Finishing uninstallation

IX. UM for Win PE


1. Introduction

Chelsio **UM for Win PE** is a light-weight management tool developed for Windows PE (Windows Preinstallation Environment) platform and provides features to view and configure different aspects of the system, including Chelsio adapter installed.

The tool provides command-line options to view system related information like list of drivers installed, Chelsio adapters present, etc. You can also view and configure Chelsio adapter settings like card and port properties, flash and erase option ROM, etc. To view the complete list of commands available, invoke the help by typing `chelsio_uwlite.exe` in the command prompt.

The tool is copied to `<system_drive>\ChelsioUwire\docs\` during Unified Wire installation. In order to use the tool, you will have to add it to boot image when creating bootable Windows PE media.

For more information, visit the following link: <http://technet.microsoft.com/en-us/library/cc749312%28v=ws.10%29.aspx>

 **Note** *Only local systems can be managed currently using this tool.*

1.1. Hardware Requirements

1.1.1. Supported Adapters

The following are the currently shipping Chelsio adapters that are compatible with Chelsio UM for Win PE:

- T580-CR
- T580-LP-CR
- T580-SO-CR
- T540-CR
- T520-CR
- T520-LL-CR
- T520-SO-CR
- T440-CR
- T440-LP-CR
- T420-CR
- T422-CR
- T420-LL-CR
- T420-CX
- T420-BT
- T404-BT

1.2. Software Requirements

1.2.1. Windows Requirement

Currently Chelsio UM for Win PE is available for the following Windows version(s):

- Server 2012 R2

Other versions have not been tested and are not guaranteed to work.

1.3. Examples

1.3.1. Viewing help

- Run the following command to view the list of commands available under a service.

```
X:\windows\system32>chelsio_uwlite.exe <service-name>
```

E.g.

To view commands available under the *chelsio* service:

```
X:\windows\system32>chelsio_uwlite.exe Chelsio
```

```
X:\windows\system32>chelsio_uwlite.exe chelsio
-----Usage-----
chelsio_uwlite <Service-Name>
                [StackName] <Command> [SubCommand] [Arguments]
Where
  Service-Name      : SYSTEM!CHELSIO
  Command           : A command supported by the service
                    : (see service help for a list of commands)
  Arguments         : Arguments expected by the command
                    : (see command help for more details)
Note:
  All arguments should be in the <key=value> format
  eg: <ip=192.168.1.1>
  Required parameters are enclosed within <> brackets
  Optional parameters are enclosed within [] brackets
Service:
  CHELSIO
Commands
-----
  ListAdapters
  ListAdapterProps
  ListPorts
  GetCardStats
  GetPortStats
  SetCardProperty
  SetPortProperty
  GetProperty
  SetProperty
  FlashRom
  EraseRom
  EraseSettings
  Defaultconfig
```

Figure 223 – ‘chelsio’ service commands syntax and usage

- Run the following command to view syntax and usage for a sub-command:

```
X:\windows\system32>chelsio_uwlite.exe chelsio <sub-command> /?
```

E.g. To view syntax and usage of *EraseSettings* sub-command under *chelsio* service:

```
X:\windows\system32>chelsio_uwlite.exe chelsio erasesettings /?
```

```
X:\windows\system32>chelsio_uwlite.exe chelsio erasesettings /?
This command not supported
-----Usage-----
chelsio_uwlite <Service-Name>
                [StackName] <Command> [SubCommand] [Arguments]
Where
  Service-Name      : SYSTEM!CHELSIO
  Command           : A command supported by the service
                    : (see service help for a list of commands)
  Arguments         : Arguments expected by the command
                    : (see command help for more details)
Note:
  All arguments should be in the <key=value> format
  eg: <ip=192.168.1.1>
  Required parameters are enclosed within <> brackets
  Optional parameters are enclosed within [] brackets
Service:
  CHELSIO
Note:
  <adapter=adapter index> is the Adapter # obtained from the ListAdapters command
chelsio_uwlite
  Chelsio
  EraseSettings
  <adapter=adapter index>
  <force=Boolean>
```

Figure 224 - 'EraseSettings' sub-command syntax and usage

1.3.2. Flashing Option ROM

- Run the following command to list all Chelsio CNAs present in the system. The list displays a unique index for each CNA found.

```
X:\windows\system32>chelsio_uwlite.exe chelsio listadapters
```

```
X:\windows\system32>chelsio_uwlite.exe chelsio listadapters

Adapter information:
Adapter #           : 0
Model              : T440-CR
Serial Number      : PT04111342
PCI Vendor ID:Device ID : 1425:1133
PCI Location       : 02:00:04
Factory MAC address : 00:07:43:AB:CD:EF
Connector         : 10G BP4_AP
PHY               : No Phy / No information Available
OPROM             : Not Present
```

Figure 225 - Listing Chelsio Adapters

- ii. Now, run the following command to flash option ROM onto the adapter:

```
X:\windows\system32>chelsio_uwlite.exe chelsio flashrom adapter=<idx>
path=<option_rom_image>
```

Here, `idx` is the CNA index found in step i (0 in this case) and `option_rom_image` is the path to Option ROM image file, `cuwlb4.bin`

```
X:\windows\system32>chelsio_uwlite.exe chelsio flashrom adapter=0 path=cuwlbt4.bin
Flashing the Option ROM...

Success: Boot operation completed successfully
```

Figure 226 - Flashing option ROM

1.3.3. Erasing Option ROM

- i. Run the following command to list all Chelsio CNAs present on the system. The list displays a unique index for each CNA found.

```
X:\windows\system32>chelsio_uwlite.exe chelsio listadapters
```

```
X:\windows\system32>chelsio_uwlite.exe chelsio listadapters

Adapter information:
Adapter #           : 0
Model              : T440-CR
Serial Number      : PT04111342
PCI Vendor ID:Device ID : 1425:1133
PCI Location       : 02:00:04
Factory MAC address : 00:07:43:AB:CD:EF
Connector         : 10G BP4_AP
PHY               : No Phy / No information Available
OPROM             : Present
Bios Version       : 1.0.3.57
```

Figure 227 - Listing Chelsio Adapters

ii. Now, run the following command to erase option ROM from the adapter:

```
X:\windows\system32>chelsio_uwlite.exe chelsio eraserom adapter=0 force=1
```

Here, `idx` is the CNA index found in step i (0 in this case)

```
X:\windows\system32>chelsio_uwlite.exe chelsio eraserom adapter=0 force=1
Erasing the Option ROM...
Success: Boot operation completed successfully
```

Figure 228 - Erasing option ROM

X. Appendix

Chelsio End-User License Agreement (EULA)

Installation and use of the driver/software implies acceptance of the terms in the Chelsio End-User License Agreement (EULA).

IMPORTANT: PLEASE READ THIS SOFTWARE LICENSE CAREFULLY BEFORE DOWNLOADING OR OTHERWISE USING THE SOFTWARE OR ANY ASSOCIATED DOCUMENTATION OR OTHER MATERIALS (COLLECTIVELY, THE "SOFTWARE"). BY CLICKING ON THE "OK" OR "ACCEPT" BUTTON YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, CLICK THE "DO NOT ACCEPT" BUTTON TO TERMINATE THE INSTALLATION PROCESS.

1. License. Chelsio Communications, Inc. ("Chelsio") hereby grants you, the Licensee, and you hereby accept, a limited, non-exclusive, non-transferable license to install and use the Software with one or more Chelsio network adapters on a single server computer for use in communicating with one or more other computers over a network. You may also make one copy of the Software in machine readable form solely for back-up purposes, provided you reproduce Chelsio's copyright notice and any proprietary legends included with the Software or as otherwise required by Chelsio.

2. Restrictions. This license granted hereunder does not constitute a sale of the Software or any copy thereof. Except as expressly permitted under this Agreement, you may not:

(i) reproduce, modify, adapt, translate, rent, lease, loan, resell, distribute, or create derivative works of or based upon, the Software or any part thereof; or

(ii) make available the Software, or any portion thereof, in any form, on the Internet. The Software contains trade secrets and, in order to protect them, you may not decompile, reverse engineer, disassemble, or otherwise reduce the Software to a human-perceivable form. You assume full responsibility for the use of the Software and agree to use the Software legally and responsibly.

3. Ownership of Software. As Licensee, you own only the media upon which the Software is recorded or fixed, but Chelsio retains all right, title and interest in and to the Software and all subsequent copies of the Software, regardless of the form or media in or on which the Software may be embedded.

4. Confidentiality. You agree to maintain the Software in confidence and not to disclose the Software, or any information or materials related thereto, to any third party without the express written consent of Chelsio. You further agree to take all reasonable precautions to limit access of the Software only to those of your employees who reasonably require such access to perform their employment obligations and who are bound by confidentiality agreements with you.

5. Term. This license is effective in perpetuity, unless terminated earlier. You may terminate the license at any time by destroying the Software (including the related documentation), together with all copies or modifications in any form. Chelsio may terminate this license, and this license shall be deemed to have automatically terminated, if you fail to comply with any term or condition of this Agreement. Upon any termination, including termination by you, you must destroy the Software (including the related documentation), together with all copies or modifications in any form.

6. Limited Warranty. If Chelsio furnishes the Software to you on media, Chelsio warrants only that the media upon which the Software is furnished will be free from defects in

material or workmanship under normal use and service for a period of thirty (30) days from the date of delivery to you.

CHELSIO DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR ANY PART THEREOF. EXCEPT FOR THE FOREGOING LIMITED WARRANTY, CHELSIO MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, AND HEREBY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, NON-INFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty may last, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

7. Remedy for Breach of Warranty. The sole and exclusive liability of Chelsio and its distributors, and your sole and exclusive remedy, for a breach of the above warranty, shall be the replacement of any media furnished by Chelsio not meeting the above limited warranty and which is returned to Chelsio. If Chelsio or its distributor is unable to deliver replacement media which is free from defects in materials or workmanship, you may terminate this Agreement by returning the Software.

8. Limitation of Liability. IN NO EVENT SHALL CHELSIO HAVE ANY LIABILITY TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, HOWEVER CAUSED, AND ON ANY THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE LICENSE OR USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR LOSS OF ANTICIPATED PROFITS, EVEN IF CHELSIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL CHELSIO'S LIABILITY ARISING OUT OF OR RELATED TO THE LICENSE OR USE OF THE SOFTWARE EXCEED THE AMOUNTS PAID BY YOU FOR THE LICENSE GRANTED HEREUNDER. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

9. High Risk Activities. The Software is not fault-tolerant and is not designed, manufactured or intended for use or resale as online equipment control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Software could lead directly to death, personal injury, or severe physical or environmental damage. Chelsio specifically disclaims any express or implied warranty of fitness for any high risk uses listed above.

10. Export. You acknowledge that the Software is of U.S. origin and subject to U.S. export jurisdiction. You acknowledge that the laws and regulations of the United States and other countries may restrict the export and re-export of the Software. You agree that you will not export or re-export the Software or documentation in any form in violation of applicable United States and foreign law. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S.

Export Administration Regulations, as well as end-user, end-use, and destination restrictions issued by U.S. and other governments.

11. Government Restricted Rights. The Software is subject to restricted rights as follows. If the Software is acquired under the terms of a GSA contract: use, reproduction or disclosure is subject to the restrictions set forth in the applicable ADP Schedule contract. If the Software is acquired under the terms of a DoD or civilian agency contract, use, duplication or disclosure by the Government is subject to the restrictions of this Agreement in accordance with 48 C.F.R. 12.212 of the Federal

Acquisition Regulations and its successors and 49 C.F.R. 227.7202-1 of the DoD FAR Supplement and its successors.

12. General. You acknowledge that you have read this Agreement, understand it, and that by using the Software you agree to be bound by its terms and conditions. You further agree that it is the complete and exclusive statement of the agreement between Chelsio and you, and supersedes any proposal or prior agreement, oral or written, and any other communication between Chelsio and you relating to the subject matter of this Agreement. No additional or any different terms will be enforceable against Chelsio unless Chelsio gives its express consent, including an express waiver of the terms of this Agreement, in writing signed by an officer of Chelsio. This Agreement shall be governed by California law, except as to copyright matters, which are covered by Federal law. You hereby irrevocably submit to the personal jurisdiction of, and irrevocably waive objection to the laying of venue (including a waiver of any argument of forum non conveniens or other principles of like effect) in, the state and federal courts located in Santa Clara County, California, for the purposes of any litigation undertaken in connection with this Agreement. Should any provision of this Agreement be declared unenforceable in any jurisdiction, then such provision shall be deemed severable from this Agreement and shall not affect the remainder hereof. All rights in the Software not specifically granted in this Agreement are reserved by Chelsio. You may not assign or transfer this Agreement (by merger, operation of law or in any other manner) without the prior written consent of Chelsio and any attempt to do so without such consent shall be void and shall constitute a material breach of this Agreement.

Should you have any questions concerning this Agreement, you may contact Chelsio by writing to:

Chelsio Communications, Inc.
209 North Fair Oaks Avenue,
Sunnyvale, CA 94085
U.S.A